


## WIRELESS REMOTE CONTROL\*

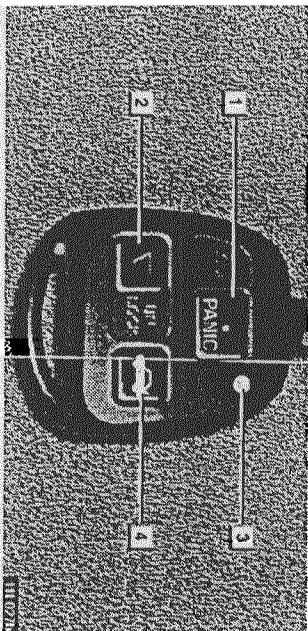

- 1 Locking the doors and sounding an alarm
- 2 Unlocking the doors
- 3 Indicator light
- 4 Unlocking the trunk lid

**NOTE:** \*This feature can be set inoperative as vehicle theft deterrent measure in case of the loss of the wireless remote control key. Ask your Lexus dealer for details.

When you operate any button on the key, push it slowly and surely.

The operational range of the wireless remote control is approximately 1 meter (3 ft.). The effective range may vary with different conditions. To activate the wireless remote control without fail, do it approximately 1 meter (3 ft.) from your Lexus.

For vehicles sold in U.S.A.

FCC ID: N14811UE  
MADE IN JAPAN

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

CS-R11UE