



TANSCEIVE FM RADIO



USER'S MANUAL

Accessories and optional accessories

Welcome to this new walkie-talkie! Please carefully open the box and make sure it is inside Are there items listed below, including accessories. If you find that this product and its accessories are being moved If anything is missing or damaged during shipment, please contact your dealer immediately.

Random Accessories

Accessories	Quantity
Walkie talkie	1
Charging power adapter	1
data cable	1
Back clip	1
Lanyard	1
USER'S MANUAL	1

Cannel List :

Channel	Frequency	Channel	Frequency
1	462.5625	8	467.5625
2	462.5875	9	467.5875
3	462.6125	10	467.6125
4	462.6375	11	467.6375
5	462.6625	12	467.6625
6	462.6875	13	467.6875
7	462.7125	14	467.7125

01

Understand the product



Basic operation

Switch key: long press 3S to turn on; long press 3S to turn off.

Illumination lamp: short light on; short light off again.

Up key + monitor key: short press default is volume plus one division, 8 levels in total; long press this key is monitor key.

Scroll down key: Short press the default to decrease the volume by one space;

Channel selection key: Long press to hear "beep" to enter the channel selection function, and then press the up / down key to select all Required channel, determined by PTT.

 
PTT key: Press the PTT key to talk when the red light is on, release to receive.

VOX voice control: The channel is set to 1-9 channels. When the power is off, press and hold the side button (lowermost button) and then turn on. One beep and beep indicate that voice control is on, and two beep and beep indicate that voice control is off.

(The voice control will be turned on, and the channel on which it is located is the level of voice control. Level 1 is the least sensitive. Closer or louder, 9 levels are the most sensitive)

02

Understand the product

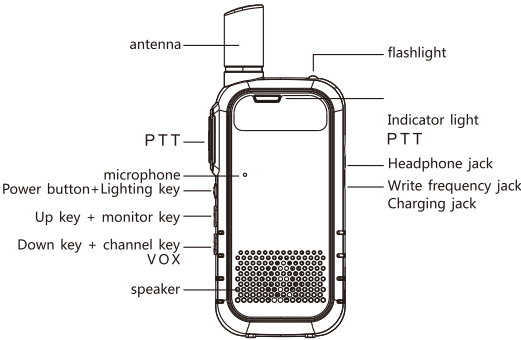

Basic operation

Switch key: long press 3S to turn on; long press 3S to turn off.

Illumination lamp: short light on; short light off again.

Up key + monitor key: short press default is volume plus one division, 8 levels in total; long press this key is monitor key.

Scroll down key: Short press the default to decrease the volume by one space;

Channel selection key: Long press to hear "beep" to enter the channel selection function, and then press the up / down key to select all Required channel, determined by PTT.

 
PTT key: Press the PTT key to talk when the red light is on, release to receive.

VOX voice control: The channel is set to 1-9 channels. When the power is off, press and hold the side button (lowermost button) and then turn on. One beep and beep indicate that voice control is on, and two beep and beep indicate that voice control is off.

(The voice control will be turned on, and the channel on which it is located is the level of voice control. Level 1 is the least sensitive. Closer or louder, 9 levels are the most sensitive)

03

Understand the product

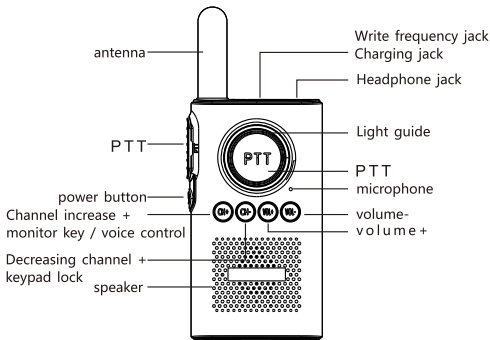

Basic operation

Switch key: long press 3S to turn on; long press 3S to turn off.

Monitor key: Press and hold this key for the monitor key.

 
Keyboard lock: Long press to hear "DI", the keyboard is locked; long press again to hear "DI", the keyboard is unlocked.

PTT key: Press the PTT key to talk when the red light is on, release to receive.

VOX voice control: the channel is set to 1-9 channels, in the off state, long press the keyboard (channel increment key) and then turn on, One beep and beep indicate that voice control is on, and two beep and beep indicate that voice control is off. (will Turn on voice control, the channel is the level of voice control, level 1 is the least sensitive and needs to be close to the machine or the sound Sound louder, level 9 is the most sensitive)

04

Understand the product

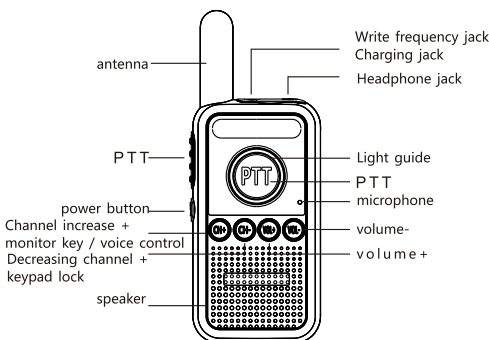

Basic operation

Switch key: long press 3S to turn on; long press 3S to turn off.

Monitor key: Press and hold this key for the monitor key.

Keyboard lock: Long press to hear "DI", the keyboard is locked; long press again to hear "DI", the keyboard is unlocked.

PTT key: Press the PTT key to talk when the red light is on, release to receive.

VOX voice control: the channel is set to 1-9 channels, in the off state, long press the keyboard (channel increment key) and then turn on, One beep and beep indicate that voice control is on, and two beep and beep indicate that voice control is off. (will Turn on voice control, the channel is the level of voice control, level 1 is the least sensitive and needs to be close to the machine or the sound Sound louder, level 9 is the most sensitive)

05

Technical specifications

Whole part	
Band	UHF
Frequency Range	FRS
Rated voltage	3.7V
Channel selection	14 Channels
Built-in antenna	Phosphorous copper
Subtone	Non-standard subtones can be set
Voice control function	Optional
Talk distance	2-3KM
charging method	USB
recharging current	350MA
Headphone jack	3.5MM
Launch section	
power	≤2W
Current modulation	< 1.3A
Frequency offset modulation	≤5KHZ
Distortion	≤5%
Stray	≤7.5μV(58dB)
Receiving part	
Receive sensitivity	≤0.25uv
Receive distortion	≤5%
Audio power	> 0.5W
Receive current	< 0.5A
stand-by current	< 70MA

Note: As technology advances, design and product specifications may change without notice.

06

WARRANTY CARD

Model No. : _____

Serial No.: _____

Purchase Date: _____

Local Dealer: _____

User Name: _____

Address: _____

Telephone: _____

Telephone: _____

Zip Code: _____

RAMARK:

1.Please reserve this WARRANTY CARD for warranty.

2.An effective Warranty Card must bear the stamp of the dealer and Purchase Date.

3.Warranty for 12 months for the radio body.
(Antenna / Battery / Charger are not in this warranty)

■ Licensing Information

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determind by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the follwing measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

This radio complieswith IEEE and ICNIRP exposure limits for General Population/Uncontrolled Environments RF exposure emvironment at operating duty factors of up to 50% and is authorized by the FCC for General Population use only. An appropriate warning lable is affixed to all units. In order to comply with RF exposure requirements, a minimum distance of 2.5 cm must be maintained when held-to-face, and body-worn operations are restricted to the approved original acessories (belt clip), a minimum distance of 0 cm. Do not use this device when antenna shows obvious damages.

MODIFICATION OF THIS DEVICE TO RECEIVE CELLULAR RADIOTELEPHONE SERVICE SIGNALS IS PROHIBITED UNDER FCC RULES AND FEDERAL LAW.