 
 


- 3 On the **[PC Settings]** screen, as shown below, click **[PC and Device]** > **[Bluetooth]**.

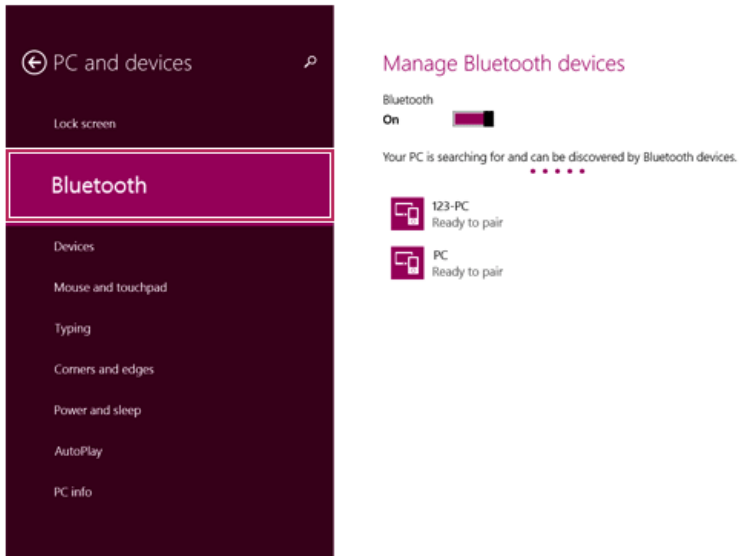

- 4 When **[Bluetooth]** appears, search other connectible devices.

5 When a device is found, click the device to connect.

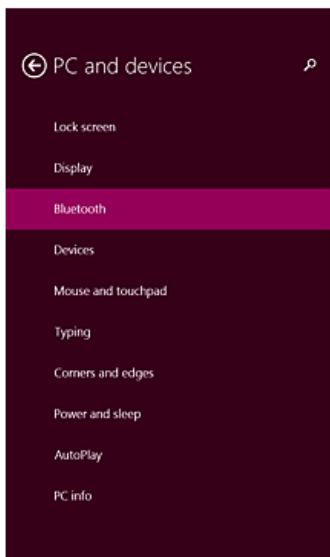

Manage Bluetooth devices

Bluetooth

On



Your PC is searching for and can be discovered by Bluetooth devices.

 


123-PC

Ready to pair

Pair

- 6 When the passwords are matched, click **[Yes]** to complete the connection.

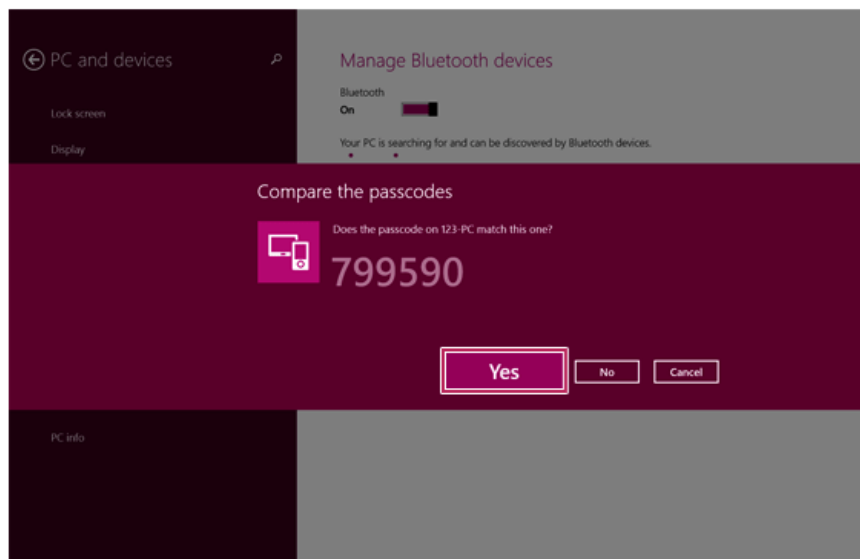

Wired LAN

LAN is the network environment that users can connect to by using a cable to connect to their internet providers or the company's network.

Using Wired LAN

LAN is installed with an automatic IP (DHCP) as default value.

Please refer to the following instructions to find out more about setting up an automatic IP (DHCP) or manual IP.

- 1 Connect the LAN adaptor to the micro USB port on the PC.

TIP

The recommended network cable for the optimal network environment is CAT5 or higher.

The network (LAN) cable may be connected when the LAN adaptor is used.

The LAN adaptor may be separately purchased at LG Service Center.



- 2 Connect LAN cable to the LAN port.



 
- 3 On the Start Screen, click the Desktop tile to convert to the Desktop screen.

4 Run **[Charms]** on the Desktop.


ENGLISH




- 5 In the Charm Menu, click **[Settings]** > **[Control Panel]** > **[View By]** > **[Small Icon]** > **[Network and Sharing Center]**.

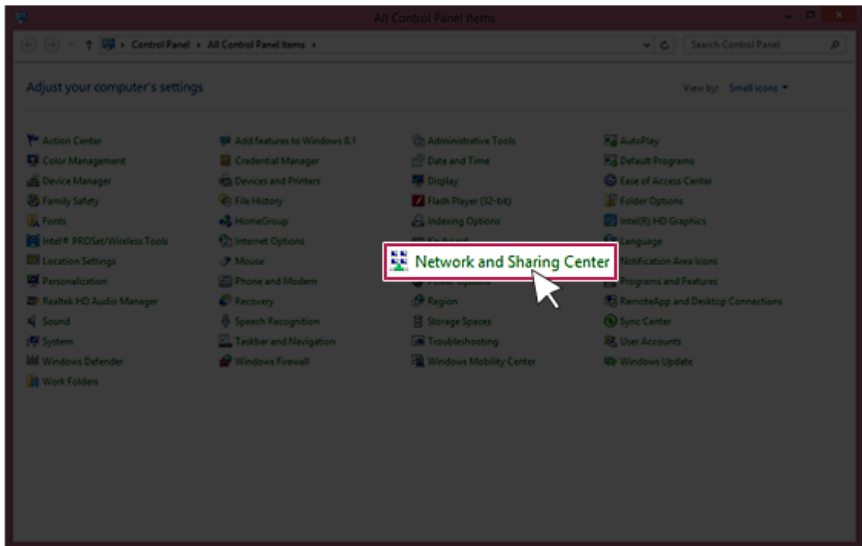


6 Click **[Change Adapter Settings]**.

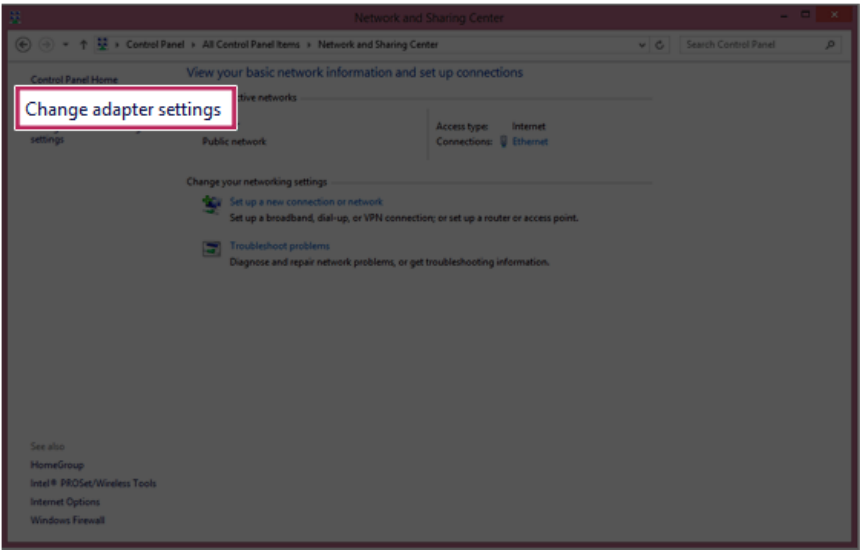 

 
7 Right-click **[Ethernet]** and select **[Properties]**.

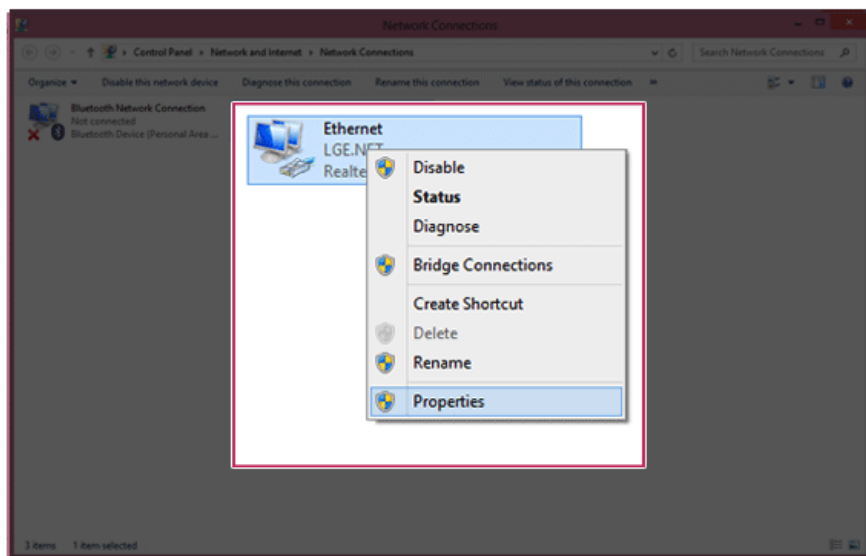

 - 8 Select **[Internet Protocol Version 4 (TCP/IPv4)]** and click **[Properties]**.

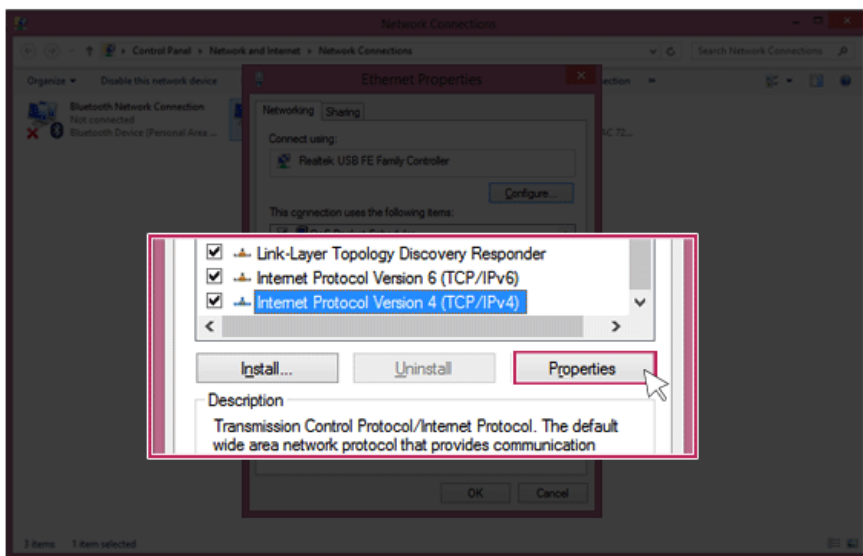

 - 9 If you want to use an automatic IP(DHCP), select **[Obtain an IP Address Automatically]**. If you want to use a manual IP, select **[Use Following IP Address]** to enter the address.
Please ask the network administrator about obtaining a manual IP.

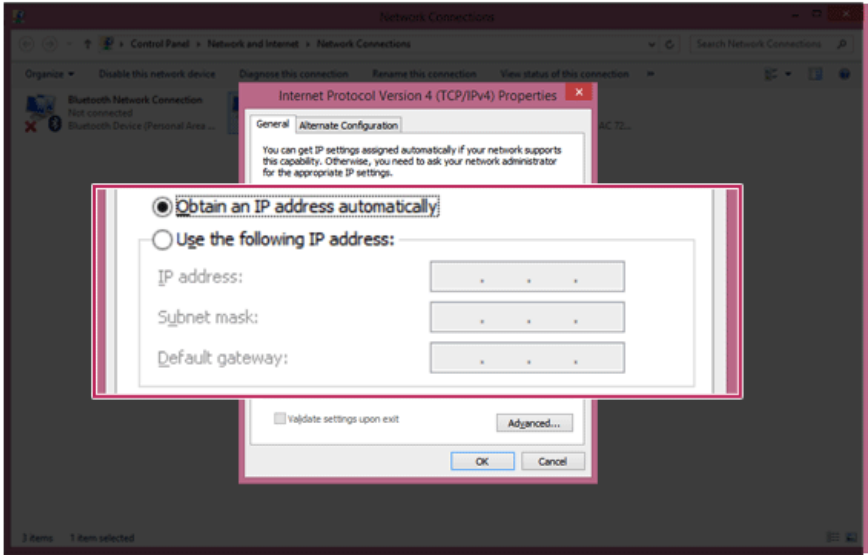

- 10 Press **[OK]** to complete the network setup.
- 11 Click the [Internet Explorer] icon in the taskbar to check whether the internet is operating normally.

Wireless Network

The wireless network (Wireless LAN) is the network environment that connects a PC with the internet provider or company network through an Access Point (wireless or regular router).

Wireless network is optional, and so it may not be installed in some models.
Turning On/Off Airplane Mode

Prior to using the wireless network, press [Fn] + [F6] to turn off Airplane Mode.

Pressing [Fn] + [F6] keys will turn on or off. If you are not going to use the mode, keep the mode turned on to reduce the battery power consumption.

Using the Wireless Network

If an Access Point (wired or wireless router) is in the vicinity of the PC, the wireless network can easily be accessed.

During the search for a wireless network (Wireless LAN), various Access Point may be found according to the location where the PC is used.

In case no accessible wireless network (Wireless LAN) is near the PC, no Access Point might be found.

 
A password protected Access Point cannot be accessed without knowing the right password.

- 1 Run **[Charms]** on the Desktop or the Start screen.




- 2 In the Charm Menu, click **[Settings]** > **[Wireless Network Icon]**.

3 Near available Access Point(wireless network) is automatically searched.

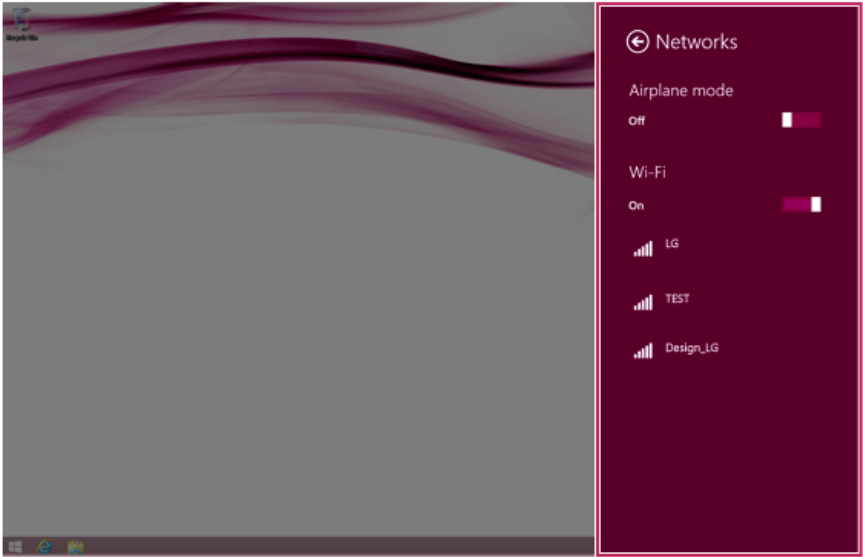

- 4 Select the Access Point (wireless network) you want to use and click **[Connect]** to connect to the Access Point.

 If a password is set for the wireless network, the Enter Password window appears.

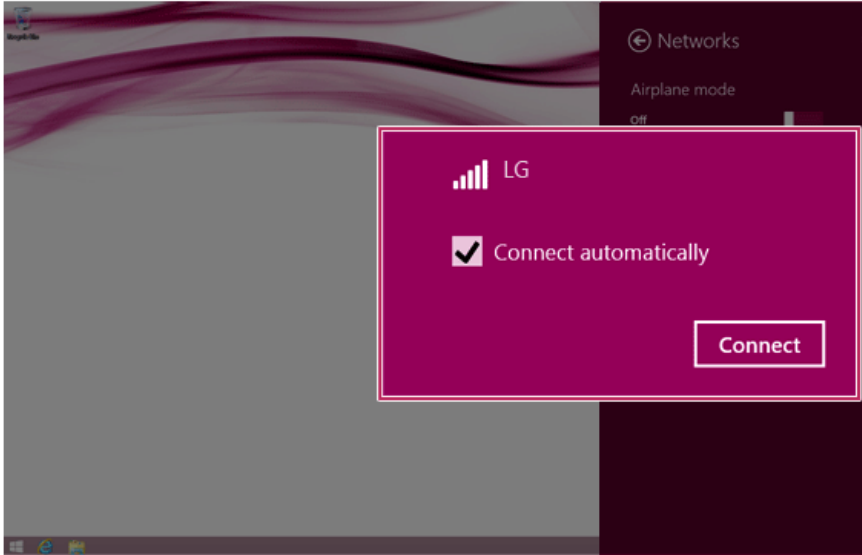

- 5 When the connection is established, **[Connected]** is displayed in the connected Access Point(wireless network).
- 6 Click the [Internet Explorer] icon in the taskbar to check whether the internet is operating normally.

Using a Wireless or Regular Router

A wireless / regular router connects several PCs and mobile devices etc. to one internet line and enables the use of internet and the network.

A wireless / regular router has to be bought separately. Refer to the manual provided by the manufacturer for instructions.

Connecting a Wireless or Regular Router

If one internet line is used with a wireless / regular router and several devices are connected, this may result in a slower connection.

In case of a wireless network, it is recommended to change the network name and security settings for a more secure connection.

Network speed can differ according to operation environment and specifications.

- 1 Connect the internet cable of the modem that was provided by your internet provider to the router's WAN port.
- 2 Connect all devices (PC, IPTV, internet phone, etc.) with a LAN cable to LAN ports 1 to 4 of the router.


The number of LAN ports can vary for each router model.

- 3 Please refer to the manual provided by the router manufacturer for setup of the network and Internet.

Micro SD Slot

Checking Available Memory Card

This model supports Micro SD memory cards.

Directly applicable memory cards	 micro SD
-------------------------------------	---

 
(The available memory type and capacity may differ by the PC model type.)

Check availability before buying a memory card.

Mounting and Using Memory Card

This product supports one Micro SD slot.

Insert the card into the multi-card slot to the fullest in the right direction as shown in the following figure.

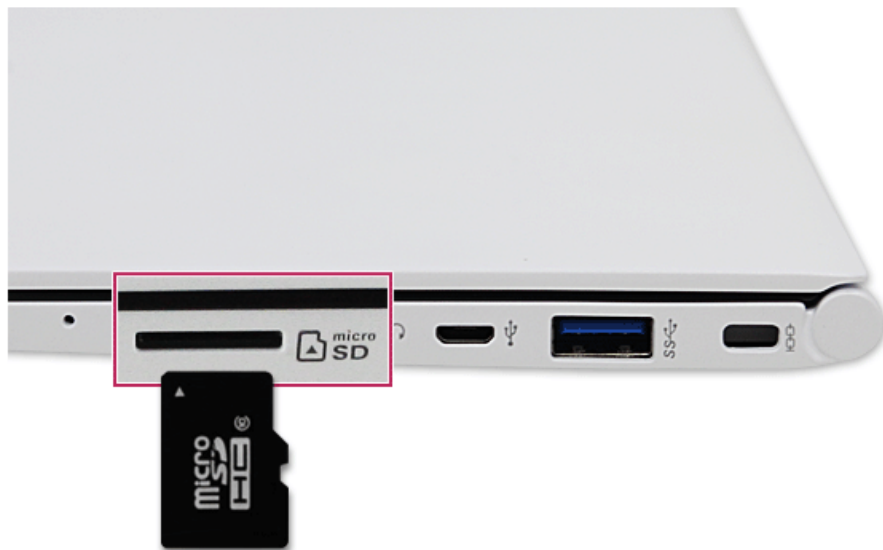**TIP**

- When the memory card is formatted, the data stored in the memory card will be deleted. Check whether there are important data before formatting the memory stick.
- To format a memory card, right-click the memory card drive and select Format. When Format window appears, click Start to continue.
- Windows The format feature may not be available on those Windows whose version is lower than Vista®. Format the card on other digital devices or format it after installing Memory Stick Formatter.
- If the writing prevention tab of memory card is locked, the user cannot format the memory stick nor write or delete the data.
- SD™, MMC™ memory cards can be used only as storage devices and do not support the copyright protection function.

Removing memory card

 
Push the card with your finger to make the card spring out of the slot. Remove the memory card.

TIP

To safely removing a memory card:

The figures herein may differ by language selection and is subject to change for performance improvements without prior notice.

- 1 Click **Safely Remove Hardware and other Media** icon on the right side of the taskbar.

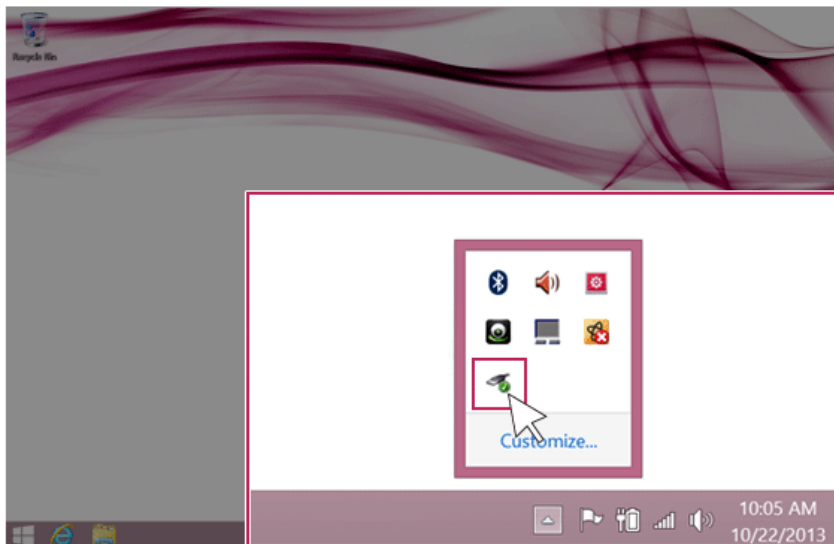

- 2 Select **Remove Multi-Card USB Device** to safely remove hardware.

Using Software

LG Network Share

LG Network Share is software that allows you to configure and use Virtual AP and File Sharing.

TIP

LG Network Share For more details about how to use , refer to the corresponding help.

 
The figures herein are subject to change without prior notice.

It may not work properly depending on user preferences (security tools, etc.) and the network status.

If it is not a built-in communication device, you cannot use Network Share to use the virtual AP function.

LG Network Share Using the Program

- 1 Click the [] tile from the Start screen to run **LG Network Share**.

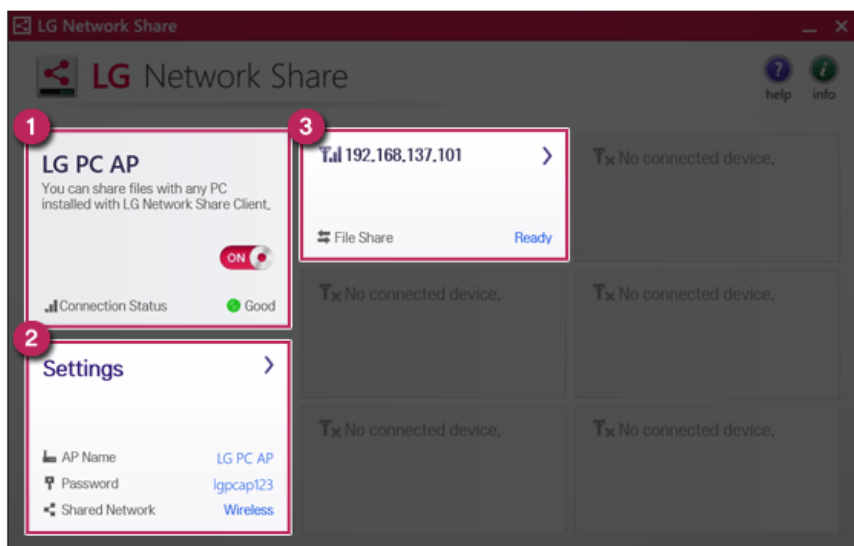

- a **Virtual AP function ON/OFF**: Turn on or off the virtual AP function.
- b **Virtual AP setup menu**: You can modify the SSID, password, and the download folder of the virtual AP.
- c **Connected Device Information Tile** : It provides information on all connected devices to the AP. Click to send a file and display the status of the transfer.

LG Reader Mode

LG Reader Mode prevents the users from eyestrain and helps them to read the PC screen comfortably by displaying the screen just like a printed paper.


Using LG Reader Mode

 
TIP

The user cannot arbitrarily adjust the brightness in reader mode. To adjust the screen brightness, turn reader mode off.

You can use hot keys to use the reader mode more conveniently.

- Press [Fn]+[F9] keys to switch the PC screen to reader mode and press again to turn off the reader mode.


- 1 Click the [] icon on the task bar.

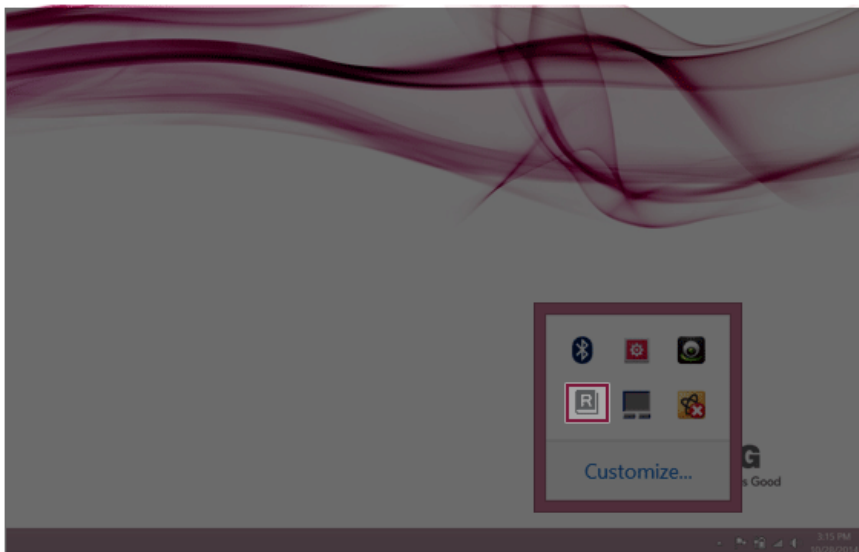

- 2 Select the **[Reader Mode On]** menu to switch to Reader Mode as shown in the figure.

TIP

 Select **[Reader Mode Off]** to turn off the reader mode.

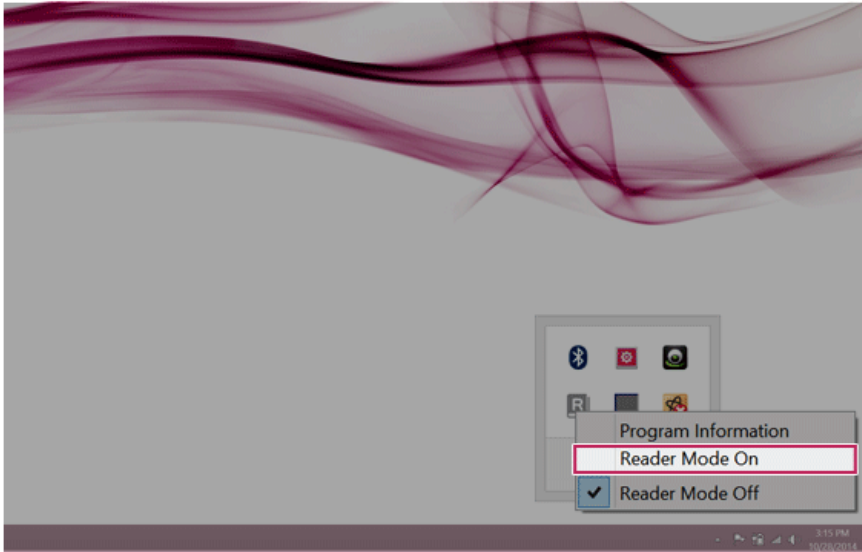

LG Control Center



LG Control Center is software that help you to change PC Settings, Power Settings, Windows Security Settings, etc. as well as viewing system information.

 
TIP

LG Control Center For more details about how to use , refer to the corresponding help.

The figures herein is subject to change for performance improvements without prior notice and the functions supported by LG Control Center may vary from models.

Using LG Control Center

- 1 Click the [] tile on the Start screen, or the [] icon in Desktop to run **LG Control Center**.

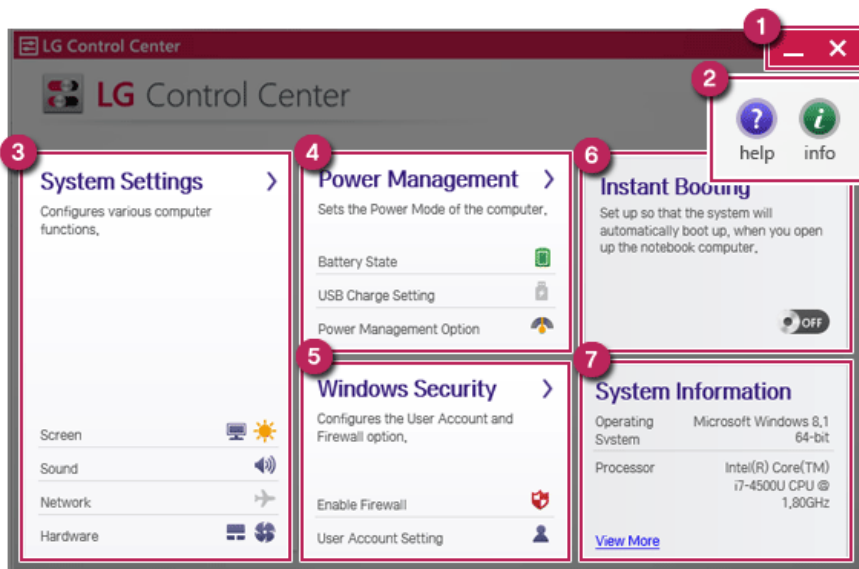

- Minimize/Exit Button**: Minimizes the size of the window, or exits the software.
- Help/Information Button**: Runs Help or displays information about the software.
- System Settings** : Sets up the screen brightness / resolution, external display, sound and other various devices.

- d **Power Management Settings** : Sets up power management option, USB charging, battery status and battery life extension.
- e **Windows Security Settings** : Sets User Account Control settings and Firewall settings.
- f **Instant Booting**: You can set the system to be automatically booted whenever you open the LCD panel.
- g **System Information** : Displays the PC OS in use, processor information and other system information.

LG Update Center

LG Update Center allows you to install various PC drivers, applications and Windows patches easily.



TIP

 
The illustrated images are subject to change without prior notice.

It may not work properly depending on user preferences (security tools, etc.) and the network status.

For more information on **LG Update Center**, refer to **[Help]**.

Using LG Update Center

- Click the [] tile on the Start screen, or the [] icon in Desktop mode to run **LG Update Center**.

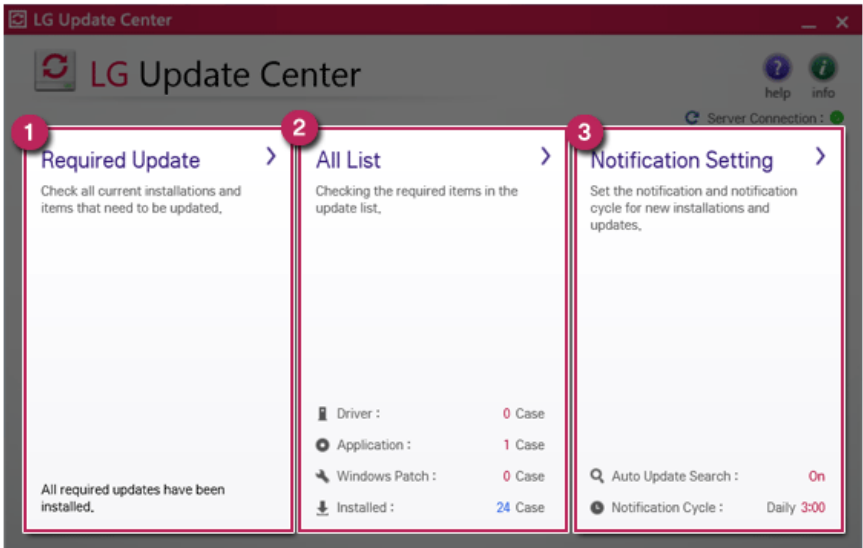

- Required Update** : Installs critical items that must be applied to the system.
- All List** : Displays and installs all required items for the system.
- Notification Setting** : Sets up notifications for online updates for installed items.

TIP

You can use LG Update Center to install deleted drivers or latest drivers easily and quickly.

Use LG Update Center to keep your system current and optimized.

DTS Sound™

DTS Sound™ provides rich, sonorous sound when you listen to music, watch videos or play games in the PC.

DTS Sound™ may not be available depending on the model.

The figures herein are subject to change without prior notice.

 
Running DTS Sound Program

- 1 On the Start Screen, click the [Desktop tile] to convert to the Desktop.
- 2 Press [Fn] + [F8] and run **[DTS Sound]**.
- 3 When **[DTS Sound]** window appears, select function or device.

TIP

Earphone/headphone selection is available only when the device is connected.

DTS Sound Tour

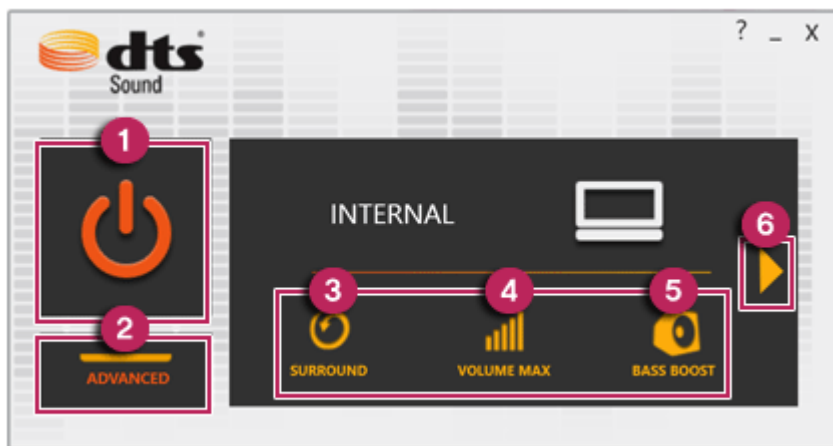

- 1 **Power:**DTS Sound Turns the power on/off.
- 2 **Advanced:** DTS Sound Provides advanced options menu.
- 3 **Surround:** Sets up surround sound effects through the PC's embedded speakers and headphone.
- 4 **Volume Max:** Increases audio level without distortion of sound.

- 5 **Bass Boost:** Boosts the lowest frequencies for enhanced bass sound.
- 6 **Change Output Device:** Changes the sound output device.

TIP

If you want to remove Audio Driver or DTS Sound, remove [DTS Sound] and [Conexant HD Audio] in the order specified and restart the system.

If you want to reinstall Audio Driver or DTS Sound, remove [DTS Sound] and [Conexant HD Audio] in the order specified and install [Conexant HD Audio]. Then restart and install [DTS Sound].

- If you do not remove or install them in the order specified, an error may occur.

CyberLink YouCam

Cyberlink YouCam is the program that can take picture or moving images through the web camera.

The figures herein are subject to change without prior notice.


The web camera is optional, and so it may not be installed in some models.

 
For more information on how to use CyberLink YouCam, refer to Help.

TIP

You can change the web camera resolution on Setup menu.

Using Cyberlink YouCam

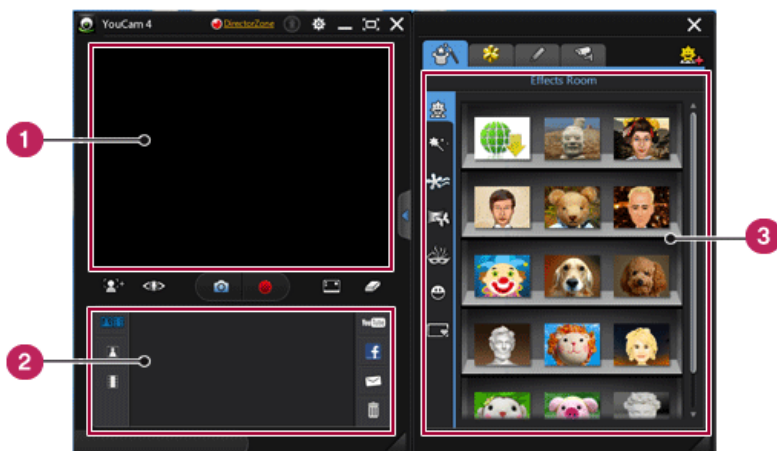


 







- 1 Switch to the Desktop mode after clicking the [Desktop tile] in the Start screen. And then, click the  icon to run the CyberLink YouCam.
- 2 CyberLink YouCam Home Page appears as follows.








 a **Viewer** : Displays the Webcam screen.

 - b **Image Gallery:** Use to record pictures and moving images, play back or delete those images.
- c **Frame / Animation Effect menu:** Can add a frame and animation effect on the screen.

Major Buttons

	Takes pictures.
	Records movie clips.
	Takes the picture of Desktop.
	Configures the user preferences.
	Switches to the full screen view.
	Starts the video monitoring function.
	Allows you to use the Album and the Animation Effect.
	Allows you to use the Drawing function.
	Allows you to use the Zoom and Face Recognition functions.
	Deletes the picture created using the Drawing function or clears the Animation Effect.
	Displays information about CyberLink YouCam.

	Displays the Help.
	Uploads movie clips to YouTube.
	Uploads pictures or movie clips to facebook.
	Sends pictures or movie clips via e-mail.
	Deletes the selected picture or movie clip.

Restoring the System

LG Recovery Center

If the system has an error, you can use **LG Recovery Center** to use Windows 8.1 recovery function to recover or restore the system to its initial pre-purchase state.


TIP

 
LG Recovery Center uses the Windows 8.1 recovery function.

For more information about Windows 8.1 recovery, refer to [Windows Help and Support].

CAUTION

If you have deleted the restoration data in the protected area of the disk, or have arbitrarily installed another operating system, the restore function may not work.

Click the  icon in Desktop to run **[LG Recovery Center]**.

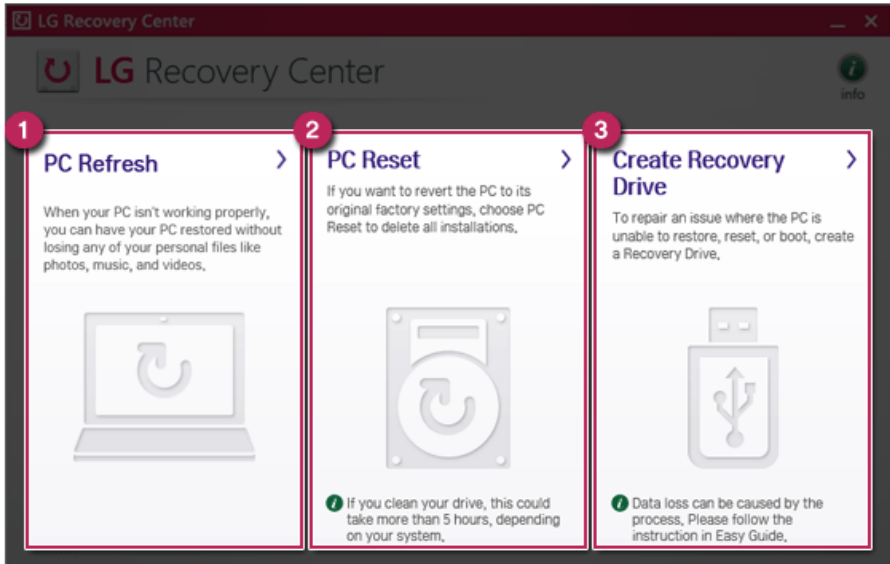

- 1 **PC Refresh:** Recovers the PC without losing any personal files.

CAUTION

PC settings are reset to default and any user-installed software will be deleted.

 
- 2 **PC Reset:** Removes all items from the system and restores the system to its initial pre-purchase state.

CAUTION

All data is lost during the initialization, so you must backup all critical data in advance. It may take about 5 hours or longer depending on the system conditions.

- 3 **Create Recovery Drive:** You can create a recovery drive in Windows as a precaution against a system failure that prevents you from entering the operating system, or any other severe system issues.


- a When the following screen appears, select [Copy the recovery partition from the PC to the recovery drive.] and click [Next].

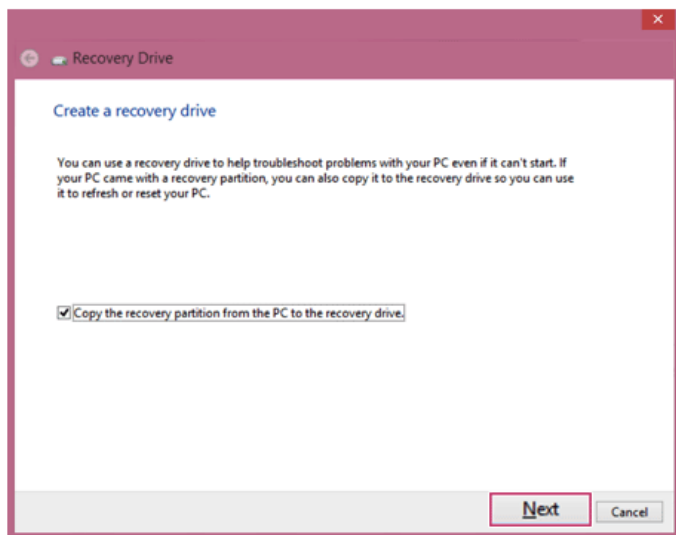

- b When the following screen appears, select the USB flash drive and click [Next].

CAUTION

 This process deletes all the data on the storage device designated as a recovery drive. Make sure to back up its data in advance.

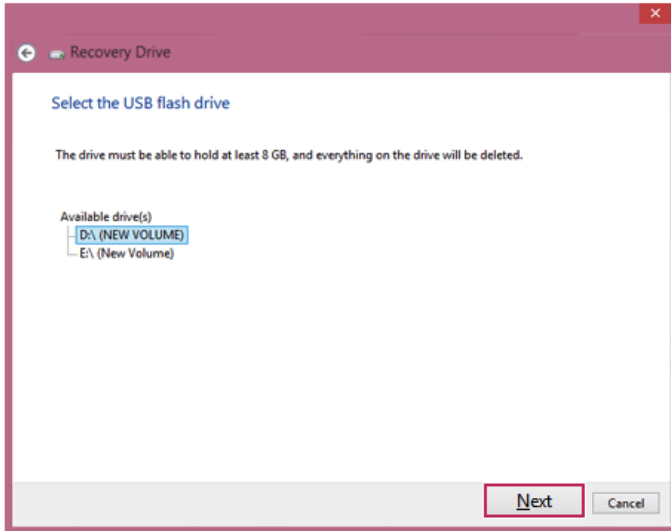


- c Once the storage device is ready, click [Finish] to create a recovery drive.

CAUTION

Select [Delete the recovery partition] while creating a recovery drive to remove the recovery partition in the PC.

 Once the recovery partition is removed, you cannot use the recovery function of the PC. You can only recover the system using the recovery media.

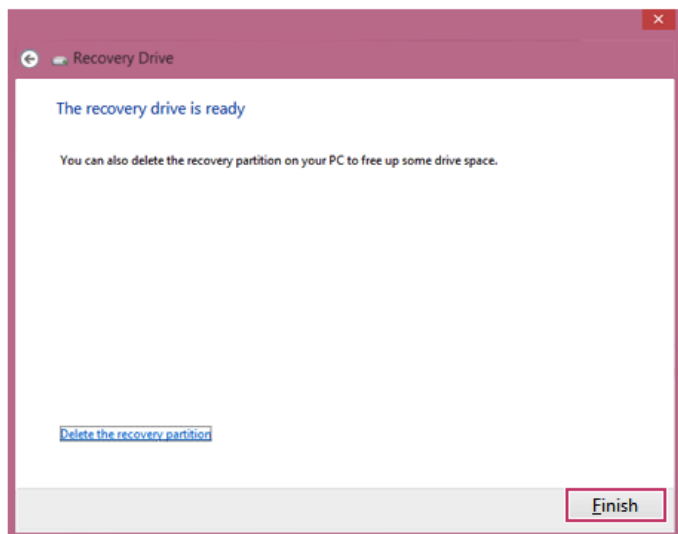

Recovering from a Boot Failure

If booting is impossible due to a serious error with the system, you can recover the system using **LG Recovery Center RE**.

CAUTION

 
If you have deleted the restoration data in the protected area of the disk, the restore function may not work.

Using the LG Recovery Center RE


CAUTION

All data is lost during the initialization, so you must backup all critical data in advance.


- 1 Turn on the PC and press [F11].
- 2 When the following screen appears, select a language you want to use and then click [Next].

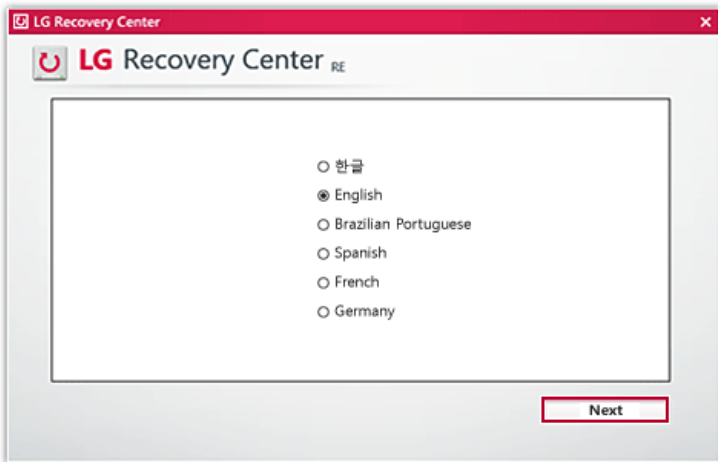

 - 3 When the following screen appears, select the [Agree] button and then click the [Next] button.

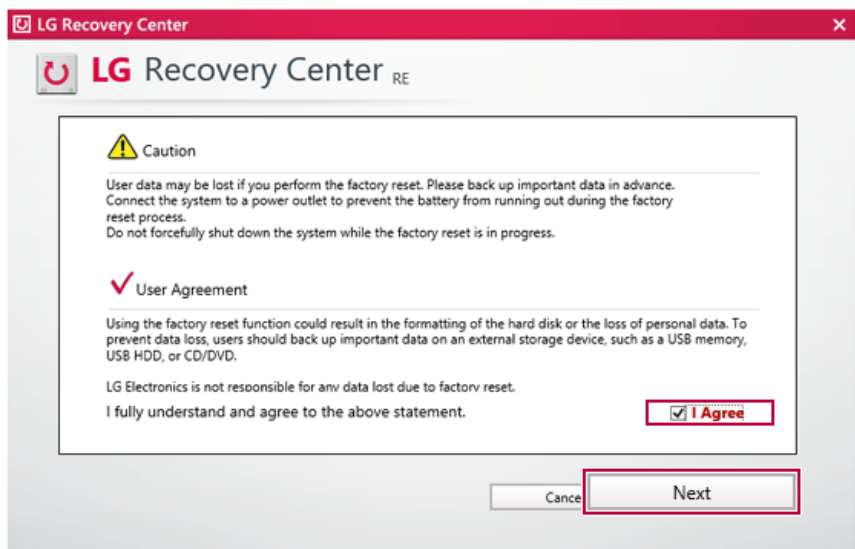

 - 4 When the factory reset has been completed as shown in the following figure, click the [Complete] button and then restart the system.

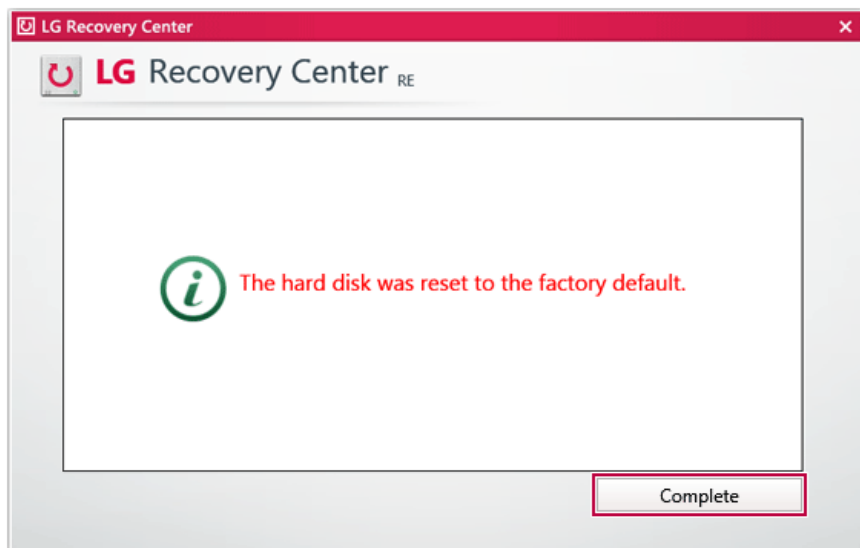

Recover by Using a Recovery Drive

If it is impossible to recover by using [F11], you can recover the system through a recovery drive.

TIP

To recover by using a recovery drive, you must have the recovery drive made through **LG Recovery Center's** [Create Recovery Drive].



- 1 Connect the recovery drive to the USB port of the PC.
- 2 Turn on the PC and press [F10].
- 3 When the screen for selecting the boot device appears, select the connected recovery drive and click [Enter].
- 4 Select the [Troubleshooting] menu.
- 5 Select the item you want and recover the system following the instructions.

 
Setup and Upgrade

Installing the Driver

The figures herein may differ by language selection and is subject to change for performance improvements without prior notice.

Using **LG Update Center** to install the Driver

- 1 Click the [] tile on the Start screen, or the [] icon in Desktop mode to run **LG Update Center**.

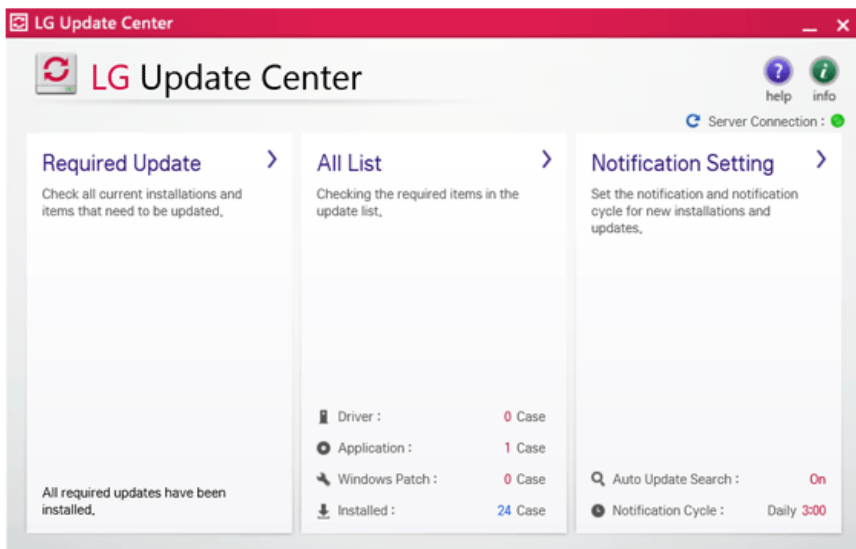

- 2 Select **[Required Update]** or **[All List]** to install the driver.
For more information on **LG Update Center**, refer to **[Help]**.

TIP

You can use LG Update Center to install deleted drivers or latest drivers easily and quickly.

For the system optimization, use LG Update Center to keep up-to-date.

How to download **LG Update Center**

You can download **LG Update Center** from LG Electronics Cyber Service Center (www.lg.com).

Starting System Setup

System setup means storing the hardware configuration information of the PC in the flash memory. Through system setup, the PC retrieves various information including current date and time, memory capacity, and storage device (HDD, SSD, eMMC) capacity and type.

You setup the system when you set passwords, change the boot order, and add new peripheral devices to the machine.

Items displayed on the Setup screen may differ by model type and spec.

- Refer to .
- Refer to .
- Refer to .

TIP

To use the system setup (F2), booting device selection (F10), or recovery (F11), you need to restart the system (click [Restart] in the system power menu) and then immediately press the corresponding function key due to the fast booting speed.

CAUTION

- Do not change the system setup unless necessary. Incorrect system setup may cause errors during system operation. Use caution when changing the system setup.
- For performance improvement, the system setup menu configuration and the initial setup status may be changed and may become different from images included in the user manual.

- 1 Press the [F2] key after re-booting the system.



2 In a few moments, the system setup screen appears.



Keys Used in System Setup

Keys	Function
Enter	Selects the current item.
Esc	To deselect the current item or to move to the previous screen.
▲, ▼, ◀, ▶ (Arrow keys)	Moves the cursor up, down, left, and right.
F10	Stores new settings or ends the system setup.

Setting the Password

This process is to set a password so that other people cannot use the PC or change the settings.

The user can set a password while booting the system or setting up the system.

 
CAUTION

- Without the registered password, access to the system will be denied. Write down and keep the password in a safe place.

Set Supervisor Password

The password prevents unauthorized people from accessing the PC. By default, no password is set for the machine. If an unauthorized person changes the password in the System Setup, you will be unable to access the system.

- After opening the system setup screen, click the **[Security]** button.

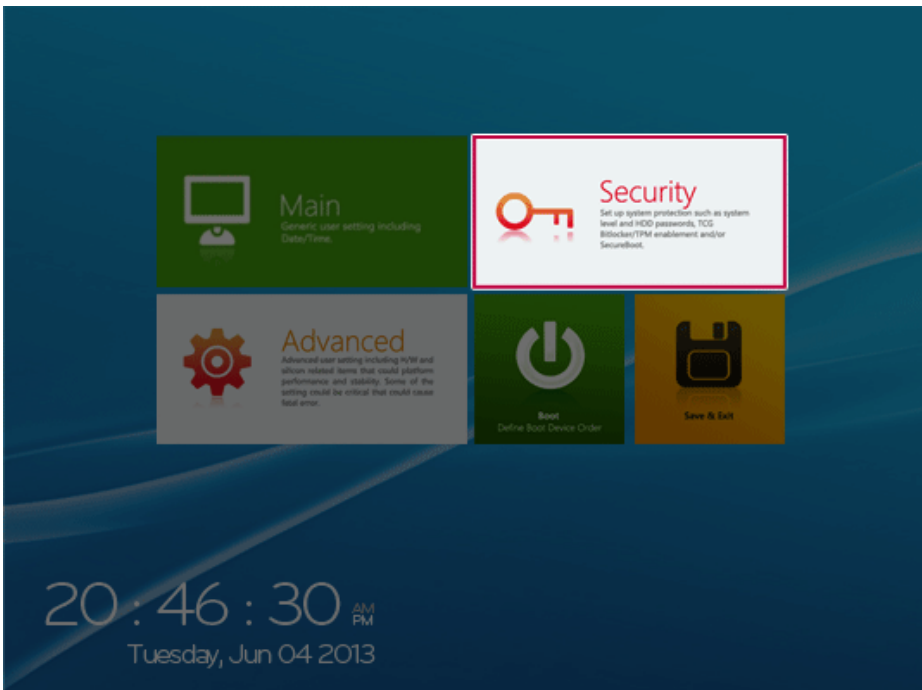

- 2 When the following screen appears, click **[Enter]** in the **[Set Supervisor Password]** menu.

PHOENIX SECURECORE
TECHNOLOGY SETUP

Security

Account's Password Status

Set or clear the Supervisor's or User's password.

Password on boot:
Enable/Disable User Authentication Prompt on boot.

Secure Boot Configuration
Secure Boot Configuration Settings

HDD Security Status

Trusted Platform Module (TPM)

Account's Password Status

Supervisor Password is: Cleared

User Password is: Cleared

Set Supervisor Password

Set User Password

phoenix
technologies

Advanced Security Boot

Home Discard Save Boot

- 3 When the following message appears, enter the password and click **[OK]**. The password must not exceed 8 total characters consisting of letters (A - Z), numbers (0 - 9), or a combination of both.

Security

Account's Password Status

Supervisor Password	OK
User Password	OK

Set Supervisor Password

 
Enter New Password

Confirm New Password

OK Cancel


< Advanced Security Back > Home Discard Save Back

4 When the following message appears, click **[OK]**.

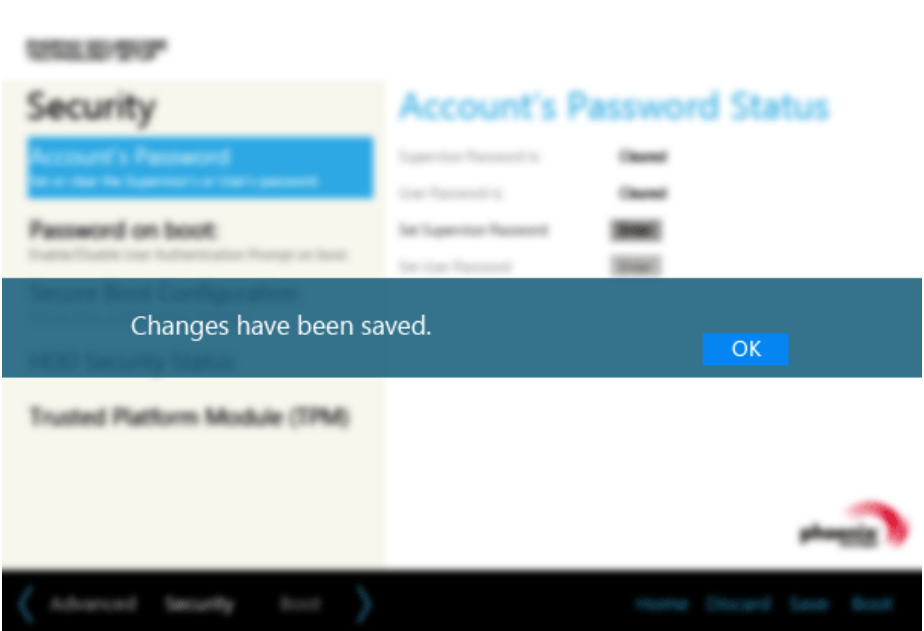

5 To save the changes in system setup, press **[F10]**.

 - 6 When the following message appears, click **[YES]**. The PC will restart.

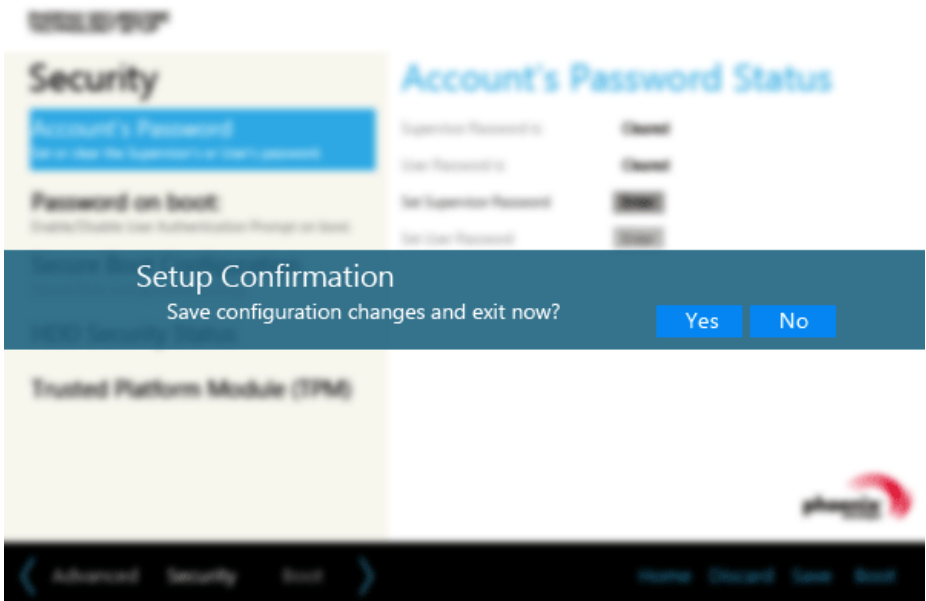

TIP

- With **Supervisor Password**, you are authorized to set all items in the System Setup and to set **Password on boot**. In case other people also use the notebook PC, it is recommended to set the **Set User Password**.

Set User Password

The password set by the **[Set User Password]** process is lower than that set by the **[Set Supervisor Password]** process, and so the user can use the **[Set User Password]** only after setting a password in the **[Set Supervisor Password]** menu.

- 1 After opening the system setup screen, click the **[Security]** button.



- 2 When the following screen appears, click **[Enter]** in the **[Set User Password]** menu.

PHOENIX SECURECORE
TECHNOLOGY SETUP

Security

Account's Password

Set or clear the Supervisor's or User's password.

Password on boot:

Enable/Disable User Authentication Prompt on boot.

Secure Boot Configuration


Secure Boot Configuration Settings

HDD Security Status

Trusted Platform Module (TPM)

Account's Password Status

Supervisor Password is:	Cleared
User Password is:	Cleared
Set Supervisor Password	<input type="button" value="Enter"/>
Set User Password	<input type="button" value="Enter"/>



<

Advanced

Security

Boot

>

Home

Discard

Save

Boot

- 3 When the following message appears, enter the password and click **[OK]**. The password must not exceed 8 total characters consisting of letters (A - Z), numbers (0 - 9), or a combination of both.

ENGLISH

Security

Account's Password

Set or view the Supervisor's or User's password.

Account's Password Status

Supervisor Password is:

User Password is:

Set User Password

 
Enter New Password

Confirm New Password

Advanced Security Tools


Home Wizard Log Out

- 4 When the following message appears, click **[OK]**.

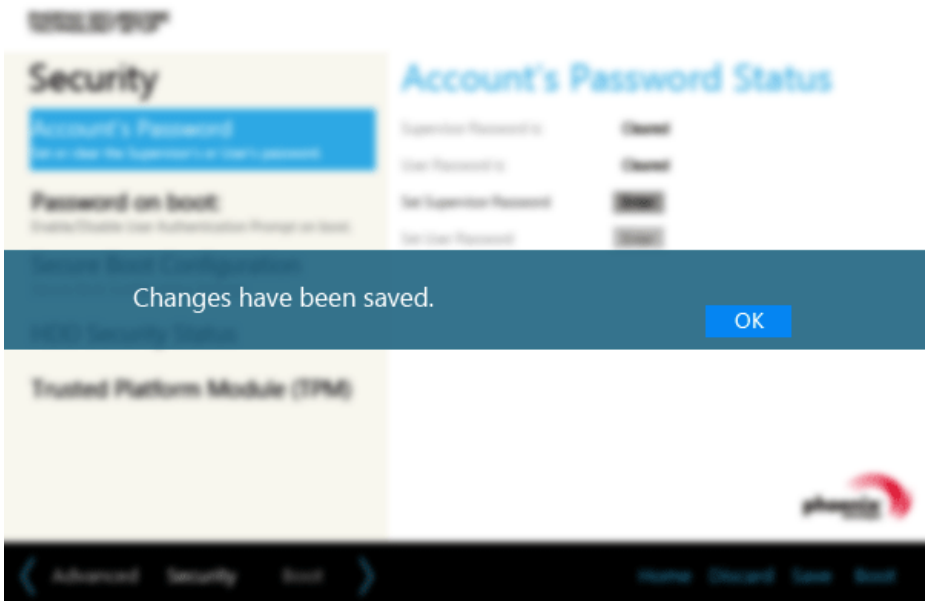

- 5 To save the changes in system setup, press [F10].

 6 When the following message appears, click **[YES]**. The PC will restart.

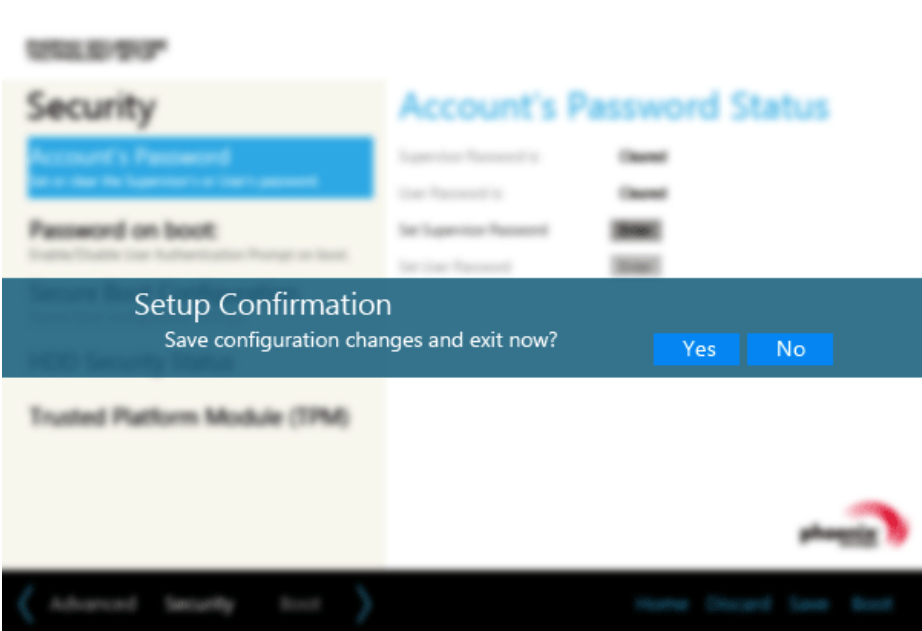


TIP

- **[User Password]** allows limited access to the items in the System Setup compared to the **[Supervisor Password]** item.

Password on boot

[Password on boot] menu protects the system by requesting **[Set Supervisor Password]** or **[Set User Password]** during boot up.

 - 1 After opening the system setup screen, click the **[Security]** button.

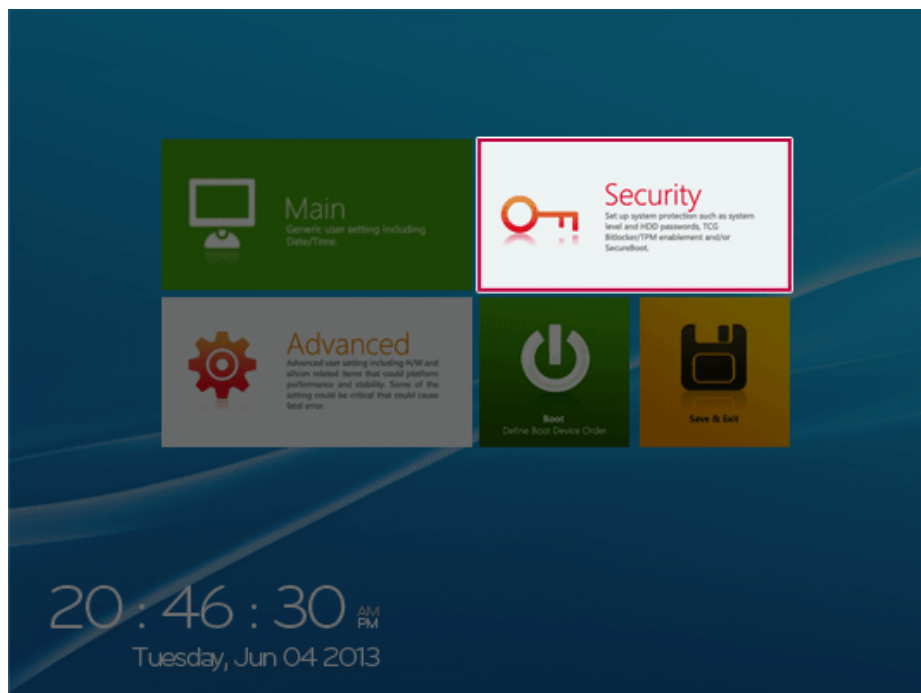

- 2 When the following screen appears, set **[Set Supervisor Password]** only or both **[Set Supervisor Password]** and **[Set User Password]**.

PHOENIX SECURECORE
TECHNOLOGY SETUP

Security

Account's Password

Set or clear the Supervisor's or User's password.

Password on boot:

Enable/Disable User Authentication Prompt on boot.

Secure Boot Configuration

Secure Boot Configuration Settings

HDD Security Status

Trusted Platform Module (TPM)

Account's Password Status

Supervisor Password is: **Cleared**


User Password is: **Cleared**

Set Supervisor Password

Enter

Set User Password

Enter



Advanced

Security

Boot

 
Home

Discard

Save

Boot


- 3 Click the [Off] button in the **[Password on boot]** menu as shown in the following figure. The button changes to [On] and the **[Password on boot]** setting is completed.

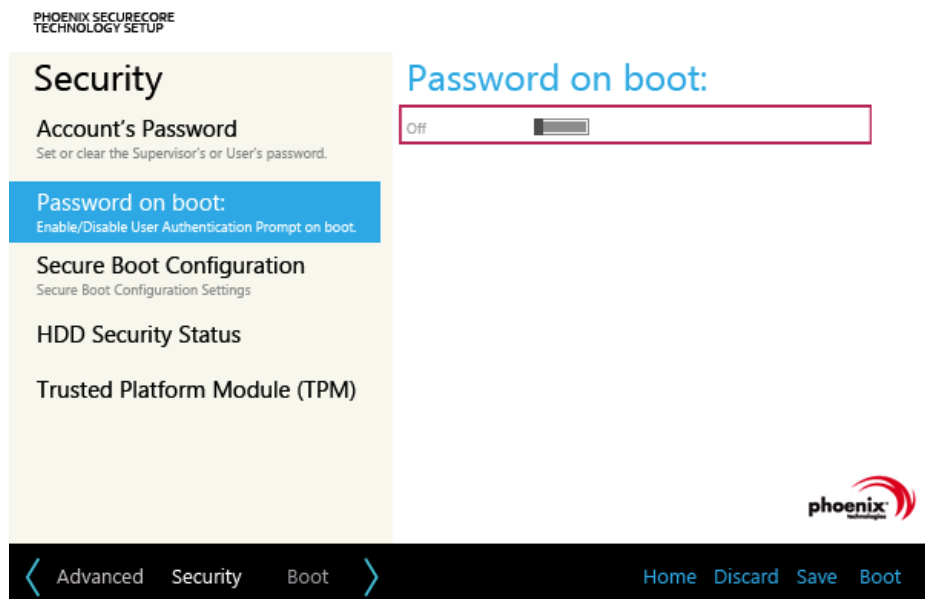

Set SSD Password


SSD Password is to set a password in the SSD separate from the **Supervisor Password**. If you set the **SSD Password**, the password input window appears during booting.

 - 1 After opening the system setup screen, click the **[Security]** button.

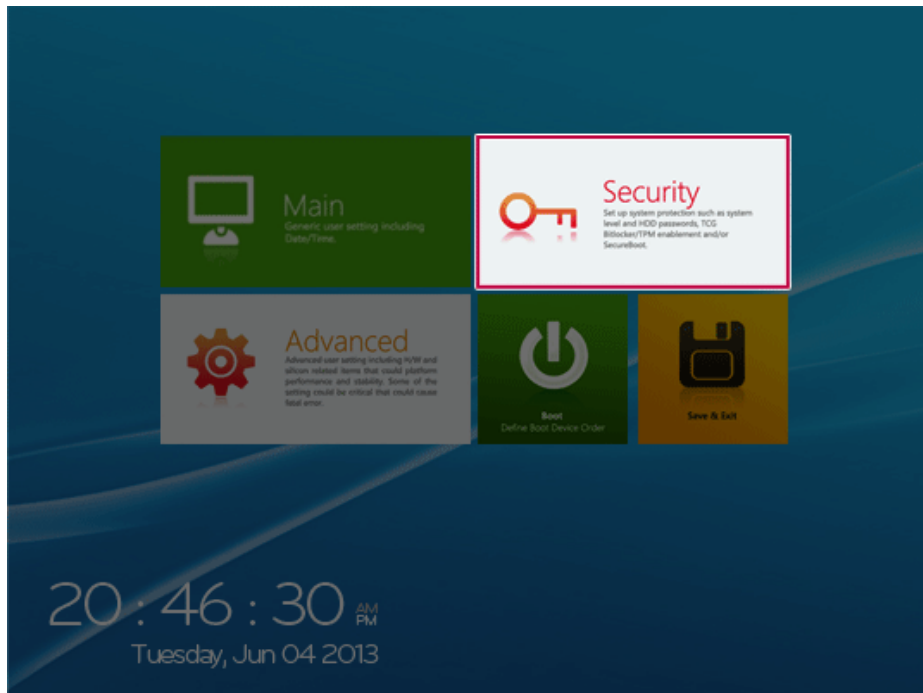


- 2 When the **[Security]** menu appears, click the **[HDD Security Status]** button.

 
- 3 When the following screen appears, click **[Enter]** in the **[Set SSD User Password]** menu.

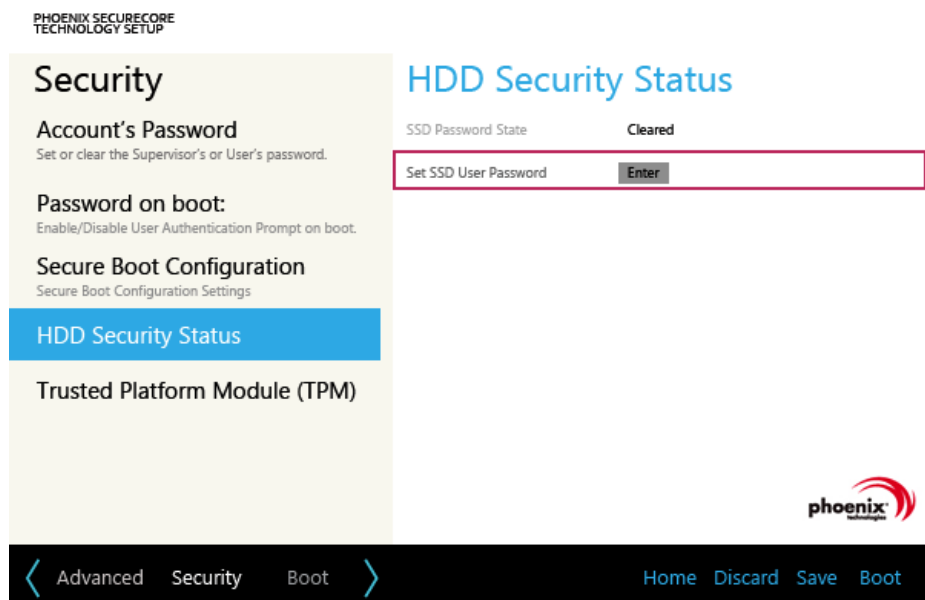

 - 4 When the following message appears, enter the password and click **[OK]**. The password must not exceed 8 total characters consisting of letters (A - Z), numbers (0 - 9), or a combination of both.

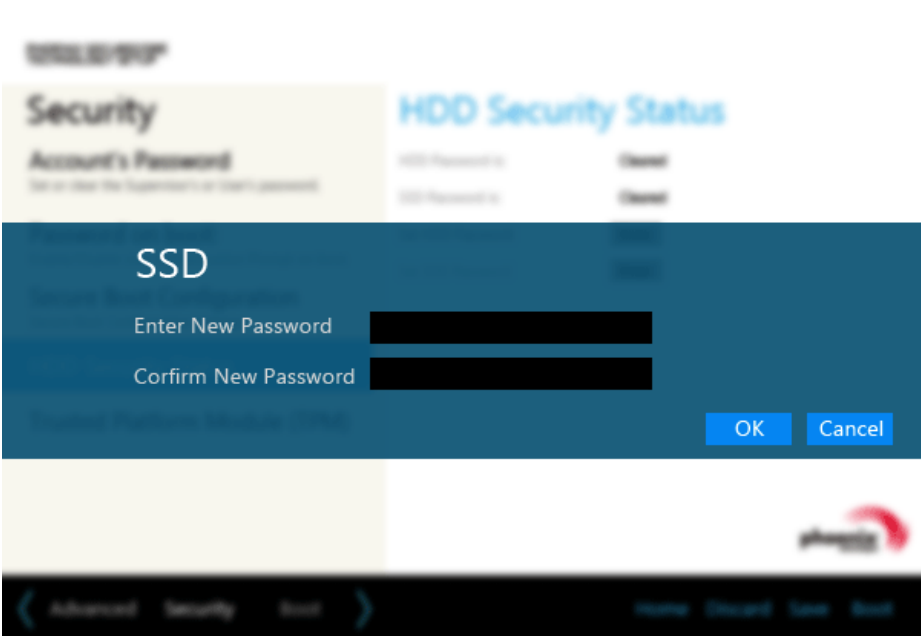


 - 5 When the following message appears, click [OK].

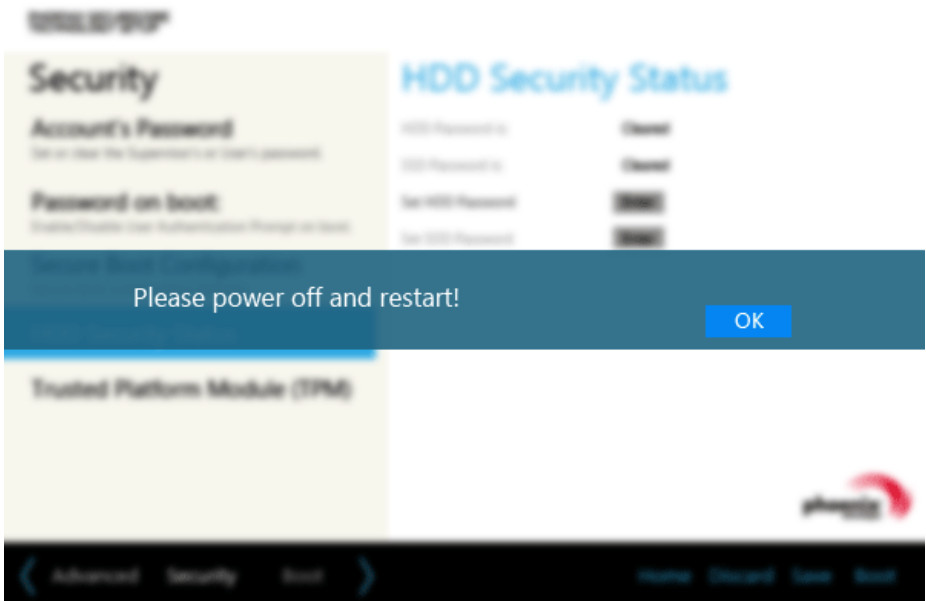

- 6 To save the changes in system setup, press [F10].

 - 7 When the following message appears, click **[YES]**. The PC will restart.

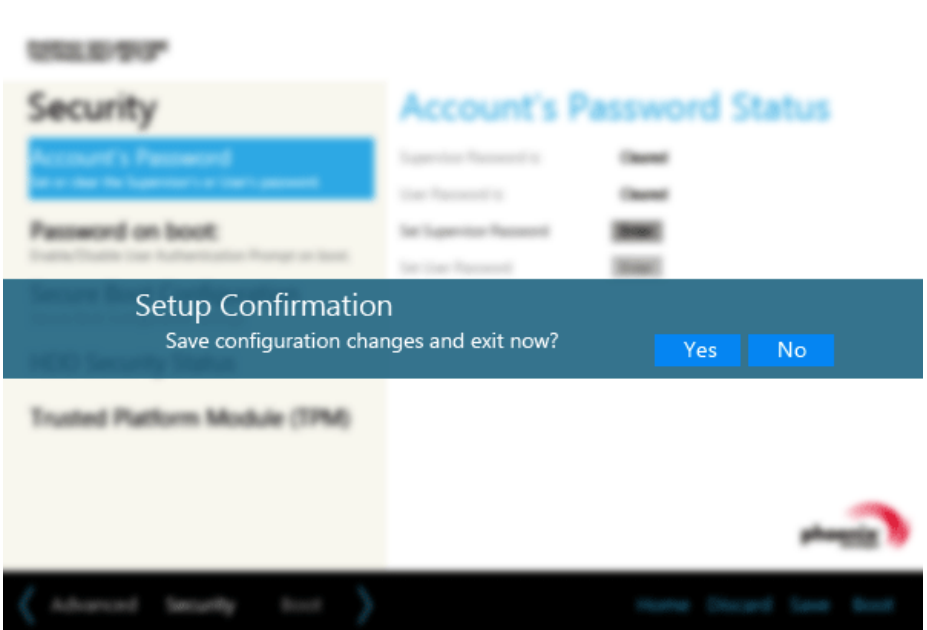

CAUTION

Without the SSD Password, it is impossible to recover the SSD.

 
- Replacement of the SSD due to a forgotten **SSD Password** is not covered by the warranty.

Changing or Deleting the Password

You can delete or change the password only after inputting the current password.

Changing the Password


- 1 Execute System Setup, enter the password, and press [Enter].

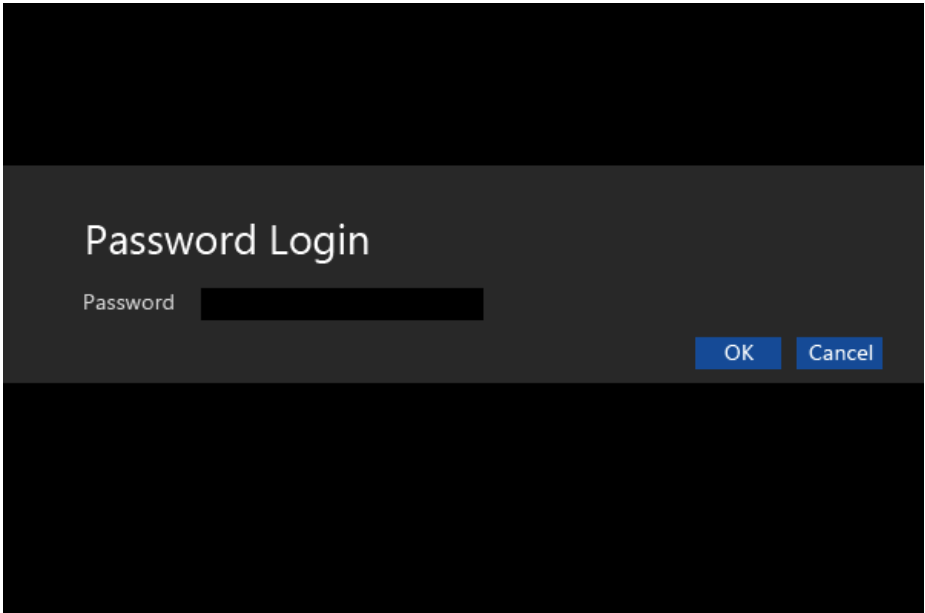

- 2 Change the password the same way as setting one.

Deleting the Password

 - 1 Execute System Setup, enter the password, and press the **[Security]** button.

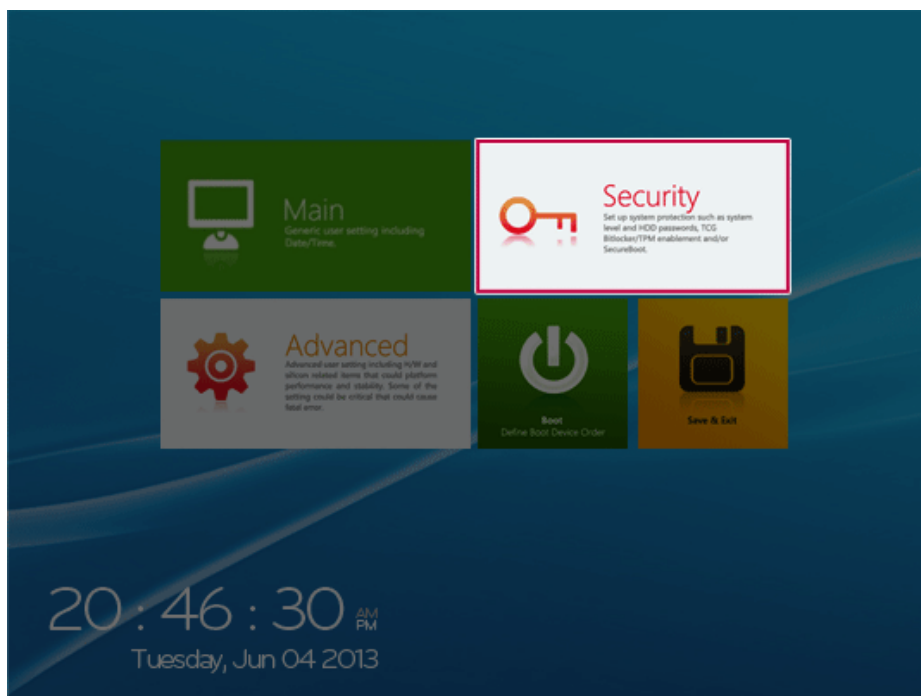

- 2 When the following screen appears, click **[Enter]** in the **[Set Supervisor Password]** menu.

PHOENIX SECURECORE
TECHNOLOGY SETUP

Security

Account's Password Status

Set or clear the Supervisor's or User's password.

Password on boot:
Enable/Disable User Authentication Prompt on boot.

Secure Boot Configuration
Secure Boot Configuration Settings

HDD Security Status

Trusted Platform Module (TPM)

Account's Password Status

Supervisor Password is: Cleared

User Password is: Cleared

Set Supervisor Password

Set User Password

phoenix
technologies

Advanced Security Boot

Home Discard Save Boot

- 3 When the following message appears, enter the current password in the **[Enter Current Password]** field.

ENGLISH

Security

Account's Password

Set or view the Supervisor's login password.

Account's Password Status

Supervisor Password:

User Password:

Set Supervisor Password

Enter Current Password

Enter New Password

Confirm New Password

OK Cancel

Advanced Security Tools

Home Logout Save Back

- 4 Press [Enter] in **[Enter New Password]** and **[Confirm New Password]**.

The screenshot shows a device's security interface. At the top, there's a 'Security' section with a blue header 'Account's Password' and a sub-header 'Set or change the Supervisor or User's password'. To the right, there's a section titled 'Account's Password Status' with two rows: 'Supervisor Password' and 'User Password', both showing 'OK'. The main part of the screen is a dark blue dialog box titled 'Set Supervisor Password'. It contains three input fields: 'Enter Current Password', 'Enter New Password', and 'Confirm New Password'. Each field is followed by a black rectangular redaction box. At the bottom right of the dialog box are two buttons: 'OK' and 'Cancel'. Below the dialog box, there's a navigation bar with a back arrow, the text 'Advanced Security Boot', and a forward arrow. On the right side of the navigation bar, there's a 'Home' button and a 'Cancel' button. The device's logo is visible in the top right corner of the screen.

Security

Account's Password

Set or change the Supervisor or User's password

Account's Password Status

Supervisor Password: OK

User Password: OK

Set Supervisor Password

Enter Current Password

Enter New Password

 
Confirm New Password

OK Cancel

Advanced Security Boot


Home Cancel Save Boot

5 When the following message appears, click **[OK]**.

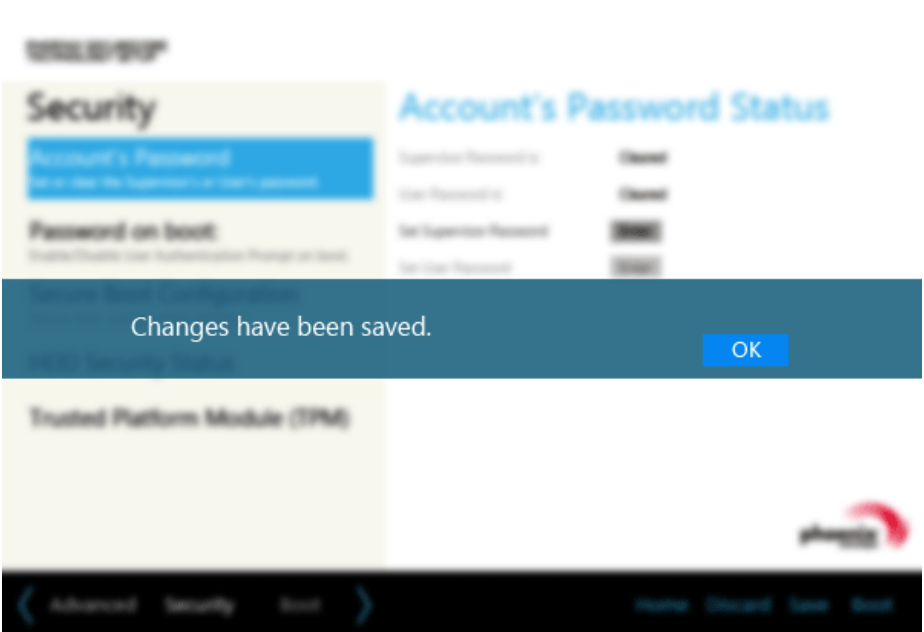


6 To save the changes in system setup, press **[F10]**.

 - 7 When the following message appears, click **[YES]**. The PC will restart.

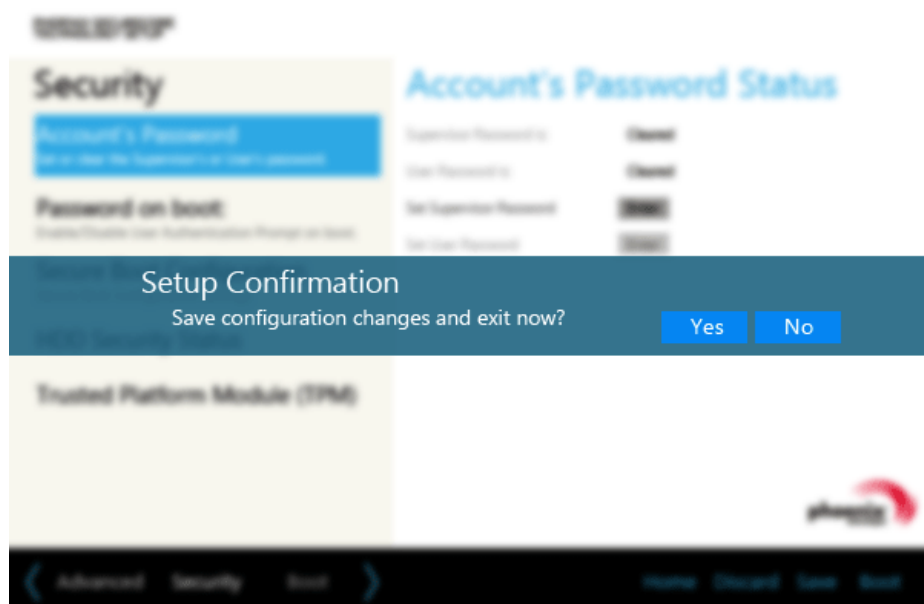


Deleting the Password (Set SSD Password)

 - 1 Execute System Setup, enter the password, and press the **[Security]** button.

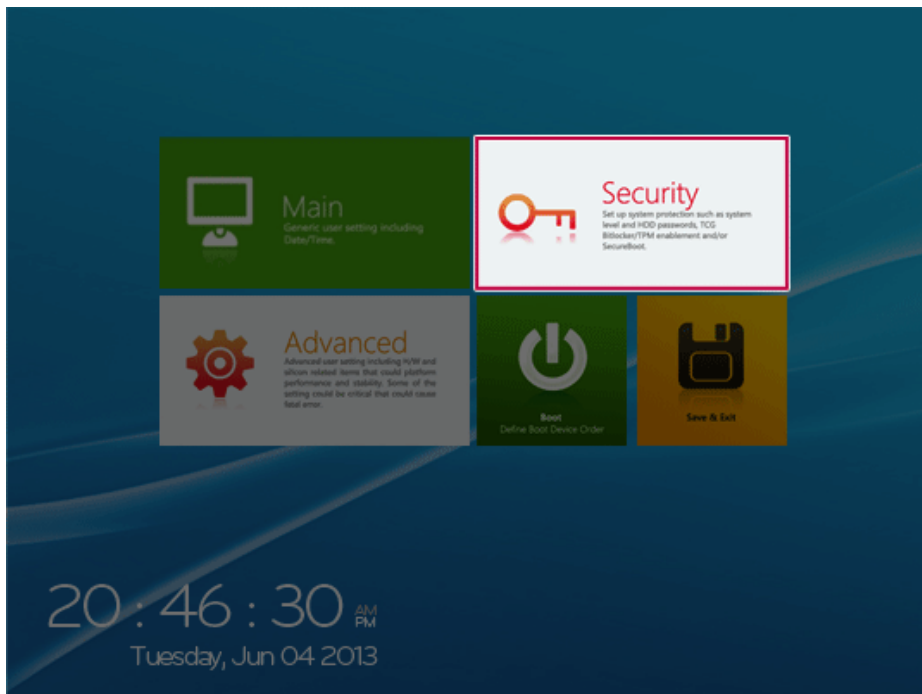


- 2 When the **[Security]** menu appears, click the **[HDD Security Status]** button.

 
- 3 When the following screen appears, click **[Enter]** in the **[Set SSD User Password]** menu.

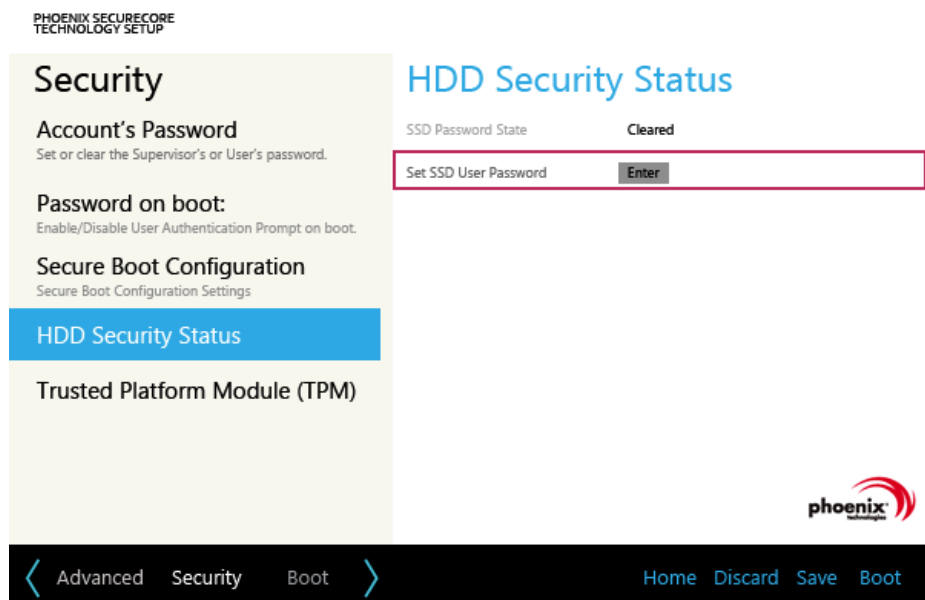

 
- 4 When the following message appears, enter the current password in the **[Enter Current Password]** field.

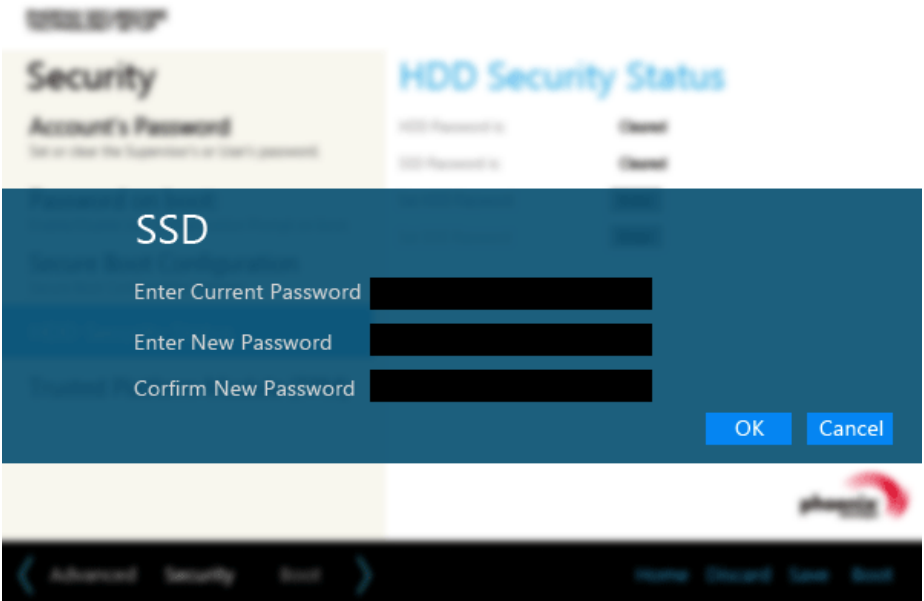

 - 5 Press [Enter] in **[Enter New Password]** and **[Confirm New Password]**.

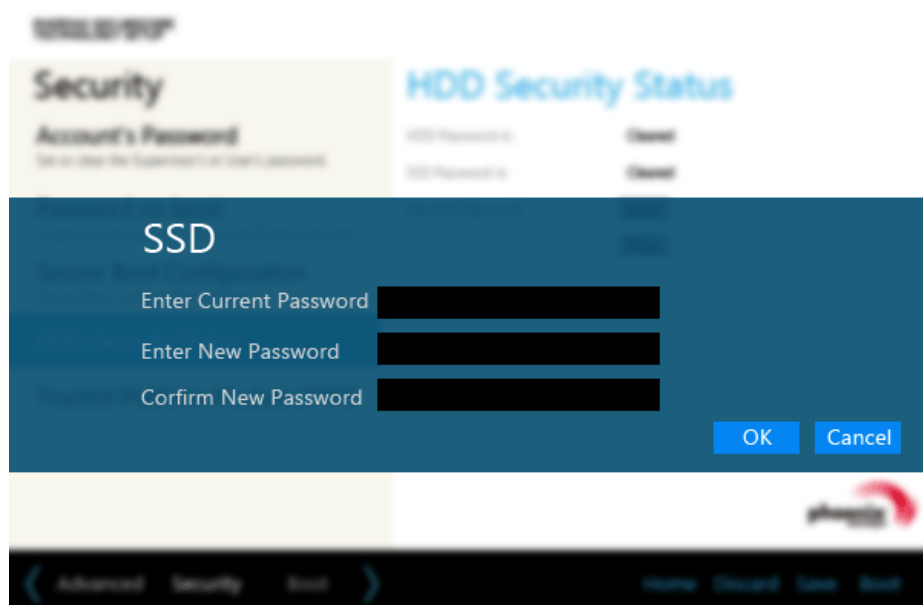


 6 When the following message appears, click **[OK]**.

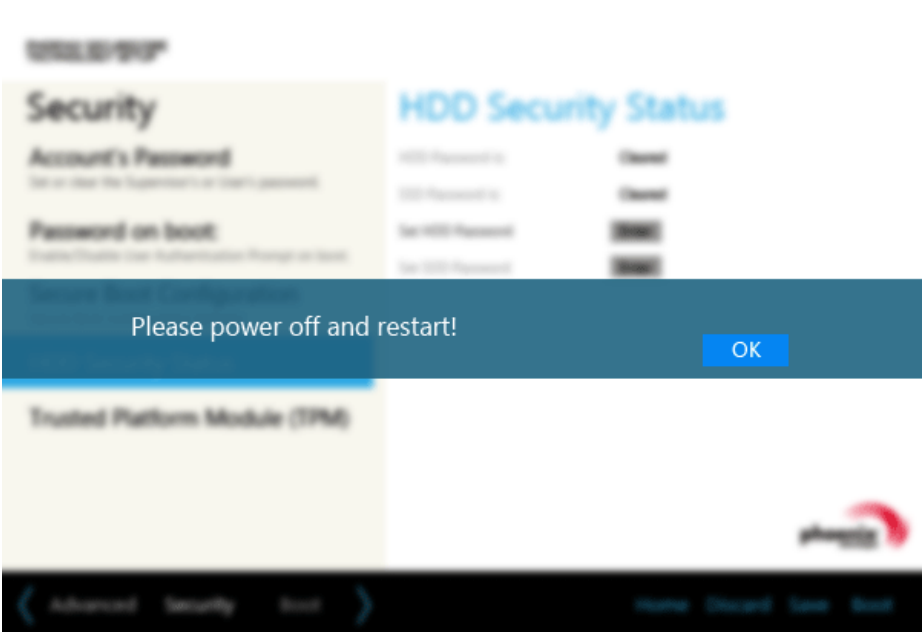

7 To save the changes in system setup, press **[F10]**.

 - 8 When the following message appears, click **[YES]**. The PC will restart.

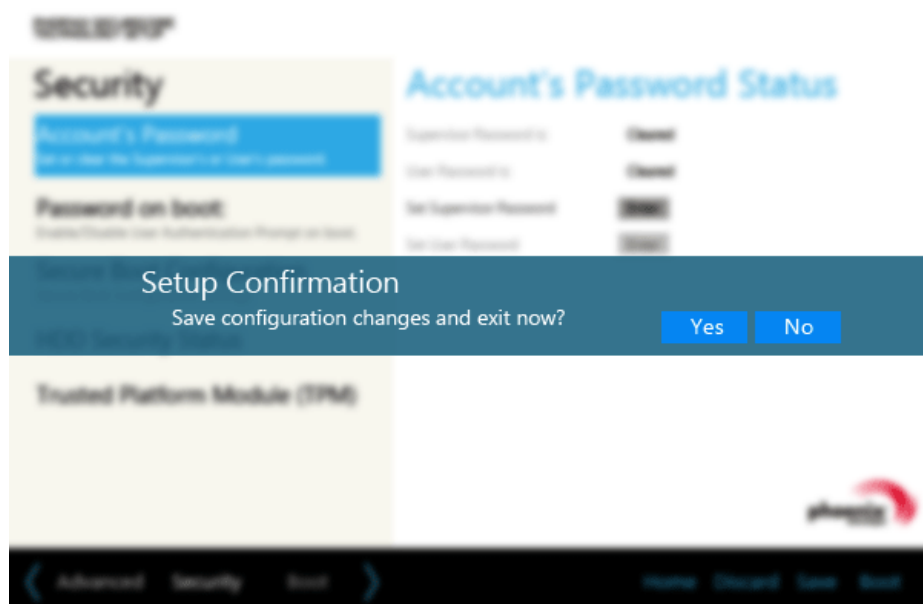

Restoring the Factory Default Settings

If you have changed the system setup by mistake, you can restore the system default settings.

- 1 After opening the system setup screen, click the **[Save & Exit]** button.



- 2 When the **[Exit]** menu appears, click **[Load Setup defaults]**.

PHOENIX SECURECORE
TECHNOLOGY SETUP

Exit

Exit Saving Changes

Equal to F10. Save all changes of all menus, then exit setup configure driver. Finally resets the system auto..

HDD Security Status

Equal to ESC, never save changes, then exit setup configure driver.

Load Setup Defaults

Equal to F9. Load standard default values.

Load Optimized Defaults

Load setting for optimized boot time and system performance.

Discard Changes

Load the original value of this boot time, not the default setup value.

Save Changes

 
Save all change of all menus, but do not reset system.



◀ Boot Exit Main ▶


Home Discard Save Boot

- 3 When the following message appears, click **[Yes]**. The settings will be reset to the factory default.

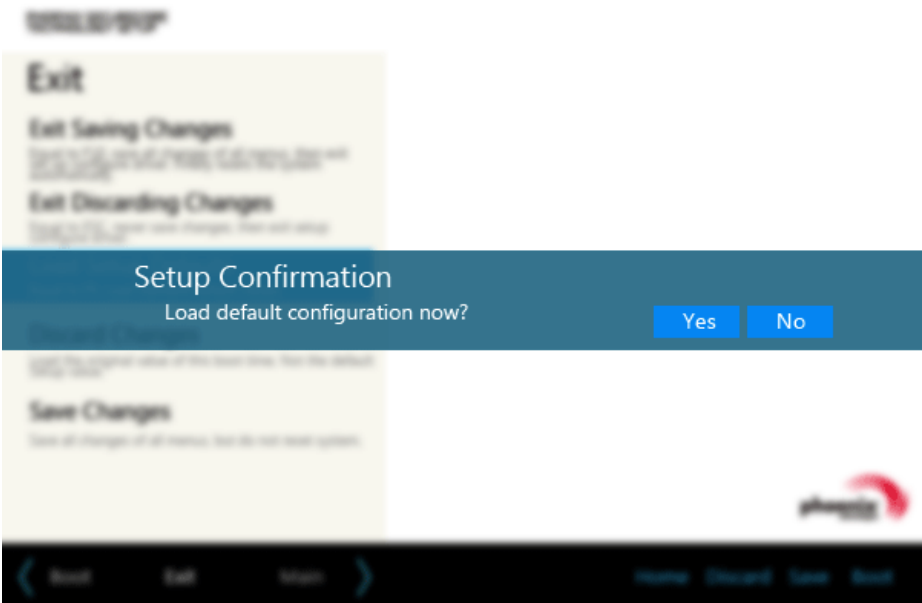

- 4 To save the changes in system setup, press [F10].

 5 When the following message appears, click **[YES]**. The PC will restart.

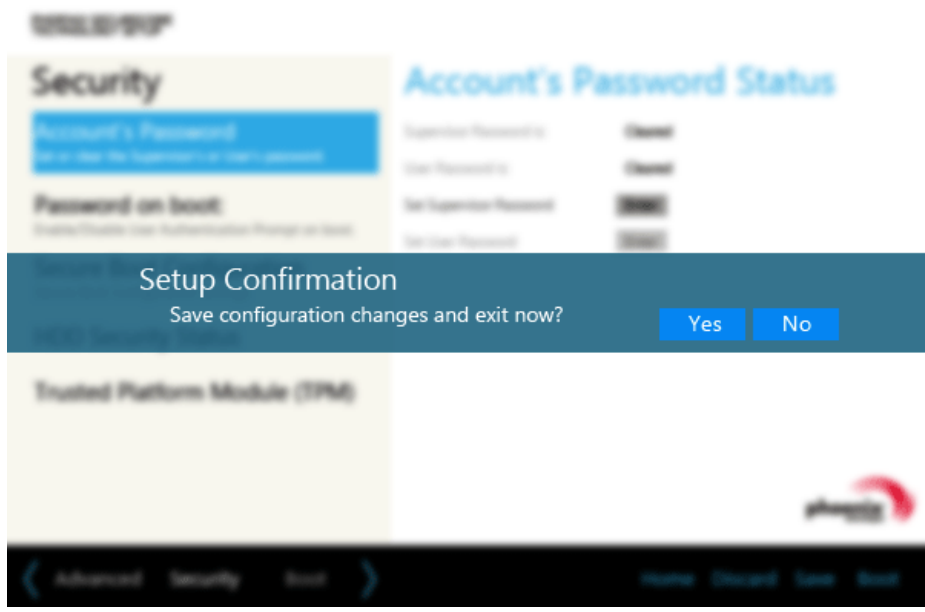

TIP

- You may press [F9] to use the **[Load Setup defaults]** menu.

Changing Boot Order

The user can change the boot order according to his or her needs, or select a boot device

The model in the example can differ from actual models and is subject to change for performance improvements, without prior notice.

TIP

 
To use the system setup (F2), booting device selection (F10), or recovery (F11), you need to restart the system (click [Restart] in the system power menu) and then immediately press the corresponding function key due to the fast booting speed.

Changing Boot Order


- 1 Press the [F2] key after re-booting the system.



- 2 When the system setup screen appears, click the **[Boot]** button.

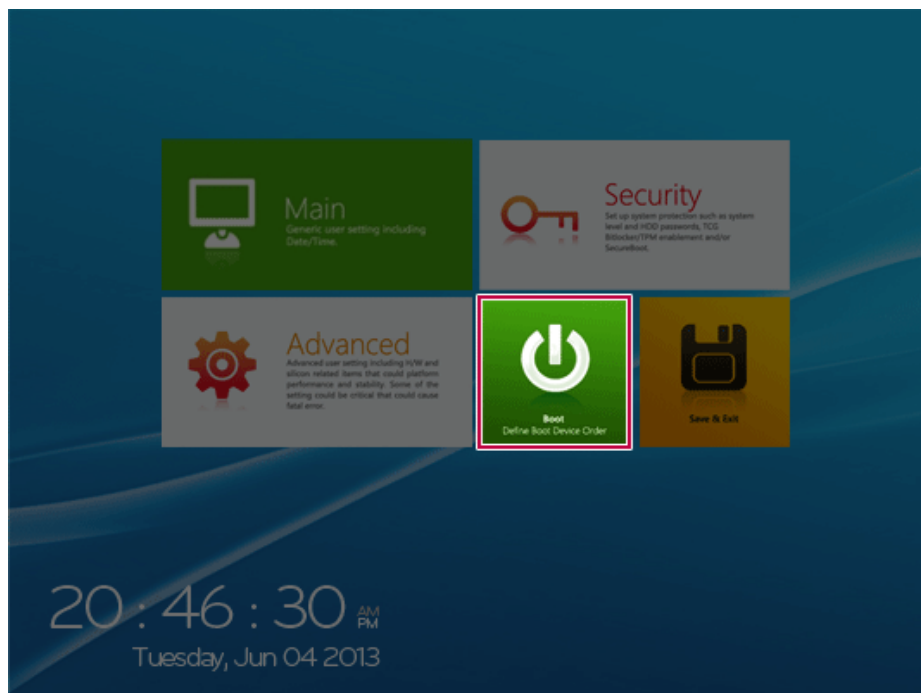


- 3 Drag the icon of the device to change the booting order in the **[Edit Boot Order]** menu to change the booting order.

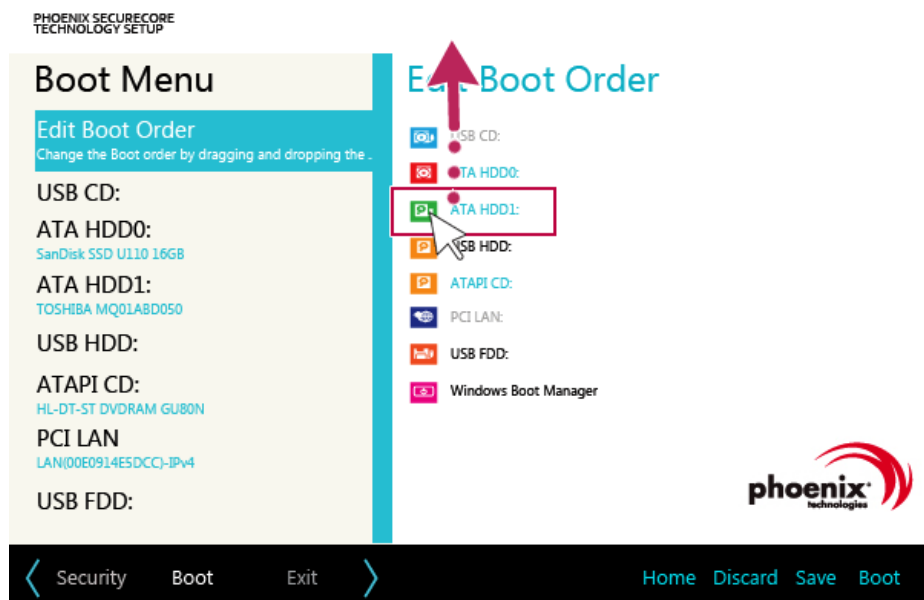 

- 4 To save the changes in system setup, press [F10].

 - 5 When the following message appears, click **[YES]**.

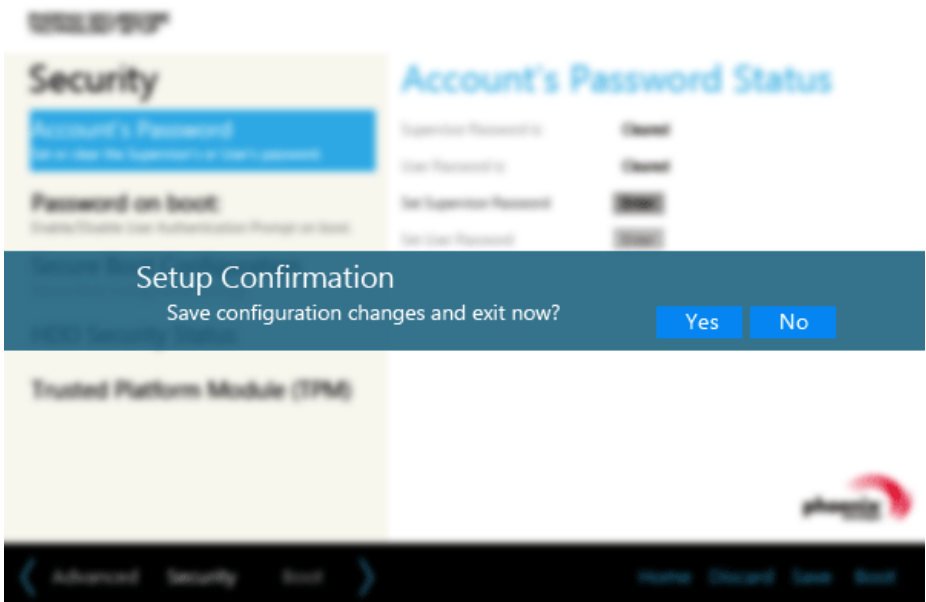


- 6 The changes are saved and the system reboots.

Selecting a Boot Device to Use

- 1 Press the [F10] key after re-booting the system.



 - 2 When the Select Boot Device screen appears, select the device.

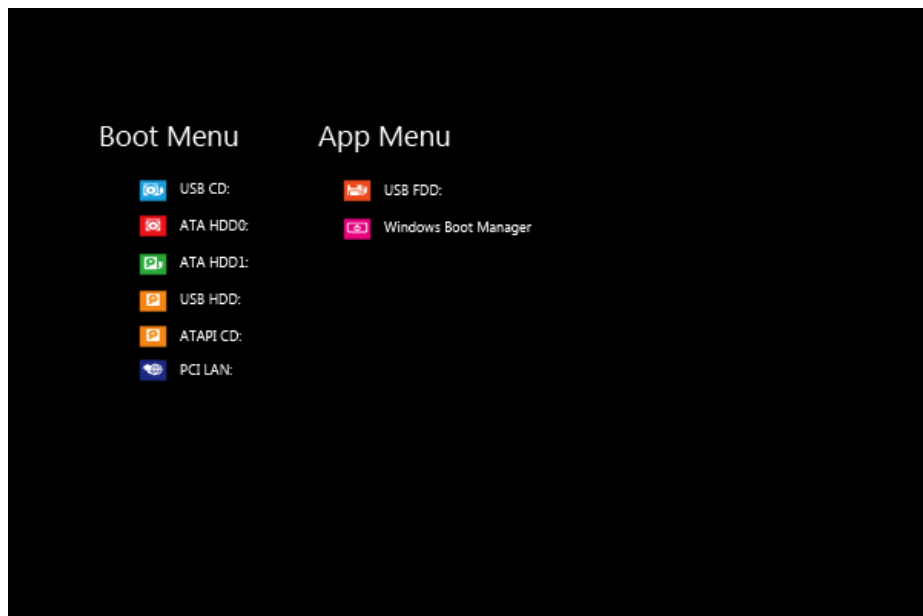


- 3 Boots using the selected device.

Windows 8.1 Auto Scaling



Windows 8.1 **Auto Scaling** feature may blur the screen or display some icons and texts larger.

Change the DPI scaling to fit for you as follows:

   - 1 On the Start screen, click the **[Desktop]** tile to convert the screen to the **Desktop** screen.
- 2 Right-click with the mouse on the desktop and select **[Personal Settings] > [Display]**, and then check **[Select the same size adjustment for all displayed items]**.

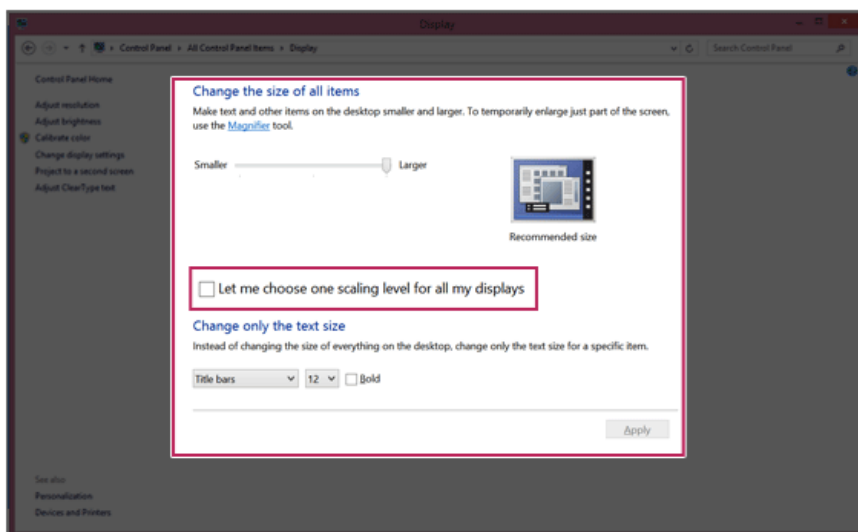

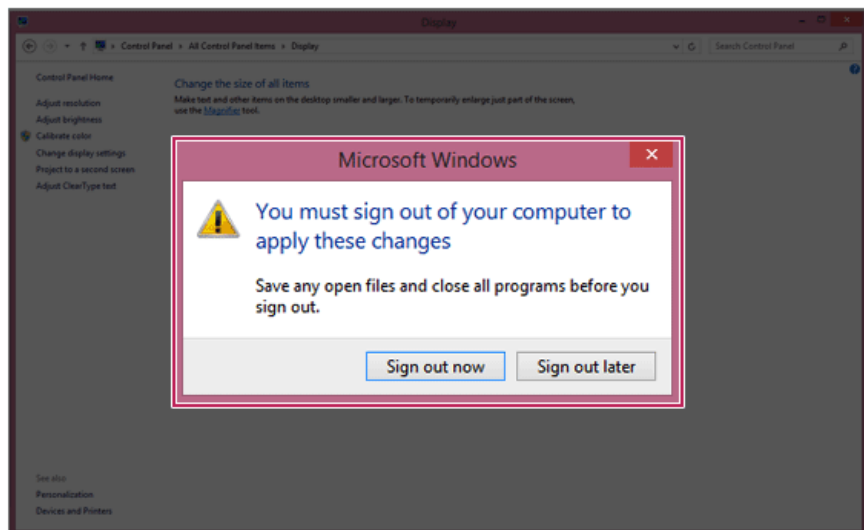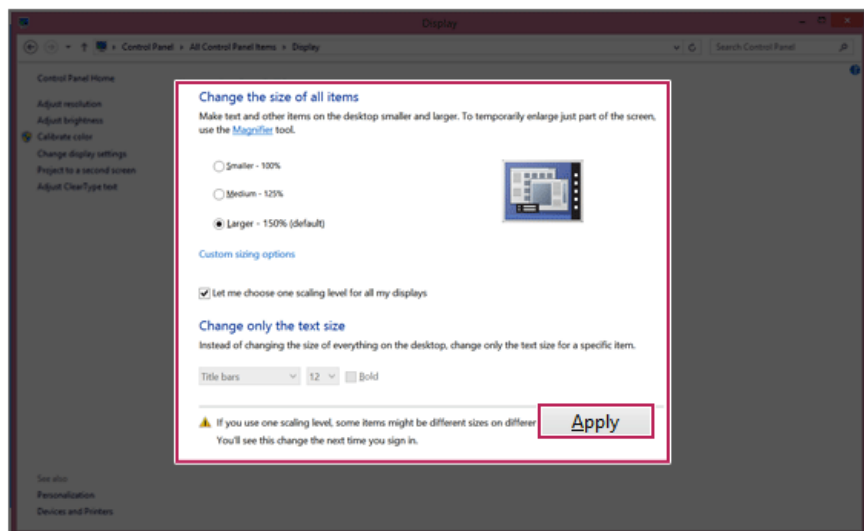


3 Select an item size to proceed as instructed.



Using Instant Booting

Instant Booting allows the system to boot automatically when the notebook PC cover is opened, so that you can use the system without pressing the power button.

 - 1 On the Start screen, press the [] tile, or on the Desktop, press the [] icon to run [LG Control Center].
- 2 On LG Control Center screen, set the [Instant Booting] to [ON].

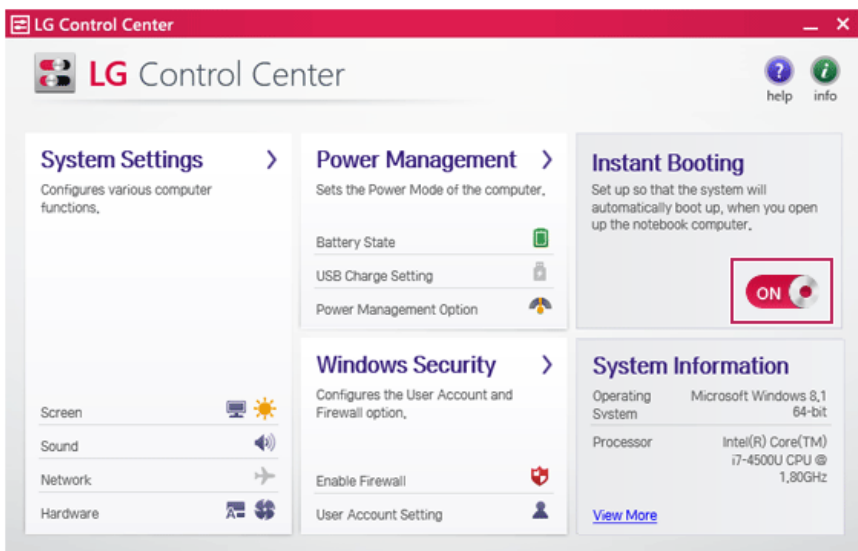

- 3 Shutdown the system and close the notebook PC cover.
- 4 When the cover is opened, the PC turns on and the system starts to boot automatically.

FAQ

FAQ Content

Recovering from a Boot Failure

If booting is impossible due to a serious error with the system, you can recover the system using **LG Recovery Center RE**.

CAUTION

If you have deleted the restoration data in the protected area of the disk, the restore function may not work.

 
Using the **LG Recovery Center RE**

CAUTION


All data is lost during the initialization, so you must backup all critical data in advance.

- 1 Turn on the PC and press [F11].


- 2 When the following screen appears, select a language you want to use and then click [Next].

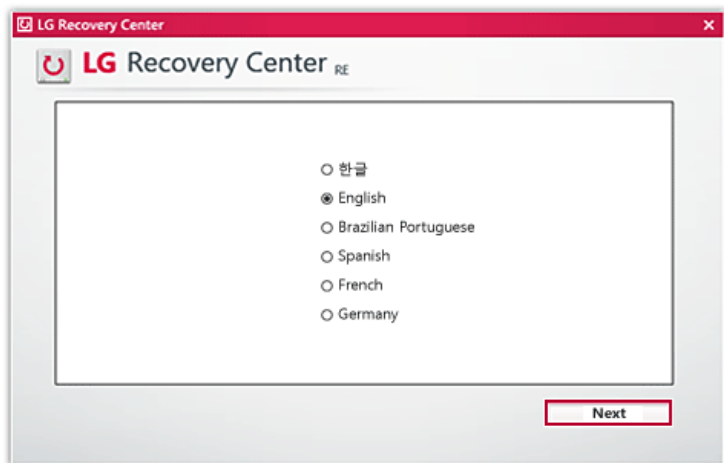

 - 3 When the following screen appears, select the [Agree] button and then click the [Next] button.

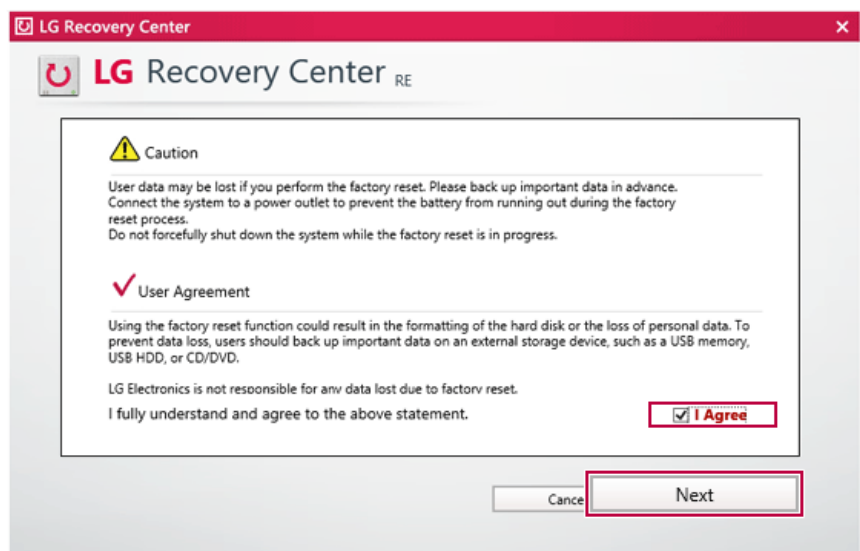

 - 4 When the factory reset has been completed as shown in the following figure, click the [Complete] button and then restart the system.

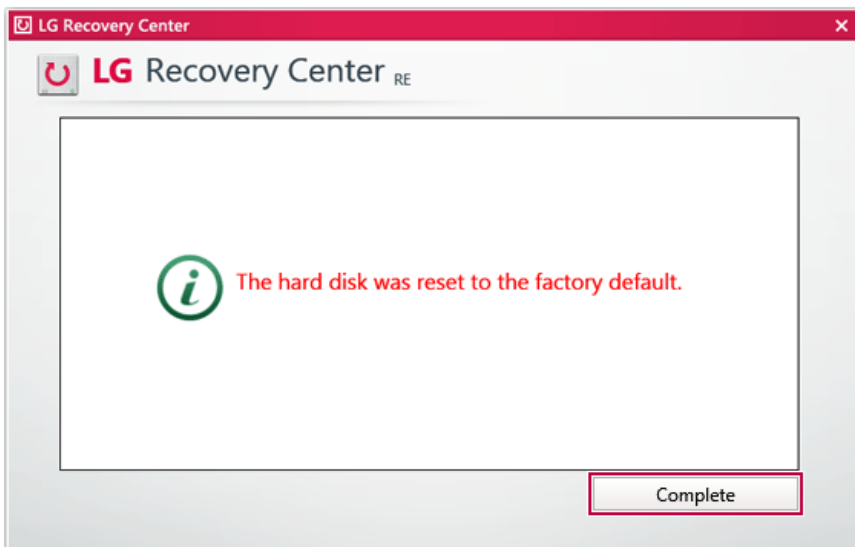

Recover by Using a Recovery Drive

If it is impossible to recover by using [F11], you can recover the system through a recovery drive.



TIP

 
To recover by using a recovery drive, you must have the recovery drive made through **LG Recovery Center's** [Create Recovery Drive].

- 1 Connect the recovery drive to the USB port of the PC.
- 2 Turn on the PC and press [F10].
- 3 When the screen for selecting the boot device appears, select the connected recovery drive and click [Enter].
- 4 Select the [Troubleshooting] menu.
- 5 Select the item you want and recover the system following the instructions.

Using Instant Booting

Instant Booting allows the system to boot automatically when the notebook PC cover is opened, so that you can use the system without pressing the power button.

- 1 On the Start screen, press the [] tile, or on the Desktop, press the [] icon to run [LG Control Center].
- 2 On LG Control Center screen, set the [Instant Booting] to [ON].

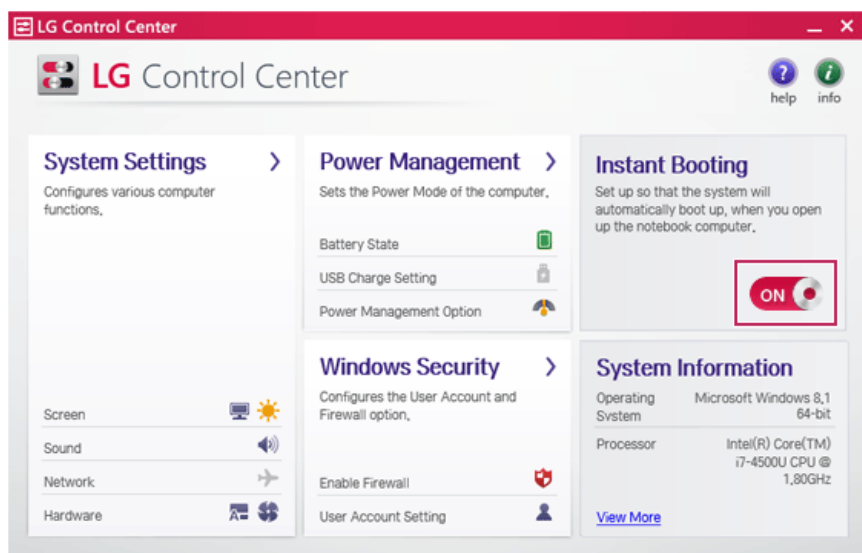


- 3 Shutdown the system and close the notebook PC cover.
- 4 When the cover is opened, the PC turns on and the system starts to boot automatically.

Windows 8.1 Auto Scaling



Windows 8.1 **Auto Scaling** feature may blur the screen or display some icons and texts larger.

Change the DPI scaling to fit for you as follows:

 - 1 On the Start screen, click the **[Desktop]** tile to convert the screen to the **Desktop** screen.
- 2 Right-click with the mouse on the desktop and select **[Personal Settings] > [Display]**, and then check **[Select the same size adjustment for all displayed items]**.

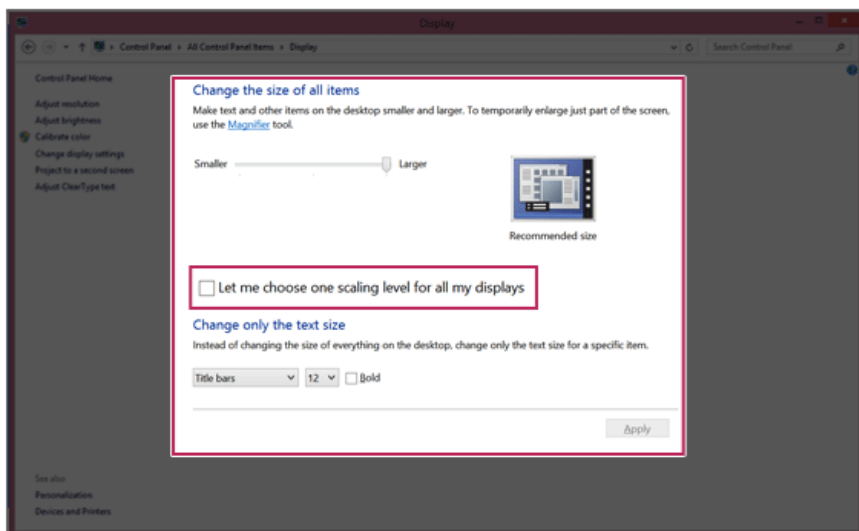

  3 Select an item size to proceed as instructed.

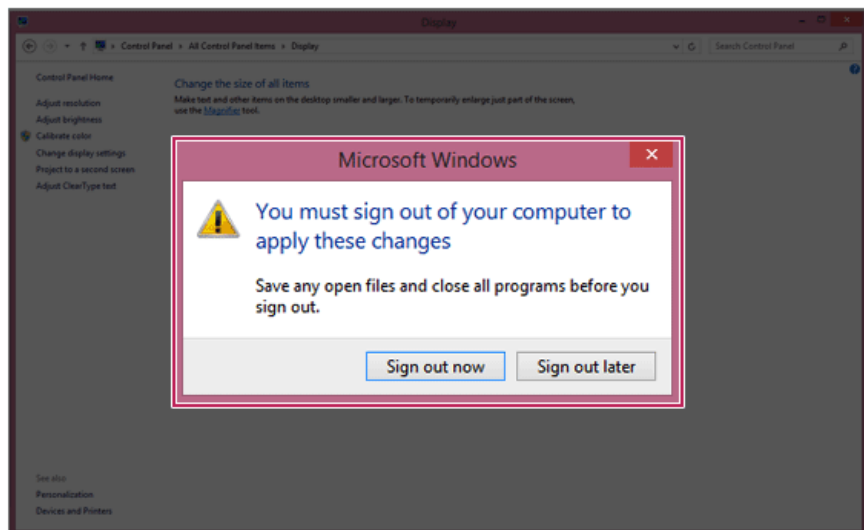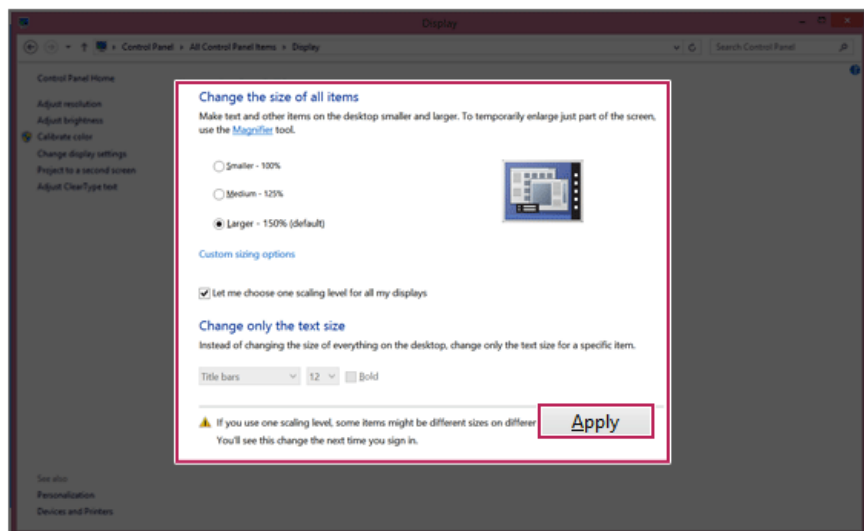

LG Recovery Center

If the system has an error, you can use **LG Recovery Center** to use Windows 8.1 recovery function to recover or restore the system to its initial pre-purchase state.

TIP

 
LG Recovery Center uses the Windows 8.1 recovery function.

For more information about Windows 8.1 recovery, refer to [Windows Help and Support].

CAUTION

If you have deleted the restoration data in the protected area of the disk, or have arbitrarily installed another operating system, the restore function may not work.

Click the [] icon in Desktop to run **LG Recovery Center**.

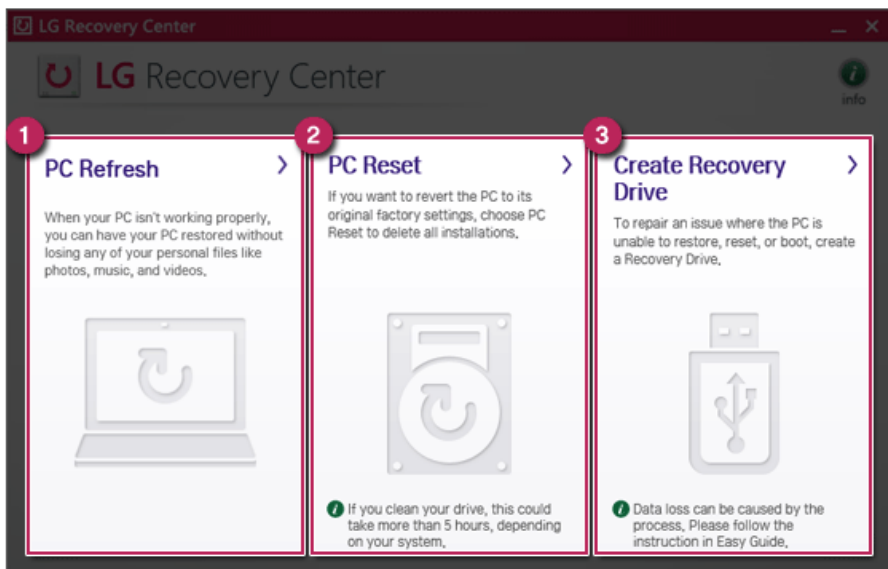

- 1 PC Refresh : Recovers the PC without losing any personal files.

CAUTION

 
PC settings are reset to default and any user-installed software will be deleted.

- 2 PC Reset : Removes all items from the system and restores the system to its initial pre-purchase state.

CAUTION

All data is lost during the initialization, so you must backup all critical data in advance. It may take about 5 hours or longer depending on the system conditions.


- 3 Create Recovery Drive : You can create a recovery drive in Windows as a precaution against a system failure that prevents you from entering the operating system, or any other severe system issues.
- a When the following screen appears, select [Copy the recovery partition from the PC to the recovery drive.] and click [Next].

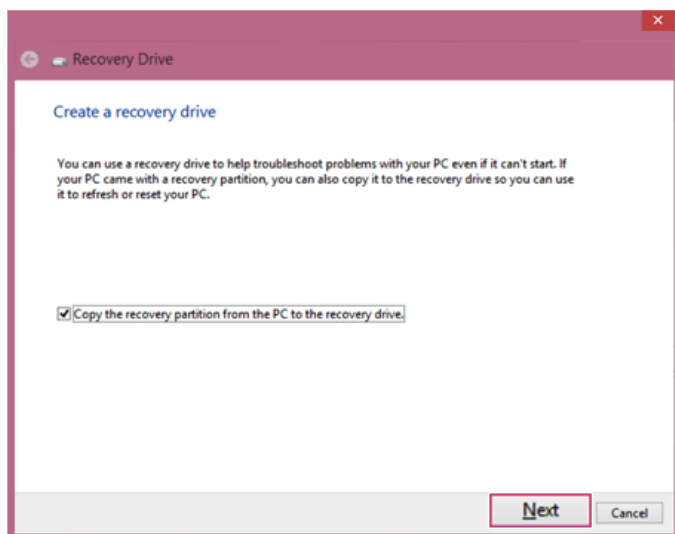

- b When the following screen appears, select the USB flash drive and click [Next].

CAUTION

 This process deletes all the data on the storage device designated as a recovery drive. Make sure to back up its data in advance.

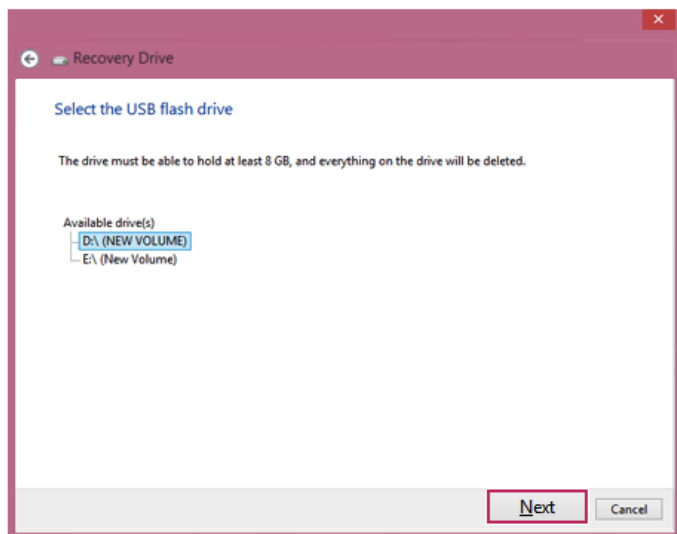


- c Once the storage device is ready, click [Finish] to create a recovery drive.

CAUTION

Select [Delete the recovery partition] while creating a recovery drive to remove the recovery partition in the PC.

 Once the recovery partition is removed, you cannot use the recovery function of the PC. You can only recover the system using the recovery media.

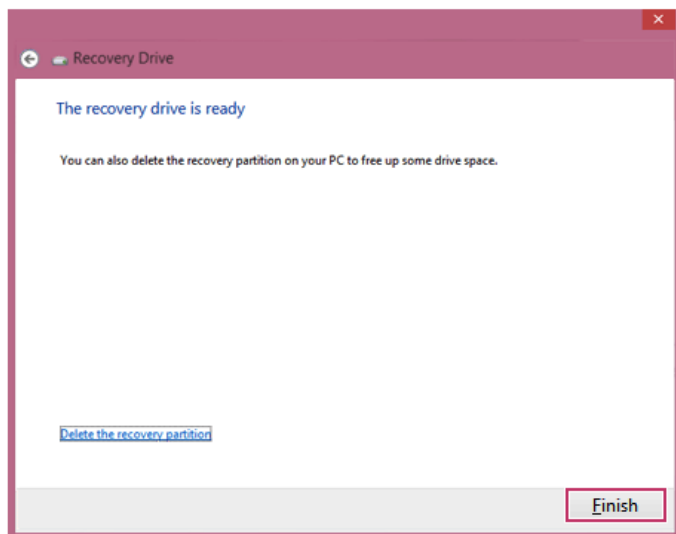

Connecting a Monitor / TV

TIP

- Ensure the monitor power is off before connecting the external monitor to the PC.

Connecting to the HDMI Port

HDMI is a high-speed multimedia interface that can transfer uncompressed full digital audio and video signals.

LG Notebook PC supports either HDMI or SPDIF.

In some models, DTS Sound may not work when you use HDMI.

- 1 Connect the HDMI cable to the PC and the external device (TV, monitor) that supports HDMI.
- 2 HDMI port transfers both video and audio simultaneously. So you don't need a separate audio connection.



- 3 Press [Fn]+[F7] to redirect the video output to the external device.

TIP**Switching screen output device by pressing [Fn]+[F7]**

- [Press [Fn] + [F7] to display the Toggle Screen menu. Then select the screen mode you want and press [Enter].

CAUTION

- If you do not set Speaker as the default value after disconnecting the HDMI cable, the system may not produce any sound.
- If a program was running already, you need to exit and restart the program for it to produce sound.

Using a Wireless or Regular Router

A wireless / regular router connects several PCs and mobile devices etc. to one internet line and enables the use of internet and the network.

A wireless / regular router has to be bought separately. Refer to the manual provided by the manufacturer for instructions.

Connecting a Wireless or Regular Router

If one internet line is used with a wireless / regular router and several devices are connected, this may result in a slower connection.

In case of a wireless network, it is recommended to change the network name and security settings for a more secure connection.

Network speed can differ according to operation environment and specifications.

- 1 Connect the internet cable of the modem that was provided by your internet provider to the router's WAN port.
- 2 Connect all devices (PC, IPTV, internet phone, etc.) with a LAN cable to LAN ports 1 to 4 of the router.

The number of LAN ports can vary for each router model.

- 3 Please refer to the manual provided by the router manufacturer for setup of the network and Internet.

Wireless Network

The wireless network (Wireless LAN) is the network environment that connects a PC with the internet provider or company network through an Access Point (wireless or regular router).

Wireless network is optional, and so it may not be installed in some models.
Turning On/Off Airplane Mode

Prior to using the wireless network, press [Fn] + [F6] to turn off Airplane Mode.

Pressing [Fn] + [F6] keys will turn on or off. If you are not going to use the mode, keep the mode turned on to reduce the battery power consumption.

Using the Wireless Network

If an Access Point (wired or wireless router) is in the vicinity of the PC, the wireless network can easily be accessed.

During the search for a wireless network (Wireless LAN), various Access Point may be found according to the location where the PC is used.

In case no accessible wireless network (Wireless LAN) is near the PC, no Access Point might be found.

 
A password protected Access Point cannot be accessed without knowing the right password.

- 1 Run **[Charms]** on the Desktop or the Start screen.




- 2 In the Charms, click **[Settings]** > **[Wireless Network Icon]**.

- 3 Near available Access Point(wireless network) is automatically searched.

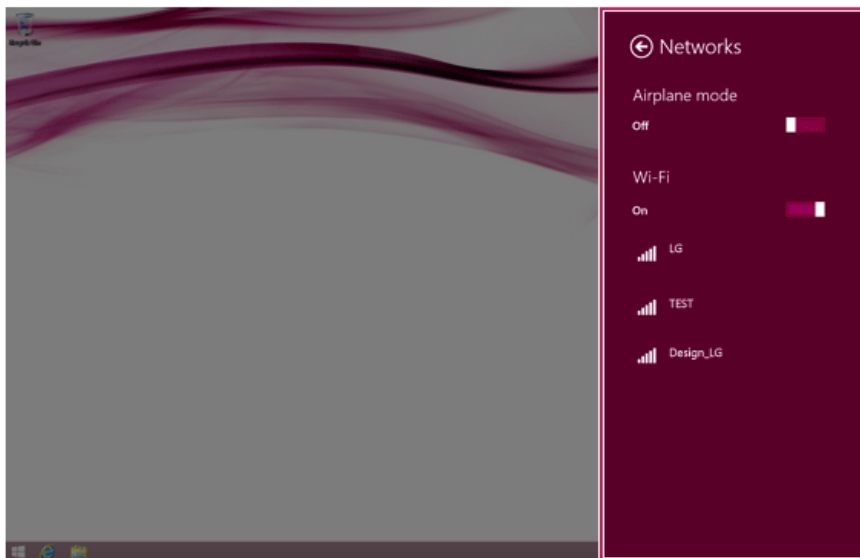

- 4 Select the Access Point (wireless network) you want to use and click **[Connect]** to connect to the Access Point.

 If a password is set for the wireless network, the Enter Password window appears.

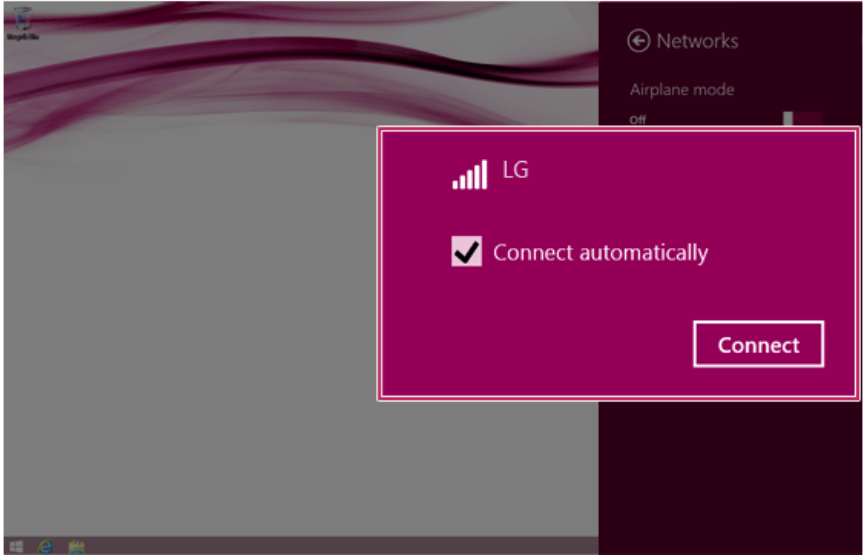

- 5 When the connection is established, **[Connected]** is displayed in the connected Access Point(wireless network).
- 6 Click the [Internet Explorer] icon in the taskbar to check whether the internet is operating normally.

Wired LAN

LAN is the network environment that users can connect to by using a cable to connect to their internet providers or the company's network.

Using Wired LAN

LAN is installed with an automatic IP (DHCP) as default value.

Please refer to the following instructions to find out more about setting up an automatic IP (DHCP) or manual IP.

- 1 Connect the LAN adaptor to the micro USB port on the PC.

TIP

The recommended network cable for the optimal network environment is CAT5 or higher.

The network (LAN) cable may be connected when the LAN adaptor is used.

The LAN adaptor may be separately purchased at LG Service Center.

 


- 2 Connect LAN cable to the LAN port.




- 3 On the Start Screen, click the Desktop tile to convert to the Desktop screen.


4 Run **[Charms]** on the Desktop.

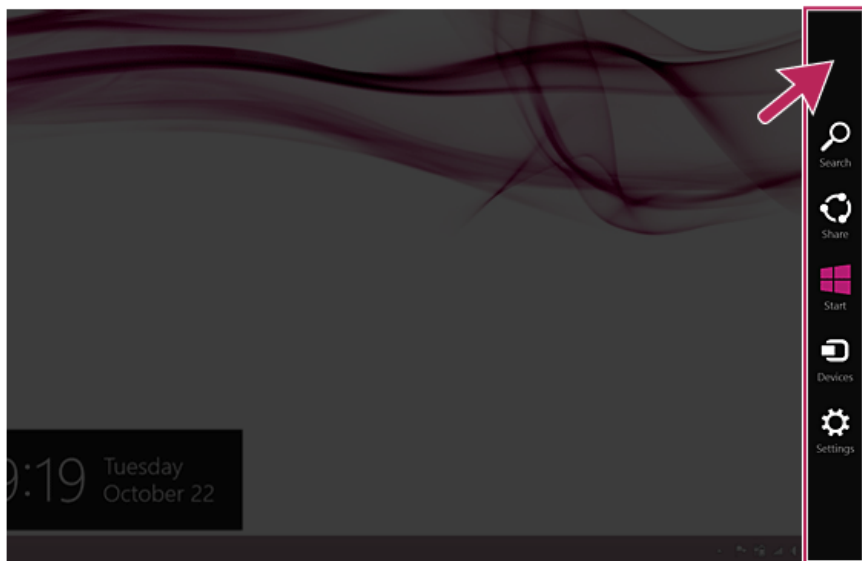

 
- 5 In the Charm Menu, click **[Settings]** > **[Control Panel]** > **[View By]** > **[Small Icon]** > **[Network and Sharing Center]**.

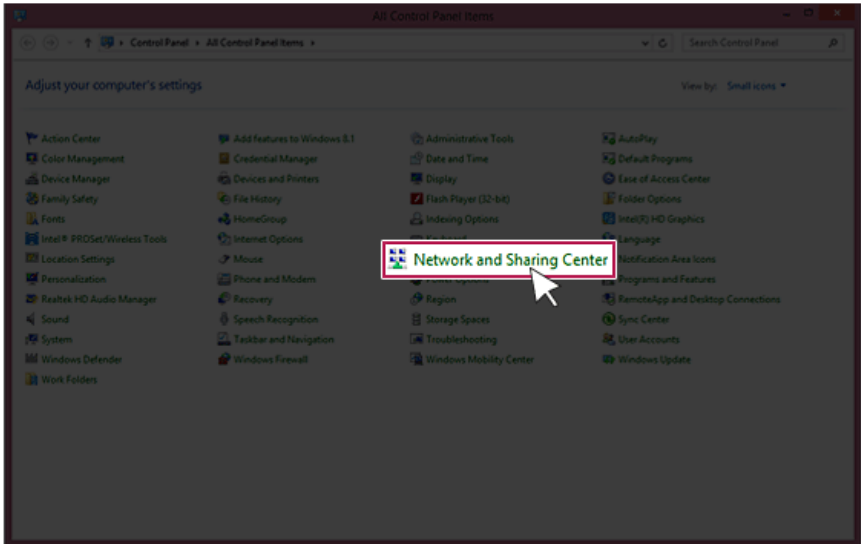


6 Click **[Change Adapter Settings]**.

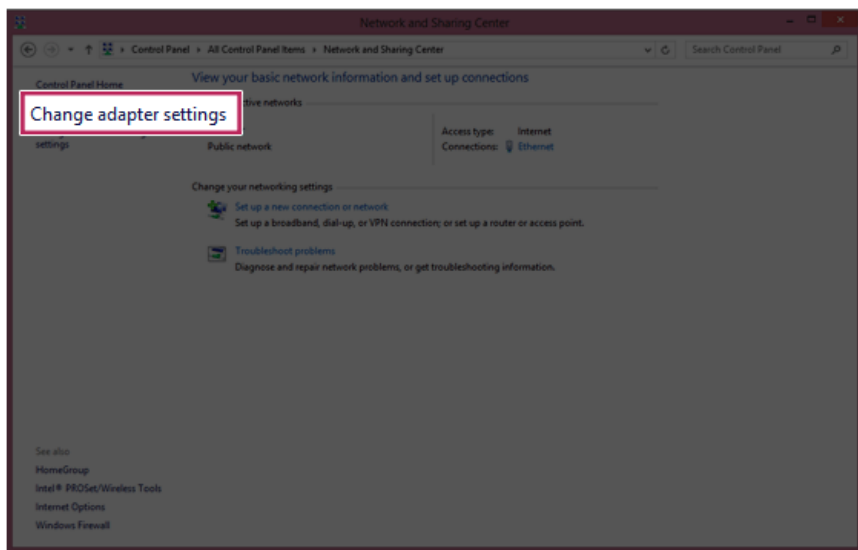 

 
- 7 Right-click **[Ethernet]** and select **[Properties]**.

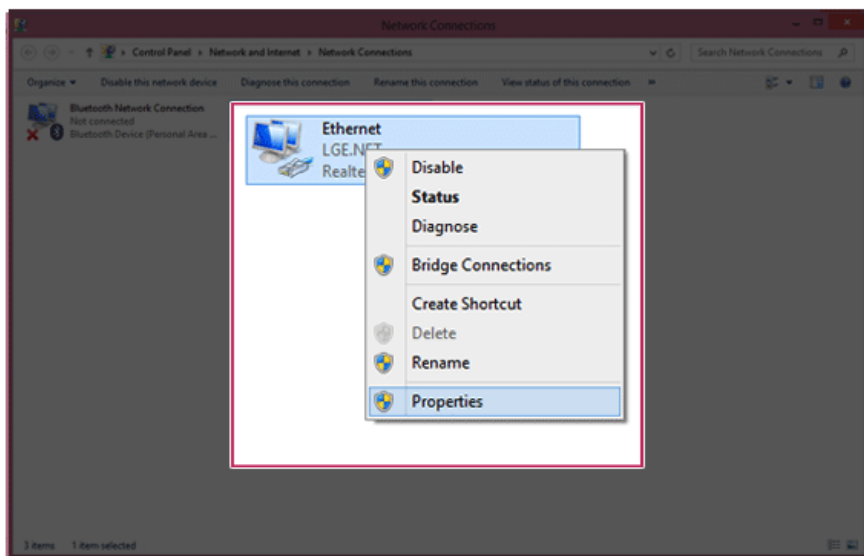

 - 8 Select **[Internet Protocol Version 4 (TCP/IPv4)]** and click **[Properties]**.

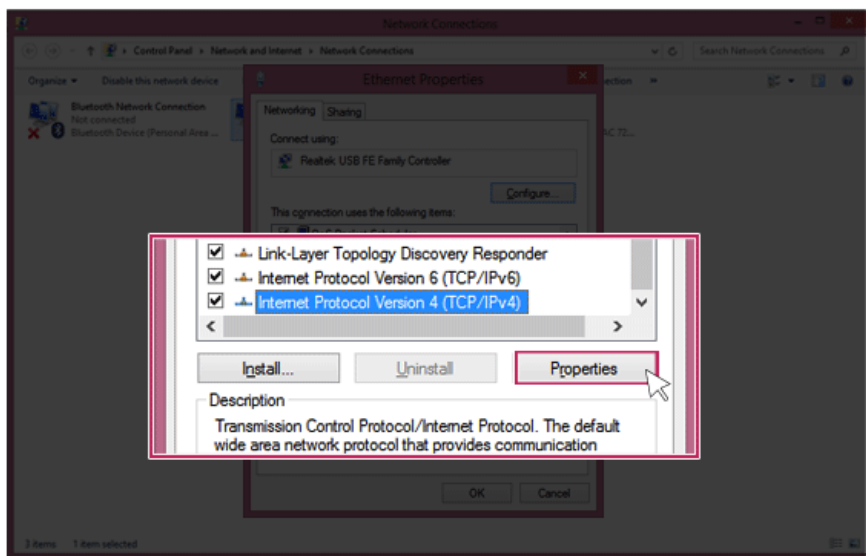

 - 9 If you want to use an automatic IP(DHCP), select **[Obtain an IP Address Automatically]**. If you want to use a manual IP, select **[Use Following IP Address]** to enter the address.
Please ask the network administrator about obtaining a manual IP.

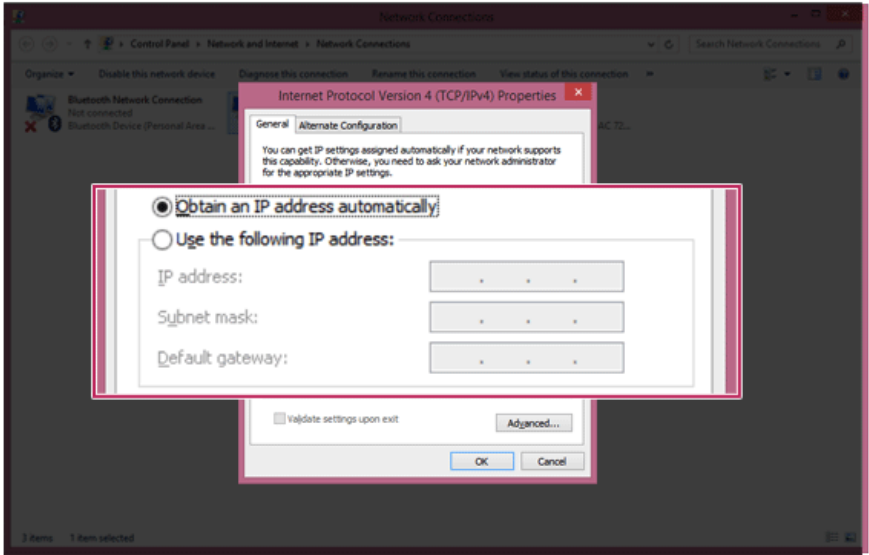

- 10 Press **[OK]** to complete the network setup.
- 11 Click the [Internet Explorer] icon in the taskbar to check whether the internet is operating normally.