 



# WIRELESS CHARGING CLOCK RADIO + SPEAKER

## PHONE SUPPORT BLOCK


1. After setting up the interchangeable legs in your preferred configuration, place your phone on the wireless charging surface.
2. Once your phone is charging, align the phone support block to prevent your phone from sliding and maintain charging.
3. Peel the plastic cover off the bottom of the phone support block to attach it in the determined location on the charging surface.

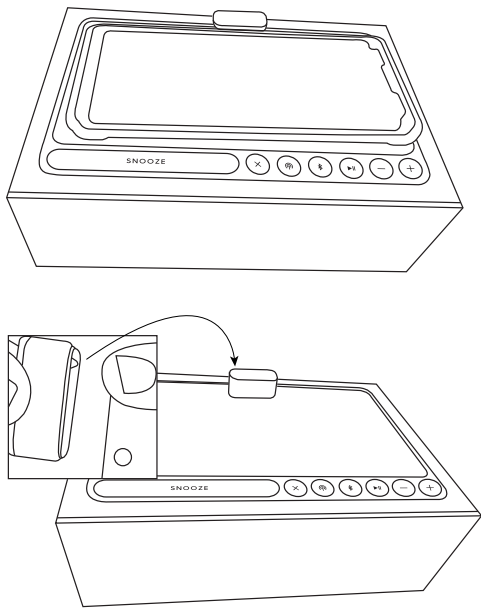

 
## INTERCHANGEABLE LEGS

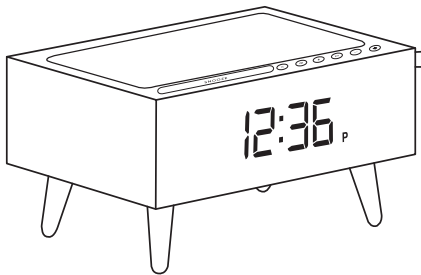

ELEVATED

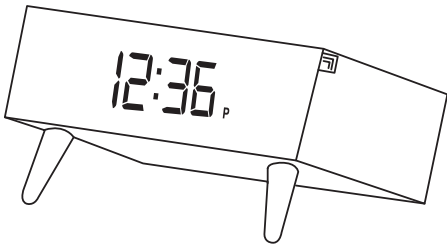 

ANGLED

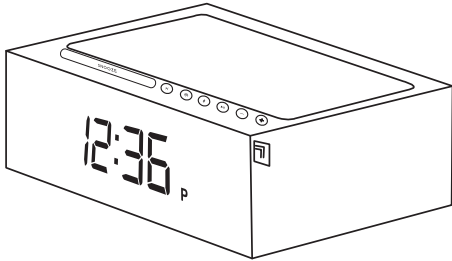 

GROUNDED

© 2019 MerchSource, LLC. Irvine, CA 92618. All rights reserved.

For technical support, please call 1-800-374-2744.

**KEEP THIS INSTRUCTION MANUAL AS IT CONTAINS IMPORTANT INFORMATION FOR FUTURE REFERENCE.**

Due to continuous product improvements, the picture on the manual may differ slightly from the actual product.

# WIRELESS CHARGING CLOCK RADIO + SPEAKER

## CONTENTS

- 1 Wireless Charging Stand
- 4 Tall legs
- 4 Short legs
- 1 Antenna
- 1 Charging Cable
- 1 Phone Support Block

 
## SPECS

- Input Power: 5V, 2A
- Output Power: 5W Charging
- Wireless Charging Version: Qi 1.2.4
- Bluetooth® Version 5
- Built-in Rechargeable 2200mAh Lithium-Ion Battery
- Speaker: 2 x 5W

- ⚠ Rechargeable Battery Warning:**
- This product contains batteries that are non-replaceable.
  - There is a risk of fire and personal injury if battery is punctured, damaged, or misused.
  - Do not dismantle, crush, incinerate or short-circuit battery.
  - Never expose battery to extreme temperatures or moisture.
  - Keep away from flammable materials and direct sunlight.
  - Only charge using the provided charger, cable, and/or adapters.
  - Rechargeable battery is only to be charged by an adult.
  - Adult supervision is required while charging the battery.
  - Allow battery to cool to room temperature before charging.
  - Charge on a non-flammable surface and keep away from flammable products.
  - Discontinue charging if battery becomes hot, swells, smokes, or gives off a strong odor.
  - Battery chargers used with the product are to be regularly examined for damage to the cord, plug, enclosure, and other parts. In the event of such damage, chargers must not be used until the damage has been repaired.
  - Recycle or dispose of battery according to federal, state, and local laws.
  - Keep these instructions for future reference.

© 2019 MerchSource, LLC. Irvine, CA 92618. All rights reserved.

For technical support, please call 1-800-374-2744.

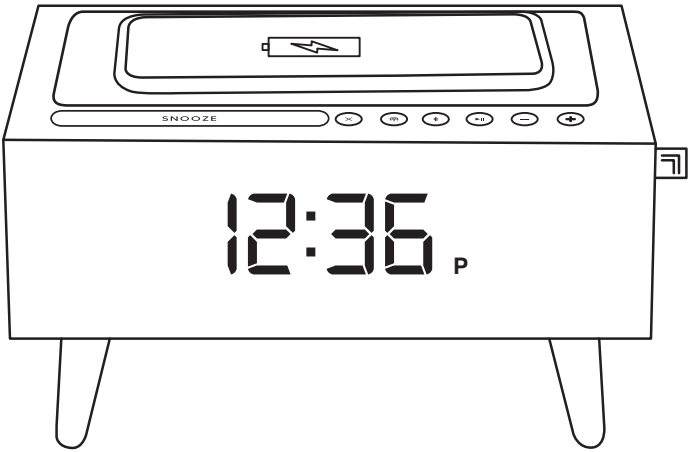

- SAFETY WARNINGS: PLEASE READ BEFORE USE**
- Not a children's item. Keep out of reach of children.
  - Use this item only for its intended purpose.
  - Place this item on a hard-flat surface away from liquids.
  - For indoor use only.
  - Do not expose to sunlight for extended periods of time.
  - Do not expose to extreme temperatures or moisture.
  - Thoroughly inspect products before every use. If the product appears worn, frayed/splintered, cracked, or broken in any manner, discontinue use and discard immediately.

**WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.
- This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment.
- Caution: To maintain the compliance with the FCC's RF exposure guideline, place the Wireless Charging Stand at least 20 cm from nearby persons.
- Shielded cables must be used with this unit to ensure compliance with the Class B FCC limits.


**KEEP THIS INSTRUCTION MANUAL AS IT CONTAINS IMPORTANT INFORMATION FOR FUTURE REFERENCE.**

 Due to continuous product improvements, the picture on the manual may differ slightly from the actual product.

# WIRELESS CHARGING CLOCK RADIO + SPEAKER

## BUTTON LAYOUT

- A. Snooze (5 min.)
- B. Cancel Function
- C. Radio On/Preset
- D. Bluetooth On/Off
- E. Play/Pause
- F. Volume Down
- G. Volume Up
- H. Select Down
- I. Select Up
- J. Display Brightness
- K. Alarm On/Off
- L. Radio Setting
- M. Alarm Setting
- N. Time Setting
- O. Power On/Off – Press and hold to turn unit on/off

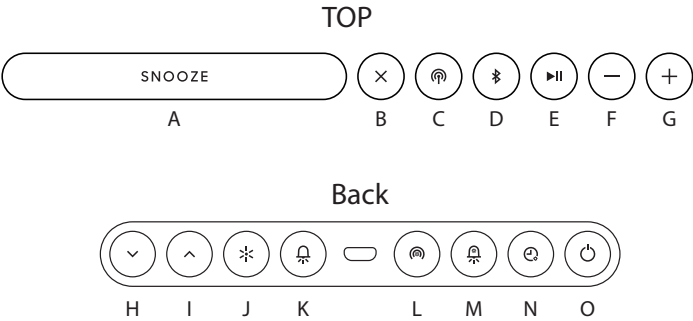

## INSTRUCTIONS

### Clock Settings

- Press and hold the button until the hours begin to flash.
- Press the button to toggle through hours and minutes.
- Adjust your selection by using the buttons.
- You can select either 12-hour or 24-hour time display options.

Note: The clock will exit to the primary screen after 5 seconds of inactivity.

### Alarm Settings

- Press and hold the Button until hours appear.
- Press the Button to toggle through hours, minutes, 2 alarm modes (default alarm tone and from FM radio), and volume adjustment
- Adjust your selection by using the buttons.
- Toggle an alarm on/off by using the . An alarm symbol will light up when the corresponding alarm is active.

Note: The clock will exit to the primary screen after 5 seconds of inactivity.

### FM Radio Settings

- Press the (Radio On/Preset) button on the top to turn the radio on.
- Press the (Radio Setting) button on the back to enter FM setting mode. Radio station will flash on LCD display.
- Press the buttons on the back to tune to the desired radio station.
- Press the (Radio Setting) button on the back again to save the station.
- Press the button on the back to select a station slot (1 – 6).
- Press the (Radio Setting) button on the back to save the station to the desired slot.
- Repeat steps 2 through 6 to set additional stations (up to 6 stations total).

Note: For improved FM reception, attach the included antenna and adjust its positioning.

### End Function

- Press the button

# WIRELESS CHARGING CLOCK RADIO + SPEAKER

 
## Bluetooth® Speaker

Your device must have BLUETOOTH® capability. Consult your device manufacturer or user manual if you are unsure if your device has this feature.

Turn off any devices that may have been previously paired to the speakers.

- Press and hold the BLUETOOTH® button to begin pairing your device.
- Place your device within 3 feet of speaker.
- Enable BLUETOOTH® on your device and search for new BLUETOOTH® devices. Refer to your device’s manual on how to enable and operate BLUETOOTH®.
- Select **SI CLOCK RADIO** from the list of BLUETOOTH® available devices.
- A tone coming from the speaker will notify you when the speaker is successfully paired.
- You can now stream music wirelessly from your device to your speakers.

Note: If you restart the speaker it will automatically pair with your device. A tone will notify you when the speaker is successfully paired.

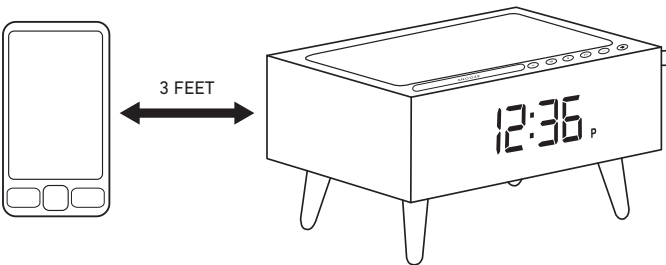

## Volume Adjustment

- Press the or buttons.

## Device Charging

- Remove any phone accessories. A non-metal phone case up to 3 mm thick can be used.
- Place your device on top of the clock with the screen facing up. If charging does not begin, center your device with the x on the mat.
- A white LED light located at the center of the stand will light up when your device begins to charge.

## Compatibility

- iPhone 8 series, iPhone X series, Samsung Galaxy S8/S9/S10 Series, Samsung Galaxy Note 8/9 Series
- Qi wireless technology enabled devices
- Non-metal phone case up to 3 mm thick

