

BTH-600 Manual

Bluetooth Speaker Microphone

Model: BTH-600

FCC ID. : XTS-BTH-600

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATIONS IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESRIED OPERATION

1 PTT

2 PTT



3 Microphone

4 Speaker

5 Logo Plate



6 Volume control button

7 LED Indicators

8 Clip



9 3.5mm jack

10 Power Switch

11 Mini USB

BTH-600

BTH-600 State and LED Flashing Pattern

BTH-600 State & Button Press	LED Message	Function
No link and no paired		
BTH-600 is OFF	No LED	BTH-600 OFF
BTH-600 is OFF; Press Power button and hold for 3 seconds.	Both Blue & Red LED ON for 1 second	Turn BTH-600 ON
BTH-600 ON; press and hold power button for 3 seconds	Red LED flashed 3 times then OFF	Turn BTH-600 OFF
BTH-600 is off; Press and hold power button for 6 seconds	Red & Blue LED flashes alternatively	Get BTH-600 into pairing mode
Unpaired or lost link	Blue LED flashes once every 2 seconds	No link, no pair
Stand-By mode	Blue LED flashes 3 times every 3 seconds	Standby
Press PTT button	Blue LED flashes 1 time every second	Start to talk
Press Volume Up/Down under stand-by mode		Make adjustment of volume

 
Pairing Manual for ICOM

1. Prepare the BTH-600 and ICOM radio



2. Power on BTH-600 and go to pairing mode

The LED is red/blue flashing

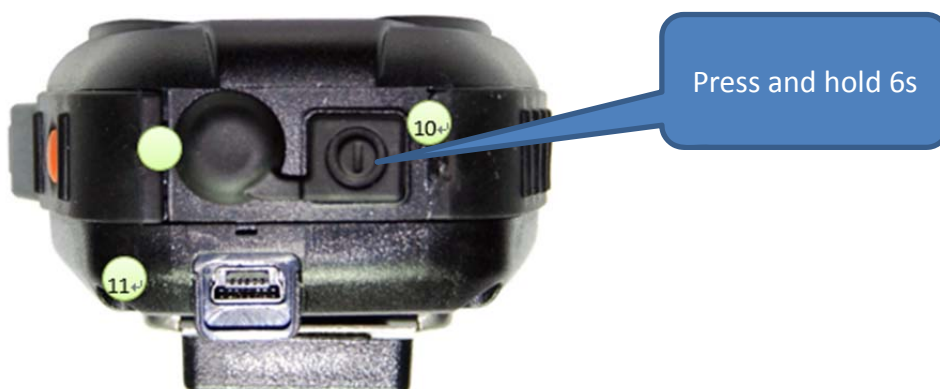

3. Press Menu on your ICOM to Bluetooth



4. Power on your ICOM Bluetooth



5. Go to BT Device List



 
6. Find Device



7. Select Headset



8. Waiting for the searching

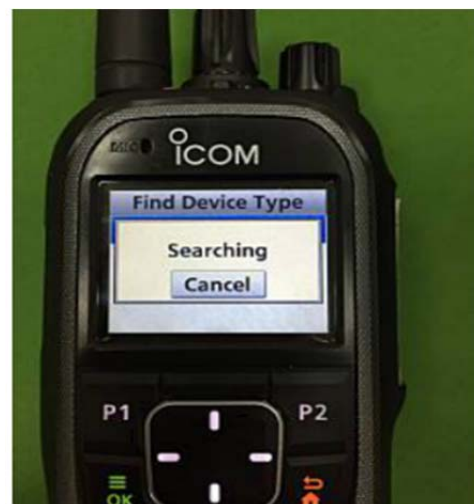


9. You can find the headset



10. Connect it



 11. It's ready to go

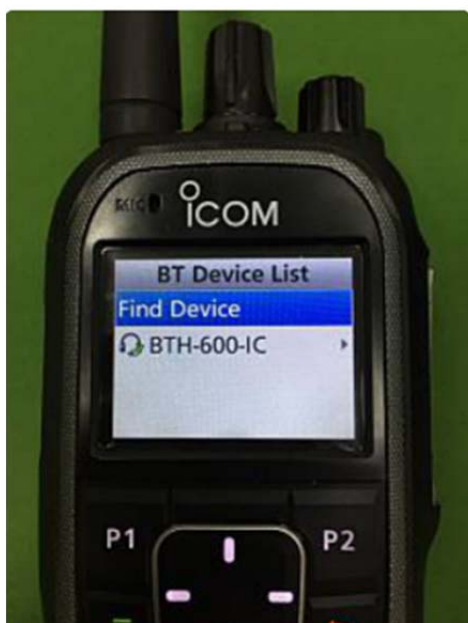

DECLARATION OF CONFORMITY

Model: BTH-600

FCC ID. : XTS-BTH-600

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION

Notice : The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

IMPORTANT NOTE: To comply with the FCC RF exposure compliance requirements, no change to the antenna or the device is permitted. Any change to the antenna or the device could result in the device exceeding the RF exposure requirements and void user's authority to operate the device.

The Federal Communication Commission Radio Frequency Interference Statement includes the following paragraph: The equipment has been tested and found to comply with the limits for a Class B Digital Device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction, may cause harmful interference to radio communication. However, there is no grantee that interference will not occur in a particular installation. If this equipment dose cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on , the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.