 


Bluetooth speaker with cd player

User Manual

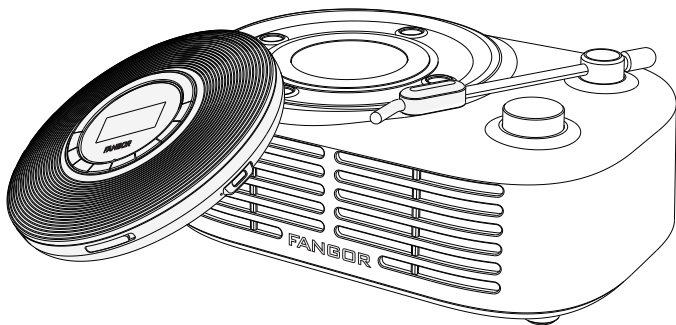

Model: KJM-CD002

CONTENT

| | |
|--------------------------------------|----|
| WARNING..... | 1 |
| PACKAGE INCLUDING..... | 2 |
| PORTABLE CD PLAYER INTRODUCTION..... | 3 |
| SPECIFICATIONS..... | 6 |
| BLUETOOTH SPEAKER INTRODUCTION..... | 7 |
| BOOT STEPS..... | 9 |
| Q & A..... | 12 |
| FCC WARNING STATEMENT..... | 14 |
| AFTER SALES INFORMATION..... | 15 |

If you have any questions about the product,
please feel free to send email to:

us-cdplayer@eitack.com

We will reply you within 24 hours and provide you
with the best solution.

WARNING

In order to use the machine correctly, please read and abide by the following rules carefully.

- (1) Do not hit the main unit hard.
- (2) Do not touch chemicals such as benzene and thinner.
- (3) Please stay away from strong magnetic fields and strong electric fields.
- (4) Please avoid direct light or throw it into the fire.
- (5) Please sort waste packages, batteries, and old electronic products for proper disposal.
- (6) Please turn off the device when not in use for a long time. Additionally, it is recommended to charge the device every three months to keep the battery healthy.
- (7) Clean the device with a clean, damp soft cloth. Do not use alcohol or any cleaning agents.
- (8) Avoid contacting the device with moisture, rain, sand, or various heat sources. It is also not advisable to place objects containing liquids such as vases on the machine.
- (9) Please don't repair the equipment by yourself. The damage to the equipment caused by self-repair will be borne by the user.
- (10) Do not look directly at the laser beam inside the machine.
- (11) Any operation or adjustment against the product manual may cause serious laser radiation or other dangerous situations.
- (12) When setting the volume, be careful to prevent excessive output power, so as not to damage your hearing.
- (13) The Bluetooth speaker features a built-in 1000mAh battery, but it still needs to be connected to the power supply to operate stably. The purpose of the built-in battery is to enhance the audio performance, resulting in improved sound quality. However, please note that the battery is not intended for long-term use as a power supply for the Bluetooth speaker.
- (14) The slide bar must be pulled out before removing the portable CD player from the Bluetooth speaker. It will damage the slide bar or the Bluetooth speaker when failure to do so.
- (15) A cracked disc may cause the player to malfunction. Please do not use it. If the signal surface of the disc has serious scratches, fingerprints and dirt, etc., it may cause equipment failure or shorten the life of the laser head to read the disc.

PACKAGE INCLUDING

Please make sure the following items are included in the package.

If any item is damaged or missing, contact us any time to get a new one for free.



 
Portable CD player




Bluetooth Speaker



Wired Headphone



AUX Audio Line

 


Type-C Charging Cable




User Manual

 PORTABLE CD PLAYER INTRODUCTION

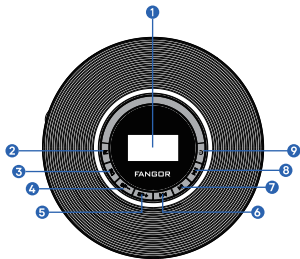

 - ① LCD Display Screen
- ② Mode
- ③ EQ Sound Mode
- ④ Slower Speed Playback
- ⑤ Faster Speed Playback
- ⑥ Previous/Fast Rewind
- ⑦ Play/Pause

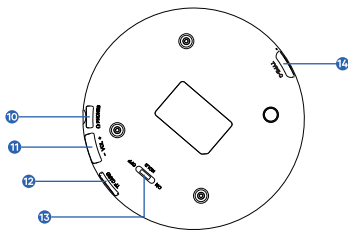

- ⑧ Next/Fast Forward
- ⑨ Power ON/OFF
- ⑩ Headphone Jack
- ⑪ Volume - / Volume +
- ⑫ TF Card Slot
- ⑬ HOLD (ON/OFF)
- ⑭ Type-C Port


Note: Please check and confirm that the HOLD button of the portable CD player is in the OFF unlocked state before use.

① LCD Display Screen

② Mode: Short press to switch the playback modes. (There are 3 playback modes in total: 1. A-B repeat, 2. Single loop, 3. All track loop)

1. A-B repeat: Short press to set the starting point of the A-B repeat function, the "A-B" icon on the LCD display screen will flash, and then short press to set the end point of the A-B repeat function, and the "A-B" icon on the LCD display screen will stop flashing. At this point, the A-B repeat track is set successfully, and you can play this section repeatedly.

2. Single loop: Short press the "M" button, and when the LCD display screen displays the word "REPEAT", it enters the single loop playback mode.

3. All track loop: Short press the "M" button, the LCD display screen will display the "  " icon, and start the full track loop playback mode.

③ EQ Sound Mode: Short press to switch sound effects. (There are 5 sound effects in total: BBS, POP, JAZZ, ROCK, original sound effect)

④ Slower Speed Playback: SP-1 to SP-5 means 5 kinds of slower playback speeds. SP0 means the normal playback speed. Short press the SP- button repeatedly, the playback speed will slow down in the following order of SP-1 / SP-2 / SP-3 / SP-4 / SP-5.

⑤ Faster Speed Playback: SP 1 to SP 5 means 5 kinds of faster playback speeds. SP0 means the normal playback speed. Short press the SP+ button repeatedly, the playback speed will be faster in the following order of SP 1 / SP 2 / SP 3 / SP 4 / SP 5.

⑥ Previous/Fast Rewind: Short press to skip to the previous track. Long press to fast rewind.


⑦ Play/Pause: Short press to play or pause the media.

⑧ Next/Fast Forward: Short press to skip to the next track. Long press to fast forward.



⑨ Power ON/OFF: Short press to turn on and play. Before shutting it down, please short press the power button once to stop the CD from spinning, and then long press (>3s) to shut down.

- ⑩ Headphone Jack: Compatible with 3.5mm wired headphones and other external speakers.
- ⑪ Volume - / Volume +: Roll the wheel to adjust the volume.
- ⑫ TF Card Slot
- ⑬ HOLD (ON/OFF): Lock/Unlock Key Function
 - a. Before turning on the machine, please switch the hold button to the OFF position;
 - b. When the hold button is switched to the ON position, the button function of the CD player is locked, and only the volume button can be adjusted.
- ⑭ Type-C Port

SPECIFICATIONS


| | |
|-----------------------------|--|
| Model | KJM-CD002 |
| CD player function | Support CD/TF card (TF card supports FAT file system format) |
| CD format support | CD, MP3, CD-R, CD-RW |
| Music format support | CD-DA, MP3, WMA (WAV must be below 128 bitrate.) |
| LCD screen display function | Displaying tracks, playing time, etc. |
| SP-/SP+ | SP-: 1-5 times slower playback; SP0: Normal speed playback; SP+: 1-5 times faster playback |
| EQ mode | BBS, JAZZ, POP, ROCK, Original Sound Effect |
| Play Mode | A-B repeat, REPEAT(single track loop playback),  (Repeat All) |
| Output power | 20MW (32Ω dual channel) |
| Signal-to-Noise Ratio | > 80dB |
| Total Harmonic Distortion | < 1% |
| Type-C charging port | DC 5V 2A |
| Charging time of CD player | 3-4 hours |

   BLUETOOTH SPEAKER INTRODUCTION

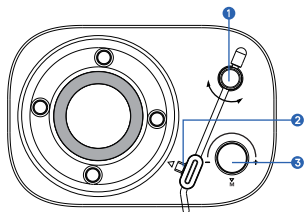



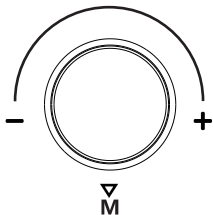

- ❶ Power On/Off /
Volume Adjustment / Mode
- ❷ Type-C Plug
- ❸ Slide Bar
- ❹ AUX IN
- ❺ DC IN

Note: The Bluetooth speaker features a built-in 1000mAh battery, but it still needs to be connected to the power supply to operate stably. The purpose of the built-in battery is to enhance the audio performance, resulting in improved sound quality. However, please note that the battery is not intended for long-term use as a power supply for the Bluetooth speaker.



① **Power On/Off /
Volume Adjustment / Mode**

- a. Power On/Off: Long press  (>3s) to turn on/off.
- b. Volume Adjustment: Rotating  in the "-" direction will gradually decrease the volume, while rotating  in the "+" direction will gradually increase the volume. When you hear two sounds of "ding" "ding" while rotating, it means that the maximum volume has been reached.
- c. Mode: Shot press  to switch between Bluetooth mode and CD/TF card mode.

② **Type-C Plug**

③ **Slide Bar**

④ **AUX IN:** 3.5mm input port.

⑤ **DC IN:** Power input port.

Note:

- 1. When using the portable CD player in combination with the equipped Bluetooth speaker, it is necessary to correctly place the portable CD player on the Bluetooth speaker and insert the Bluetooth speaker's Type-C plug into the portable CD player's Type-C port in order to establish a successful connection.
- 2. The slide bar must be pulled out before removing the portable CD player from the Bluetooth speaker. It will damage the slide bar or the Bluetooth speaker when failure to do so.

BOOT STEPS

The 2-in-1 portable CD player can be used as a standalone portable CD player with headphones, or it can be used as a standalone Bluetooth speaker. Additionally, the Bluetooth speaker can also be connected to the CD player for combined usage.

1. When using the portable CD player alone, the operation steps are as follows:

 
- a. Check and confirm that the HOLD button is in the OFF unlocked state.
- b. Open the top cover of the CD player and insert the CD.
- c. Plug in the wired headphones.
- d. Turn on the CD player.

Note: The portable CD player has no Bluetooth function. When used in combination with the equipped Bluetooth speaker, it needs to be connected to the Type-C plug on the Bluetooth speaker through the Type-C port.

 
2. When the portable CD player is used with the speaker, the operation steps are as follows:

- a. Check and confirm that the HOLD button is in the OFF unlocked state.


b. Align the four positioning points on the bottom of the portable CD player with the four positioning points of the Bluetooth speaker, and place the CD player on the Bluetooth speaker. The Type-C port of the CD player must face the small triangle mark.

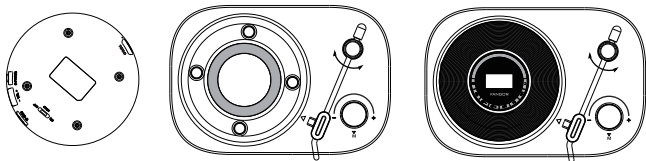

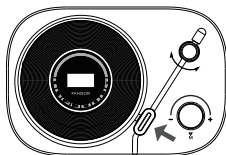

 
c. Insert the Type-C plug on the slide bar of the Bluetooth speaker into the Type-C port of the portable CD player.



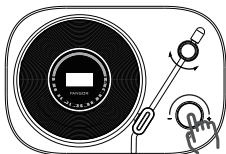

d. Turn on the portable CD player and Bluetooth speakers, switch the mode of the Bluetooth speaker to CD/TF card mode, and the audio from the portable CD player will play through the Bluetooth speakers.



e. When the portable CD player is connected to the Bluetooth speaker, the volume can only be adjusted by rotating  on the Bluetooth speaker. Rotating  in the "-" direction will gradually decrease the volume, while rotating  in the "+" direction will gradually increase the volume. When you hear two sounds of "ding""ding" while rotating, it means that the maximum volume has been reached.

NOTE: The Slide Bar must be pulled out before removing the portable CD player from the Bluetooth speaker. It will damage the Slide Bar or the Bluetooth speaker when failure to do so.

3. When the Bluetooth speaker is used alone, the operation steps are as follows:

- a. Long press  to turn on the Bluetooth speaker.
- b. Short press  to switch the Bluetooth speaker to Bluetooth mode.
- c. Turn on the Bluetooth of your mobile phone, tablet or other Bluetooth devices, search for and pair with the Bluetooth named "F-CD-143".
- d. After successful pairing, the audio of your mobile phone, tablet or other Bluetooth devices can be played through the Bluetooth speaker.

Q & A

Q: How to use the portable CD player and the equipped Bluetooth speaker in combination?

A: 1. Check and confirm that the HOLD button is in the OFF unlocked state.


2. Align the four positioning points on the bottom of the portable CD player with the four positioning points of the Bluetooth speaker, and place the CD player on the Bluetooth speaker. The Type-C port of the CD player must face the small triangle mark.

3. Insert the Type-C plug on the slide bar of the Bluetooth speaker into the Type-C port of the portable CD player.

4. Turn on the portable CD player and Bluetooth speakers, switch the mode of the Bluetooth speaker to CD/TF card mode, and the audio from the portable CD player will play through the Bluetooth speakers.

Q: Why is there no sound when the portable CD player is connected to the Bluetooth speaker?

A: 1. Please check whether the connection between the portable CD player and the Bluetooth speaker is loose or correct;

2. When the portable CD player is connected to the Bluetooth speaker, the volume can only be adjusted by rotating  on the Bluetooth speaker. Please check whether the volume on the Bluetooth speaker is the lowest.

Q: Can the portable CD player and the Bluetooth speaker be used separately?

A: Yes, the portable CD player and Bluetooth speaker can be used separately.

Q: Does the CD player has Bluetooth function?

A: No, the portable CD player does not have a Bluetooth function, but the equipped Bluetooth speaker has a Bluetooth function.

Q: How to use the Bluetooth speaker alone?

A: 1. Long press  to turn on the Bluetooth speaker.

2. Short press  to switch the Bluetooth speaker to Bluetooth mode.

3. Turn on the Bluetooth of your mobile phone, tablet or other Bluetooth devices, search for and pair with the Bluetooth named "F-CD-143".

4. After successful pairing, the audio of your mobile phone, tablet or other Bluetooth devices can be played through the Bluetooth speaker.

Q: How to connect the portable CD player to the car stereo?

A: The package comes with a 3.5mm auxiliary cable. Just plug one end into the portable CD player and the other end into the 3.5mm input jack of the car stereo or other external devices.

Q: How to turn on the portable CD player?

A: Please check if the HOLD button is in the OFF position, push the HOLD button to the OFF position, and then short press the "Power ON/OFF" Button. When the disc is finished playing or there is no disc, the portable CD player will go to standby mode directly. Press the Play/Pause button again and the disc will start playing from the beginning.

Q: Will the portable CD player stop suddenly when it is playing the song?

A: Please check if there is a low power in the batteries. Additionally, the condition of the disc (scratches, decies, cracks, etc.) will affect the performance of the portable CD player. Please kindly check your CD condition, or try a new CD.

FCC WARNING STATEMENT

FCC Statement:

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning:

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.

AFTER SALES INFORMATION

Don not attempt to modify or repair the machine yourself. If you have any problem with the product, please don't hesitate to email us at:

us-cdplayer@eitack.com

We will reply to you within 24 hours and give you the best solution.