Specifications	BT-2	Operation	BT-2	Connection of B
Remote control model : BT-2 Chip model : YC1089X Size: L 38.5 x W 28 x H 11mm Weight: 6.5g (Within battery) Features: Support IOS11.4.1 and Android 5.1.1 or above Power supply: Built-in 3.0V/1632 button cell Bluetooth 4.2 BLE Bluetooth protocol: HCI Working voltage: 3.0V(button cell ) Working current: keystroke current is 2.5mA, first stage sleep is 0.5mA(no operation), second stage sleep is 2uA Effective distance: remote control distance up to 10 meters ISM frequency band: 2400MHz 2483.5 MHz		On 1.Put the button to "ON" 2.The Bluetooth remote will start the automatic pairing state after the machine is turned on Off Put the button to "OFF"	Indicator Light Shutter ON/OFF	Search name: BT-2 When the indicator light is fla Bluetooth remote is being pa search BT-2 on your phone. is not flashing once the Blue connected your phone Shooting After the Bluetooth remote of phone, to change your phone model, then press the shutter take the photo. Matention: The Bluetooth of your


## Bluetooth remote

## BT-2

is flashing, means the g paired. Then you can one. The indicator light Bluetooth remote has

te connected with the hone to "shooting" nutter of remote is ok to

f your phone must be open during working.

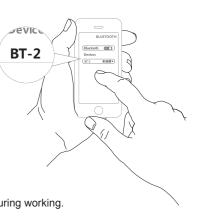

## FCC Warnning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection againstharmful interference in a residential installation. This equipment generates, uses and can radiateradio frequency energy and, if not installed and used in accordance with the instructions, maycause harmful interference to radio communications. However, there is no guarantee thatinterference will not occur in a particular installation. If this equipment does cause harmfulinterference to radio or television reception, which can be determined by turning the equipmentoff and on, the user is encouraged to try to correct the interference by one or more of thefollowing measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1)This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.