



# TRIPLE Rider

CONTROL  
ECSTASY RUMBLE R

- TURN TRIPLE RIDER OVER TO TURN THE UNIT ON OR OFF.
- FUNCTION LIGHTS WILL FLASH.
- NOW YOU CAN USE THE BUTTON ON THE REMOTE CONTROL TO USE FUNCTIONS.

Complete Charging Time	Run Time on High	Run Time on Low
3 Hours	55 Minutes	85 Minutes
LED light will flash while charging and glow solid when fully charged. Fully charge product before use. Battery life depends on frequency and speed of use. We recommend fully charging your product once every 6 months.		

#### Remote Control Toy

CEN No. SE-4300-70-3

UK  
CA CE 0700

"Hereby, California Exotic Novelties declares that this Remote Control Toy is in compliance with the essential requirements and other relevant provisions of Directive (RED) 2014/53/EU."

CALEXTICS®

# TRIPLE Rider



REMOTE CONTROL  
ECSTASY RUMBLE R

INSTRUCTION BOOKLET

# Operating Instructions

## To use massager independently:

1. This item comes with a travel lock feature. To turn product on, press and hold the power button on the base of massager for 3 seconds; flashing LED lights will indicate the product is on.
2. On the top of the product, press front button to turn on vibrations for the front motor. Press the front button repeatedly until the desired function is reached.
3. To turn off vibrations for the front motor at anytime, press and hold the front button for 3 seconds. To resume vibrations on the last function used, single press the front button again.
4. To turn on vibrations for the shaft, press the middle button. Press the middle button repeatedly until the desired function is reached.
5. To turn off vibrations for the shaft at anytime, press and hold the middle button for 3 seconds. To resume vibrations on the last function used, single press the middle button again.
6. Press the back button to turn on vibrations for the back motor. Press the back button repeatedly until the desired function is reached.
7. To turn off vibrations for the back motor at anytime, press and hold the back button for 3 seconds. To resume vibrations on the last function used, single press the back button again.
8. To turn product off, repeat step 1. LEDs will turn off.

## To use with a remote:

1. This item comes with a travel lock feature. To turn on and activate product, press and hold the power button on the base of massager for 3 seconds; flashing LED lights will indicate the product is activated.
2. To turn on vibrations for the shaft, press the X button on the remote. Press the X button repeatedly until the desired function is reached.
3. To turn off vibrations for the shaft at anytime, press and hold the X button for 3 seconds. To resume vibrations on the last function, single press the X button again.
4. Press the O button on the remote to turn on both rumbling motors in the base. Press the O button repeatedly until the desired function is reached.
5. To turn off vibrations for the rumbling motors at anytime, press and hold the O button for 3 seconds. To resume vibrations on the last function, single press the O button again.
6. To turn off and deactivate product, repeat step 1. LEDs will turn off.

The massager must be activated to pair with the remote. Flashing LED lights will indicate the massager is activated. Ensure the massager is deactivated after each use to preserve battery life. Massager will automatically deactivate after 30 minutes of inactivity. Product has a memory chip feature and will resume on the last function used.



FCC Caution: (15.19 Labeling requirements.)

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

(15.21 Information to User)

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF warning for portable device:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.