

ARC-2 Noise Cancelling Over Ear Wireless Headphones







Quick Start Guide

WHAT'S INCLUDED



ARC-2 Noise Cancelling Over Ear Wireless Headphones








USB-C Charging Cable Audio Cable


User Manual

CHARGING

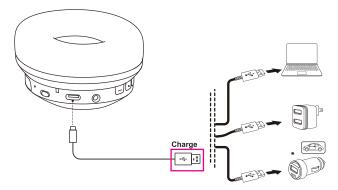

Insert one end of the included USB-C charging cable into the charging port on your headphone.

Insert the other end into the USB-A port of a computer or suitable USB 5V 1A charging adapter.

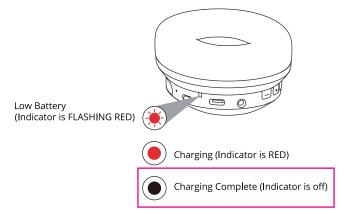

BLUETOOTH PAIRING



1. Press and hold the power button for about 3-5 seconds to power on or power off your headphones.






2. Once powered on, your headphones will go into pairing mode. The LED Indicator lights will flash blue and red alternately.

> 3. Go to the Bluetooth settings menu on your phone. Make sure that Bluetooth is turned on. Connect to the device listed as "AIWA ARC-2 ANC." Pairing window: 5 mins



4. Once paired, the LED Indicator will flash blue slowly


Noted: The headphone can connect two devices at a time, But only one device's audio can be played at a time

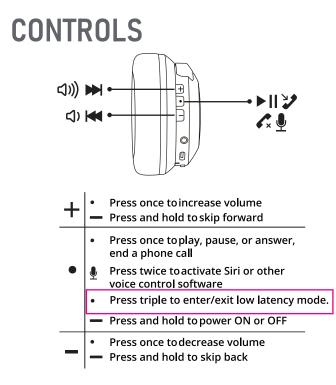



LOW LATENCY ON

Imperceptible delay for perfect lip sync and responsive gaming


CONTROLS

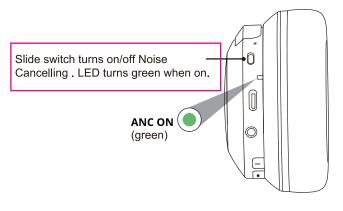

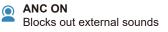

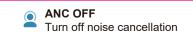

WIRED LISTENING MODE

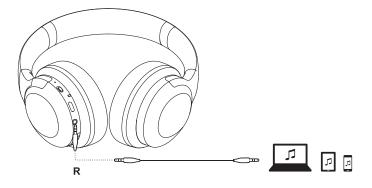

Connect one end of the included Aux cable to the Aux In port on your headphones. Connect the other end to the headphone jack on your audio device in order to listen to music using a wired connection.

You can use your headphones with a wired connection even when they are low on battery power.

Please note that ANC and Bluetooth capabilities are disabled when there is a wired connection.

RESET



Forget "AIWA ARC-2 ANC"


Go to the Bluetooth settings menu on your phone. Select the device listed as "AIWA ARC-2 ANC" and choose to forget the device.



Power off your headphones. Press and hold the power button for 5 seconds until the light flashes blue and red.

Hold the +/- buttons simultaneously for 10 seconds until you see a red light flashing 3 times.

Your headphone power OFF automatically once reset.

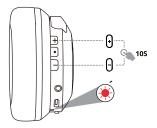

SAFETY PRECAUTIONS

When using your headphones, basic safety precautions should always be followed including:

1. READ ALL INSTRUCTIONS BEFORE USING YOUR HEADPHONES.

- 2. Do not submerge your headphones in water.
- 3. Only clean using a clean, soft cloth.

4. Do not allow children to play with this product. This product contains small pieces that can be a choking hazard. Parental supervision is advised.

5. Do not expose this product to excessive heat or fire.

6. Do not expose this product to temperatures above 100°F. Keep out of direct sunlight.

7. Do not attempt to repair this product yourself. Contact a qualified service center if the product is in need of service.

8. Do not drop, crush, or expose this product to excessive physical force.

9. This product is not intended for commercial use.

10. When charging, keep all charging cables well ventilated. Do not keep your charging cable in contact with flammable materials such as bedding, linens or synthetic fabrics.

Maintenance and Care

-Use a soft cloth or paper towel to clean your headphones. Never use any harsh chemicals or detergents for cleaning. Make sure your headphones are dry before charging.

-When your headphones are not in use, they should be stored in a cool, dry place.

-Never tug or yank on a cable while it is connected to your headphones. Connect and disconnect cables as carefully as possible.

-Never expose your headphones to high temperatures, extreme cold.

-Please recycle or dispose of your headphones properly based on the laws and rules of your municipality. Contact local recycling facilities and/or the manufacturer of your headphones for further information.

Warning

To prevent possible hearing damage, do not listen at high volume levels for long periods. For your own safety, please be aware of your surroundings when using these headphones.

FCC STATEMENT

Warning:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

--Reorient or relocate the receiving antenna.

-- Increase the separation between the equipment and receiver

--Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

--Consult the dealer or an experienced radio/TV technician for help

NOTE: This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter

The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition without restriction.

WARRANTY

This warranty covers the original consumer purchaser only and is not transferable.

This warranty covers products that fail to function properly UNDER NORMAL USAGE, due to defects in material or workmanship. Your product will be repaired or replaced at no charge for parts or labor for a period of one year.

What Is Not Covered By Warranty

Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including but limited to, repair by unauthorized parties, tampering, modification or accident.

To Obtain Warranty Service and Troubleshooting Information: Call (877) 397-8200 or visit our website at www.aiwa.co.

To receive Warranty service along with the name and address of an authorized product service center, the original consumer purchaser must contact us for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the product is within the applicable Warranty period(s), MUST be presented in order to obtain the requested service. It is your responsibility to properly package and send any defective products along with a dated copy of proof of purchase, a written explanation of the problem, and a valid return address of the authorized service center at your expense. Do not include any other items or accessories with the defective product. Any products received by the authorized service center that are not covered by warranty will be returned unrepaired.





©2024 Sakar International 195 Carter Drive Edison, NJ 08817 www.sakar.com Support: (877)-397-8200 support@sakar.com