

Anti-lost Device

User Manual



Anti-lost Device	User Manual
Index	

- 01 Getting Started
- 02 Add Your Anti-lost Device
- 03 Locate Your Anti-lost Device
- 04 Notifications
- 05 When Your Anti-lost Device Is Lost
- 06 Resetting Anti-lost Device
- 07 Extras
- 08 The Fine Print

Anti-lost Device	User Manual
01 Getting Started	

- 01.1 Power On / Off:
 - Press the Anti-lost Device Function Button once to turn it on.It should beep once to indicate that it ispowered on
 - To power off, hold the same button for at least three seconds. You will hear two beeps to indicate that your Anti-lost Device is powered off.
- 01.2 Check For Updates:
 - To use the Find My app to locate this Anti-lost Device,the latest version of iOS®, iPadOS®, or macOS® is recommended. The Find Items app on Apple Watch® requires the latest version of watchOS®.

Anti-lost Device	User Manual
02 Add YourAnti-lost Device	

- 02.1 Start The App
 - Open Find My™ app on your supported iPhone or iPad.
- 02.2 Connect Your Anti-lost Device
 - Press the function button once to power on your Anti-lost Device
 - Tap, then "Add Other Item" .
 - Once your Anti-lost Device is located, tap "Connect".
 - Enter a name and choose an emoji for your and tap"Continue".
 - Find My™ will ask for confirmation to add your Anti-lost Device to your Apple ID Tap "Agree" .
 - Tap "Finish" and your Anti-lost Device will be set up and readyto be used.

Anti-lost Device	User Manual
03 Locate Your Anti-lost Device	

- 03.1 Find Anti-lost Device When It's Nearby:
 - Open Find My™ app and select the "Items" tab or open the Find Items app on your Apple Watch.
 - Tap on your FineIn from the list
 - Tap "Play Sound"to make your Anti-lost Device beep.
 - Tap "Stop Sound" to stop the beeps once you find.
- 03.2 Find Anti-lost Device's Location:
 - Open Find My app and select the "Items" tab or open the Find Items app on your Apple Watch.
 - Tap on your Anti-lost Device from the list
 - Your Anti-lost Device's location will appear on theMap with a time stamp of when the item was located
 - To navigate to the Anti-lost Device's location, tap "Directions" to open Apple Maps.

Anti-lost Device	User Manual
04 Notifications	

- 04.1 Enabling"Notify When Left Behind":
 - Open Find My™ app and select the "Items" tab or open the Find Items app on your Apple Watch.
 - Tap on your Anti-lost Device from the list.
 - Under "Notifications" enable the "Notify When Left Behind" toggle.
 - You will receive a notification when you leave your Anti-lost Device behind and it's no longer in range of your device.
- 04.2 Enabling"Notify When Found":
 - Under "Notifications", enable the "Notify When Found" toggle.
 - When your Anti-lost Device is seen by another Find My networkdevice,you will receive a notification of its location.
 - Note:"Notify When Found"can only be activated when your Anti-lost Device is out of range.

Anti-lost Device	User Manual
05 When Your Anti-lost Device Lost	

- 05.1 Enabling"Lost Mode":
 - Open Find My™ app and select the "Items" tab or open the Find Items app on your Apple Watch.
 - Tap on your Anti-lost Device from the list.
 - Under "Lost Mode" tap "Enable" .
 - A screen detailing Lost Mode will pop up, tap "Continue".
 - Enter your phone number or email address and tap "Next".
 - You may enter a message that will be shared with the person that finds your item.
 - Tap "Activate" to enable "Lost Mode" .
 - Note: When "Lost Mode" is enabled, "Notify When Found" isautomatically enabled.
 - Note: When"Lost Mode" is enabled your Anti-lost Device is locked and cannot be paired to a new device.

Anti-lost Device	User Manual
06 Reset Anti-lost Device	

- 06.1 Remove The Anti-lost Device From Find My™App:
 - Open Find My™ app and select the "Items" tab.
 - Tap on your Anti-lost Device from the list.
 - Please ensure"Lost Mode" is disabled.
 - Scroll to the bottom of the screen and tap "Remove Item."
 - A summary will open, tap "Remove" to confirm.
- 06.2 Factory Reset Your Anti-lost Device:
 - After successfully removing the Anti-lost Device from Find My™ app, press the iTag's function button four times rapidly and then hold it a fifth time until you hear a ringing chime.
 - The Anti-lost Device is now reset and ready to be paired to anew Apple ID.

Anti-lost Device	User Manual
07 Extras	

- 07.1 Replace The Battery:
 - Slide the opening slider on the back of your FineIn Tag to carefully open the shells.
 - Replace the batterywith a new CR2032 batteryplacing it positive side up (text facing up).
 - Carefully close the iTag by aligning the top hole on both sides.
- 07.2 Unwanted tracking:
 - If any Find My network accessory separated from its owner is seen moving with you over time, you'll be notified in one of two ways:
 - 1. If you have an iPhone, iPad, or iPod touch, Find My will send annotification to your Apple device.This feature is available on iOS or iPadOS 14.3 or later.
 - 2. If you don't have an iOS device or a smartphone, a Find My network accessory that isn't with its owner for a period of time will emit a sound when it's moved.
 - These features were created specifically to discourage people from trying to track you without your knowledge.

Anti-lost Device	User Manual
08 FCC Warning	

- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
 - (1) this device may not cause harmful interference, and
 - (2) this device must accept any interference received, including interference that may cause undesired operation.
- This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmfulinterference c in a residential installation. This device generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will no occur in a particular installation. If this device doe s cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the device and receiver.
 - Connect the device into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

