

Uniden | A World Without Wires®

UNIDEN
CORDLESS
TELEPHONES



DCX100

OWNER'S MANUAL

Welcome

Congratulations on your purchase of the Uniden DCX100 accessory handset and charger. This expansion handset is compatible with models in the following series: DECT1060, DECT1060-2, DECT1080, and DECT1080-2.

You can place this fully featured cordless handset anywhere your home has AC power.

Note: Illustrations in this manual are used for explanation purposes. Some illustrations may differ from the actual unit.

Accessibility

Uniden provides a customer service hotline for accessibility questions. If you have a disability and need customer service assistance or if you have any questions about how Uniden's products can accommodate persons with disabilities, please call the accessibility voice/TTY line: 1-800-874-9314.

A representative is available to talk to you M-F, 8:00 am to 5:00 pm, CST. After hours, you can leave us a message, and we will call you back. Information is also available on our website, www.uniden.com, under the "Accessibility" link.

Important!

The DCX100 accessory handset will not operate until it is registered to a Uniden main base. This manual describes how to set up your new accessory handset; for more detailed instructions on operating your new handset, please refer to the manual supplied with your base.

Uniden® is a registered trademark of Uniden America Corporation.

Terminology Used in this Manual

| | |
|-------------------|--|
| Base | The main part of the phone that connects to your phone line and lets you make and receive calls. |
| Charger | A cradle that charges an accessory handset. It connects to power but not to a phone line. |
| Accessory Handset | A handset that works with an expandable phone base. Accessory handsets must be registered to a base. |
| Standby | The handset is not in use. If it is off the cradle, no line has been activated. No dial tone is present. |
| Talk | A telephone line has been activated on the handset enabling a dial tone. |

Checking the Package Contents

Make sure your package contains the following items. If any items are missing or damaged, contact our Customer Service Hotline. See page 10 for contact information.

 
- Cordless Handset
- Charging Cradle
- AC Adapter, model # AD-0005
(Input: 120V AC 60 Hz / Output: 9V DC 210 mA)
- Rechargeable NiMH Battery Pack, model # BT-1002
(Capacity: 800 mAh, 2.4V)
- Printed Material

Installing Your Accessory Handset

Follow these steps to get your new handset ready to use.

Step 1: Connect the Charger

- 1 Connect the AC adapter (AD-0005) to the **DC IN** jack and to a standard 120V AC wall outlet.
- 2 Set the charger on a desk or tabletop.

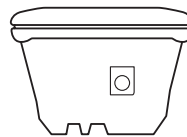



- **Use only the supplied AC adapter (AD-0005). Do not use other AC adapters.**
- Place the charger close to the AC outlet so that you can unplug the AC adapter easily.

Step 2: Install the Batteries and charge your new handset for 15-20 hours

- 1 Remove the battery compartment cover. Press down on the semi-circle indent and slide the cover off.
- 2 Charge the battery for 15-20 hours before using. To charge the batteries, place the handset on the charger. While charging, the symbol scrolls. When the battery is fully charged and the phone is off the cradle, all the bars of the battery symbol will be filled. If the symbol does not appear, reposition the handset in the charger, ensuring that the charging points contact.

NOTE: Once your handset is fully charged, your phone is designed for the charge LED to turn off for approximately 4 seconds during the following instances:

- 1) just after reaching a full charge
- 2) 1 minute after reaching a full charge
- 3) every 5 minutes after reaching a full charge

To alleviate the charge LED from blinking on the charger base, you can simply remove the handset from the charging cradle.

You may also select to leave the handset in the cradle which will not damage the unit. Once fully charged, you may notice the charge LED light will turn off for 4 seconds every 5 minutes. This is normal operation and does not mean your unit is defective.




 
- Use only the Uniden battery supplied with your phone.
- Recharge your handset on a regular basis by returning the handset to the charger after each phone call.

Step 3: Register the Handset



YOU NEED TO REGISTER THE DCX100 TO THE MAIN BASE BEFORE USE!

For Main Base Models DECT1060/DECT1060-2/DECT1080/DECT1080-2. When you register a new handset to your base, you will be asked to enter the base PIN code. The pre-set PIN code is 0000. If you wish, you can change this code, see owner's manual for detailed instruction. Before registering, make sure that you have the base and handset in front of you. Also, make sure all handsets and the base are in standby mode.

On the handset you want to register:

- 1 Press  to access the main menu.
- 2 Press up or down key until "Add.Settings" is displayed and press .

Press  or  to display "Register" and press .

Press  or  to select your base number and press .

On your original base:

Press and hold **Find HS** for approx. 3 seconds. You are now in 'registration mode'.

If the base already has the maximum number of handsets (6) registered to it, you will need to de-register one of the existing handsets before you can register the new handset.

See the section on the next page for de-registering handsets.









 






 

On the handset you want to register:

Enter the base PIN code. Pre-set base PIN code is 0000.
You will hear a confirmation tone when registration is complete.
When in standby mode, the new handset number will be displayed. The handset will automatically be allocated with the next available handset number.

If registration is unsuccessful, the display will show *Not Registered* and you will need to follow the registration procedure again.

De-register a Handset or a Base

If you have more than one handset registered to your base or more than one base registered to your handset(s), you can de-register both the handset from the base or the base from the handset. Before deregistering, make sure all handsets and the base are in standby mode.

- 1 Press  to access the main menu.
- 2 Press  or  until *Add. Settings* is displayed and press .
- 3 Press  or  to display *Deregister* and press .
- 4 Press  or  to select *Handset* or *Base* and press .
- 5 Press  or  to display the handset or base you want to de-register and press .
- 6 Press  or  to select *Yes* and press .
If the handset has been registered to the base successfully, you will hear a confirmation tone.
- 7 Press  to exit and return to standby.



- You can register a handset to up to 4 bases, e.g. one at work and one at home, and switch between them.

Using Your Accessory Handset

Now that your new handset is registered, it can perform all the same functions as the handsets originally included with your phone. With your new handset, you can

- Transfer calls between handsets
- Hold conference calls
- Access the integrated answering device or voice mail using a handset

See the owner's manual that came with your main base for complete instructions on operating your new expanded phone.

 
Battery Information

Low battery alert

If the symbol is displayed on the handset, Charge Battery appears and you hear the low battery tone, you will need to recharge your handset. We recommend that you place the handset back on the charger in-between use to ensure that it is always fully charged.





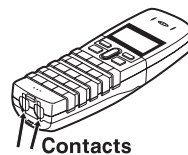





 


 

 






Cleaning the battery charging contacts

To maintain a good charge, clean the charging contacts on the handset once a month. Dampen a cloth with plain water. Gently rub the damp cloth over the charging contacts until all visible dirt is removed. Dry the contacts thoroughly before returning the handset to the cradle.

 





 


 





Caution: Do not use paint thinner, benzene, alcohol, or other chemical products. Doing so may discolor the surface of the telephone and damage the finish.

Quick Guide

| Function | Button press |
|-------------------------------|---|
| Make a call |  , enter number. |
| Pre-dialing a call | Enter number,  . |
| Adjust earpiece volume | During a call,  or  . |
| End a call |  or place handset on base/charger. |
| Receive a call | Phone rings,  . |
| Redial |  then  or  to display number,  . |
| Privacy | During a call,  and select Mute, repeat the same step to select "Un Mute" to resume a call. |
| Store phonebook number |  then  , select New Entry,  , enter name,  , enter number,  . Select Tone,  , then select Save,  . |
| Dial phonebook number |  then  or  ,  . |

Handset ringer melody

 then  or  to
Audio Setting, .
Press  or  to Ringer Type then
.
Press  or  to select External,
Internal, Paging, Alarm, or
Appointment .
Press  or  to select the melody,
.

Make internal call

 then  or  to select internal
handset number,  or .

The FCC Wants You To Know

Changes or modifications to this product not expressly approved by Uniden, or operation of this product in any way other than as detailed by the owner's manual, could void your authority to operate this product.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. Privacy of communications may not be ensured when using this phone.

To insure the safety of users, the FCC has established criteria for the amount of radio frequency energy various products may produce depending on their intended usage. This product has been tested and found to comply with the FCC's exposure criteria. For body worn operation, the FCC RF exposure guidelines were also met when used with the Uniden accessories supplied or designed for this product. Use of other accessories may not ensure compliance with FCC RF exposure guidelines and should be avoided.

This handset and its antenna must not be co-located or operated in conjunction with any other antenna or transmitter.

One Year Limited Warranty

Important: Evidence of original purchase is required for warranty service.

WARRANTOR: UNIDEN AMERICA CORPORATION ("Uniden") ELEMENTS OF WARRANTY: Uniden warrants, for one year, to the original retail owner, this Uniden Product to be free from defects in materials and craftsmanship with only the limitations or exclusions set out below.

WARRANTY DURATION: This warranty to the original user shall terminate and be of no further effect 12 months after the date of original retail sale. The warranty is invalid if the Product is (A) damaged or not maintained as reasonable or necessary, (B) modified, altered, or used as part of any conversion kits, subassemblies, or any configurations not sold by Uniden, (C) improperly installed, (D) serviced or repaired by someone other than an authorized Uniden service center for a defect or malfunction covered by this warranty, (E) used in any conjunction with equipment or parts or as part of any system not manufactured by Uniden, or (F) installed or programmed by anyone other than as detailed by the owner's manual for this product.

STATEMENT OF REMEDY: In the event that the product does not conform to this warranty at any time while this warranty is in effect, warrantor will either, at its option, repair or replace the defective unit and return it to you without charge for parts, service, or any other cost (except shipping and handling) incurred by warrantor or its representatives in connection with the performance of this warranty. Warrantor, at its option, may replace the unit with a new or refurbished unit. THE LIMITED WARRANTY SET FORTH ABOVE IS THE SOLE AND ENTIRE WARRANTY PERTAINING TO THE PRODUCT AND IS IN LIEU OF AND EXCLUDES ALL OTHER WARRANTIES OF ANY NATURE WHATSOEVER, WHETHER EXPRESS, IMPLIED OR ARISING BY OPERATION OF LAW, INCLUDING, BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. THIS WARRANTY DOES NOT COVER OR PROVIDE FOR THE REIMBURSEMENT OR PAYMENT OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states do not allow this exclusion or limitation of incidental or consequential damages so the above limitation or exclusion may not apply to you.

LEGAL REMEDIES: This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. This warranty is void outside the United States of America and Canada. PROCEDURE FOR OBTAINING

PERFORMANCE OF WARRANTY: If, after following the instructions in the owner's manual you are certain that the Product is defective, pack the Product carefully (preferably in its original packaging). Disconnect the battery from the Product and separately secure the battery in its own separate packaging within the shipping carton. The Product should include all parts and accessories originally packaged with the Product. Include evidence of original purchase and a note describing the defect that has caused you to return it. The Product should be shipped freight prepaid, by traceable means, to warrantor at:

Uniden America Service
4700 Amon Carter Blvd.
Fort Worth, TX 76155

At Uniden, we'll take care of you!

Thank you for purchasing a Uniden product. If you have any questions or problems, please do not return this product to the place of purchase.

| | |
|--|--|
| Having trouble? | Our customer care specialists are here to help you! Visit our website at www.uniden.com or call our Customer Service Hotline at 1-800-297-1023, Monday through Friday, 7 AM to 7 PM or Saturday/Sunday, 9 AM to 5 PM, CST. The Customer Service Hotline is closed on holidays. |
| Need a part? | To order headsets, additional handsets, replacement batteries, or other accessories, visit our website at www.uniden.com or call 1-800-554-3988, Monday through Friday, 8 AM to 5 PM, CST. |
| Help for our customers with special needs | If you need special assistance due to a disability or have questions on the accessibility features of this product, please call 1-800-874-9314 (voice or TTY). |

Uniden®

May be covered under one or more of the following U.S. patents:

| | | | | | |
|-----------|-----------|-----------|-----------|-----------|-----------|
| 4,797,916 | 5,381,460 | 5,426,690 | 5,434,905 | 5,491,745 | 5,493,605 |
| 5,533,010 | 5,574,727 | 5,581,598 | 5,650,790 | 5,660,269 | 5,661,780 |
| 5,663,981 | 5,671,248 | 5,696,471 | 5,717,312 | 5,732,355 | 5,754,407 |
| 5,758,289 | 5,768,345 | 5,787,356 | 5,794,152 | 5,801,466 | 5,825,161 |
| 5,864,619 | 5,893,034 | 5,912,968 | 5,915,227 | 5,929,598 | 5,930,720 |
| 5,960,358 | 5,987,330 | 6,044,281 | 6,070,082 | 6,125,277 | 6,253,088 |
| 6,314,278 | 6,418,209 | 6,618,015 | 6,671,315 | 6,714,630 | 6,782,098 |
| 6,788,920 | 6,788,953 | 6,839,550 | 6,889,184 | 6,901,271 | 6,907,094 |
| 6,914,940 | 6,953,118 | | | | |

Other patents pending.

[10]

Uniden | A World Without Wires®

VISIT
WWW.UNIDEN.COM
TO REGISTER YOUR
PRODUCT

© 2006 Uniden America Corporation, Fort Worth, Texas. Contains additional foreign articles. Printed in China.

UU01499BZ_1