

## WARNINGS

BEFORE USING OR CHARGING THE THERAGUN PRO™, THERAGUN ELITE™, AND WAVE ROLLER™, READ THIS MANUAL AND THE CAUTIONARY MARKINGS ON THE THERAGUN MULTI-DEVICE WIRELESS CHARGER AND THE THERAGUN PRO, THERAGUN ELITE, AND WAVE ROLLER. CHARGE DEVICES BEFORE FIRST USE. We strive to make the devices, and the Theragun Multi-Device Wireless Charger, as safe as possible. These are advanced mechanical tools with electric components. If the devices, Theragun Multi-Device Wireless Charger, and their accessories are not used or maintained properly, there is a risk of fire, electric shock, or injury. When using the Theragun Multi-Device Wireless Charger, these basic precautions should always be followed:

1. **USE ONLY AS INSTRUCTED.** Use the Theragun Multi-Device Wireless Charger as described in this instruction Manual. Only use with Theragun AC Adapter: EA1046SAR. Use only Therabody recommended accessories and replacement parts. Do not carry out any maintenance other than as advised by Therabody.
2. **NOT FOR CHILDREN.** The devices and Theragun Multi-Device Wireless Charger are not intended for use by young children or persons with reduced physical, sensory or reasoning capabilities, or lack of experience and knowledge unless they have been given supervision or instruction by a responsible person. Close attention is necessary when used by or near children. Children should be supervised to ensure that they do not play with the devices or Theragun Multi-Device Wireless Charger.
3. **REDUCING RISK OF INJURY.** Charge devices only on an authorized Therabody charger. Other chargers may cause personal injury or damage. Do not connect the Theragun Multi-Device Wireless Charger to a power supply plug or car cigarette lighter, or it will be permanently disabled or damaged.
4. **CHARGING LOCATIONS.** Devices should be charged indoors in a well ventilated, dry location. Do not charge devices outdoors, in a bathroom, or within 10 feet (3.1 meters) of a bathtub or pool. Do not use devices or the Theragun Multi-Device Wireless Charger on wet surfaces and do not expose the charger to moisture, rain, or snow. Do not use devices or Theragun Multi-Device Wireless Charger in the presence of explosive atmospheres (gaseous fumes, dust, or flammable materials). Sparks may be generated, possibly causing a fire.
5. **UNPLUGGING THE THERAGUN MULTI-DEVICE WIRELESS CHARGER.** Pull the plug, not the cord, to reduce the risk of damage to the electrical plug and cord. Keep the cord from heat, oil, and sharp edges. Do not use or charge with a damaged cord. Do not stretch the charger cord or place the cord under strain. Keep cord away from heated surfaces. Do not handle the Theragun Multi-Device Wireless Charger, including the charger terminals with wet hands.
6. **THERAGUN MULTI-DEVICE WIRELESS CHARGER CARE.** Unplug the Theragun Multi-Device Wireless Charger when not in use. Unplug the Theragun Multi-Device Wireless Charger from the outlet when not in use for extended periods. Make sure the Theragun Multi-Device Wireless Charger cord is located so that it will not be stepped on, tripped over, or otherwise subjected to damage or stress. Have a damaged charger replaced immediately.
7. **DO NOT BURN OR INCINERATE** the Theragun Multi-Device Wireless Charger or devices.
8. **DO NOT CRUSH, DROP, OR DAMAGE THE THERAGUN MULTI-DEVICE WIRELESS CHARGER.** Do not use a Theragun Multi-Device Wireless Charger that has received a sharp blow, been dropped, run over, or damaged in any way.
9. **STORING THE THERAGUN MULTI-DEVICE WIRELESS CHARGER.** Store in a cool, dry place. Do not store the Theragun Multi-Device Wireless Charger where temperatures may exceed 40°C/104°F, such as in direct sunlight, in a vehicle, or in a metal building during the summer.
10. **DO NOT DISASSEMBLE.** Disassembly or incorrect reassembly may result in the risk of electric shock or fire. The warranty will be void if the Theragun Multi-Device Wireless Charger is disassembled or if any parts have been removed.
11. **SERVICE.** If the Theragun Multi-Device Wireless Charger is not working properly, has received a sharp blow, has been dropped, damaged, left outdoors, or dropped into water, do not use and contact Therabody by emailing [info@theragun.com](mailto:info@theragun.com) for repair or service. Do not attempt to repair or disassemble it, which may result in an electric shock or fire.
12. **DO NOT USE WHILE BATHING OR IN THE SHOWER, TUB, OR SINK.** Do not charge devices where they can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid. Do not reach for an appliance that has fallen into the water. Unplug immediately.
13. Devices can not be used while charging.
14. Do not try to charge other electronic devices with the Theragun Multi-Device Wireless Charger, such as phones, tablets, or smartwatches.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to

provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.  
This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

### **LIMITED WARRANTY**

The Theragun Multi-Device Wireless Charger has a limited one-year warranty. For any warranty issues or questions, please email [info@theragun.com](mailto:info@theragun.com).