

# NAUTICA

## WIRELESS CHARGING STATION

NTCS01

Thank you for purchasing an original **Nautica Wireless Charging Station - NTCS01**

You are getting a high quality product that's built to combine technology and design for your everyday use.

Please read the below info carefully to get the most out of your new product.

***This guide is ENGLISH only. For other languages and more detailed info on care, use and warranty, please visit [technofashion.com](https://technofashion.com)***



### WHAT'S IN THE BOX



WIRELESS CHARGING STATION



5 FT/1.5 M TYPE-C CABLE



USER'S MANUAL



USB-A ADAPTER




### HOW TO USE

#### HOW TO CHARGE WIRELESSLY



Type-C charging port


Connect your Nautica Wireless Charging Station to a plug-socket via the included adapter and Type-C charging cable or to a power source that has USB-A charging port. Then the charging station is ON and ready to charge your devices.

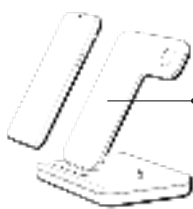

Mobile phone charging stand



Place your mobile phone on the wireless charging mobile phone stand horizontally or vertically. The LED light will turn BLUE when the mobile phone is being charged.

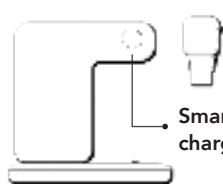

Smart watch charging pad



Place your smart watch to the smart watch wireless charging pad as shown in the image.



Earbuds charging socket



Place your earbuds with charging case to the socket as shown in the image and make sure that the socket is properly inserted to the lightning and micro USB charging port of the case.

! You can charge two or three devices simultaneously by placing them on their relevant charging area as well as charge one by one.

! The LED light will only turn to BLUE when a mobile phone is being charged. Otherwise, it will stay GREEN.

#### HOW TO FAST CHARGE YOUR MOBILE PHONE

Fast charging feature of the wireless charging station is only applicable to mobile phones that support fast wireless charging.

Simply put your compatible mobile phone to the mobile phone charging stand to fast charge.


Fast charging is not affected by the simultaneous charging of the smart watch, earbuds or both.

#### KEEP IN MIND

Make sure you place your device (mobile phone, smart watch or earbuds) properly on the charging stand or charging pad. Improper placement may hinder charging.

Fast charging feature is only applicable to mobile phones that support this feature.

#### LED BEHAVIOR

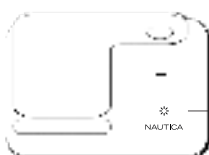

**LED Power button:** Touch this button to turn on and off the LED light.



**LED indicator:**

- **Green light:** POWER ON/Device(s) other than mobile phone being charged
- **Blue light:** Mobile phone being charged
- **No light:** POWER OFF



### TECHNICAL SPECIFICATIONS

Input	12V / 2A, 9V / 2.7A
Mobile Phone Charger Output	15W / 10W / 7.5W / 5W
Smart Watch Charger Output	2.5W
Earbuds Charging Output	2W (Lightning & Micro USB)
Transmission Distance (Phone)	≤ 0.3 in / 8 mm
Cable Length	5 ft / 1.5 m
Product Material	ABS + PC
Product Dimensions	5.35*3.97*5.35 in / 136*101*136 mm
Product Weight	6.34 oz / 180 g
Charging Port	Type-C
Adapter Output Power	18W
Adapter Input	5V / 2.4A, 9V / 2A, 12V / 1.5A
Adapter Input Voltage	100-240 V / 0.5 A / 50-60 Hz
Adapter Weight	1.7 oz / 48 g



### SAFETY AND MAINTENANCE

Before using your Nautica Wireless Charging Station, read the following precautions carefully to ensure optimal product performance.

Do not expose your charging station and its electronic parts to extremely hot (fire, direct sunlight, etc.) or cold conditions.

Extreme temperatures may cause the unit to explode or overheat which may in turn result in lower performance and a shorter life span. Also avoid applying high pressure or penetration to the unit with sharp objects.

Keep your credit cards or any other cards with magnetic chips or strips on them away from your Nautica Wireless Charging Station against the possibility of demagnetization.

Do not leave your devices unattended when charging in progress and always remember to unplug your wireless charging station when not charging.

Do not touch the product with wet hands.

Do not attempt to modify, repair, or replace any components of your Nautica Wireless Charging Station. Only authorized dealers or service centers can disassemble the product. If any parts of your product require replacement for any reason, including normal wear and tear or breakage, please contact us.

Keep the product away from liquids as exposition to liquids may cause your wireless charging station to short-circuit. In case of exposition to liquid, do not operate the charger.

Keep your product away from the reach of children. This product is not a toy.



### WARRANTY INFORMATION

We do our best to make sure that this product is free from defects in materials and workmanship for a period of 1 year.

The following conditions must be met for your warranty claim to be approved:

You must have purchased the product from a Nautica or Technofashion authorized dealer.

You must provide proof as to the date of purchase from the Nautica or Technofashion authorized dealer.

You must have used the product only as intended and in accordance with the product's care instructions.

Within 12 months after the purchase, in case of the product is determined to be defective (at the date of original purchase) due to improper materials or workmanship, you are entitled to free repair or exchange of goods. The product should be returned to Technofashion.

The warranty does not cover defects caused by third-party modifications, repairs or replacement parts.

Punctures, scratches, normal wear and tear and the natural breakdown of colors and materials over extended time and use are not warranted. Warranty applies to the USA only.

We will make every effort to replace limited edition or discontinued products but cannot guarantee availability for replacement.

Any limited edition or discontinued product still under its applicable warranty that cannot be replaced with an identical product will be replaced with the equivalent model based on availability.

We may make changes to products and designs in the time you purchased your product and submitted a warranty claim.

Products repaired or replaced under this warranty may or may not incorporate these changes.



### SUPPORT

For any questions, email us at [support@technofashion.com](mailto:support@technofashion.com)

**FCC ID: 2AZBO-N00013**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the device and receiver.
- Connect the device into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The distance between user and products should be no less than 20 cm.

# NAUTICA

designed, manufactured, distributed by  
**TECHNOFASHION**

© 2021 Technofashion, Inc. All Rights Reserved.  
Designed in USA. Made in China.  
May be patented. See [technofashion.com/patents](https://technofashion.com/patents)

