

MONSTER®
ARENA
BLUETOOTH SOUND BAR

User Manual



Notice of compliance

- **Warning:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- **NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - ☐ Reorient or relocate the receiving antenna.
 - ☐ Increase the separation between the equipment and receiver.
 - ☐ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - ☐ Consult the dealer or an experienced radio/TV technician for help.
- **DC Cable with a ferrite core must be used for soundbar to ensure compliance with the Class B FCC Limits**
- **"FCC RF Radiation Exposure Statement Caution:** To maintain compliance with the FCC's RF exposure guidelines, place the product at least 20cm from nearby persons."
- This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:
 - 1.This device may not cause interference.
 - 2.This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

 1. L'appareil ne doit pas produire de brouillage;
 2. L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.
- To maintain compliance with the RF exposure guidelines, place the product at least 20cm from nearby persons.
Pour rester en conformité avec les consignes d'exposition aux RF, placez le produit à au moins 20 cm des personnes proches.

Contents

1 Safety information

Safety information	1
--------------------	---

2 Getting to know your Soundbar

Ready? Let's begin	2
Accessories	2
Control panel and remote control	3
Making the connections	5
Installing the remote battery	6

3 Using your Soundbar

Standby mode	7
Switching inputs	7
Syncing the subwoofer with the soundbar	7
Adjusting the volume	8
EQ presets	8
Bass enhancement	8
Mute function	8
LED status table	8
Pairing a bluetooth device	9
Bluetooth status table	9
Controlling a paired device	9
Bluetooth notes	9

4 Other information

Wall mounting the soundbar	10
Technical specification	11
Care & maintenance	11

5 Product support

Troubleshooting	11
Disposal	12
Legal notices	12
Warranty	13



Safety information

Important - Please read these instructions fully before installing or operating

Power source



- This symbol means that this unit is double insulated. An earth connection is not required.
- The appliance must be connected to a 100-240 volt 50/60Hz AC supply by means of a three pin socket.
- Unplug this apparatus during lightning storms or when unused for long periods of time - to prevent damage to this product.



- Opening or removing covers may expose you to dangerous voltages or other hazards.



- To prevent risk of fire or electric shock, avoid overloading wall outlets, extension cords, or integral convenience receptacles.

- Use suitable power sources - Plug the product into a suitable power source, as described in the operating instructions or as marked on the product.
- The supply voltage should be the same as that indicated in the technical specifications and the appliance rating plate.
- If the socket outlets in your home are not suitable for the plug supplied with this unit check with a qualified electrician for replacement.
- In order to disconnect the apparatus from the mains completely, switch off the outlet and remove the mains plug completely.
- Do not bend, stretch or pull the supply cable in order to avoid electric shock.
- When installed, the power socket must be within easy reach.
- Do not install the unit in a confined space. Allow adequate ventilation to prevent heat build-up.
- For indoor use only.



Heat build up

- During use the unit will heat up, this is not a malfunction. If the unit is used continuously at high volume levels, the unit temperature will rise considerably. Do not touch the unit to avoid potential burns.

Moisture and water

- Do not use this apparatus near water or moisture.
- Do not use this product near a bathtub, washbowl, kitchen sink, and laundry tub, in a wet basement, near a swimming pool, or anywhere else that water or moisture is present.

Heat sources and flames



- Batteries shall not be exposed to excessive heat such as sun, fire or the like
- To prevent risk of fire or electric shock, avoid overloading wall outlets, extension cords, or integral convenience receptacles.

Servicing and repairs

- Refer all servicing to qualified service personnel
- Servicing is required when the apparatus has been damaged in any way: such as liquid has been spilled or objects have fallen into the apparatus; the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

Getting to know your Soundbar

You'll be up and running in no time

 
Ready? Let's begin...

Please read these instructions carefully. They contain important information which will help you get the best from your Soundbar and ensure safe and correct installation and operation.


If you require any further assistance, our technical experts are happy to help. For full details, refer to the product support section at the end of these instructions.

Accessories


1. ARENA Soundbar
2. Subwoofer
3. Remote control
4. CR2032 battery
5. Power adapter
6. User Manual
7. Optical fiber cable 1.8m
8. Wall Mount Bracket x2

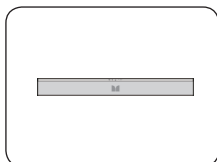


Soundbar

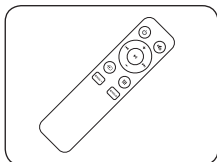 


Remote control

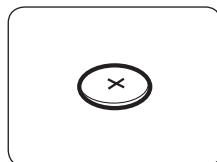 


CR2032 battery

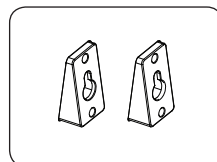 


Wall Mount Bracket x2

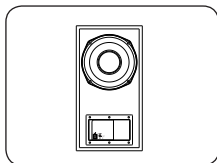 

Subwoofer

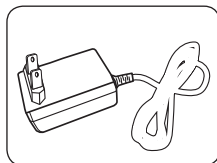 

Power adapter x2

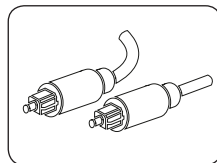 


Optical fiber cable 1.8m

Getting to know your Soundbar

You'll be up and running in no time

 Control Panel

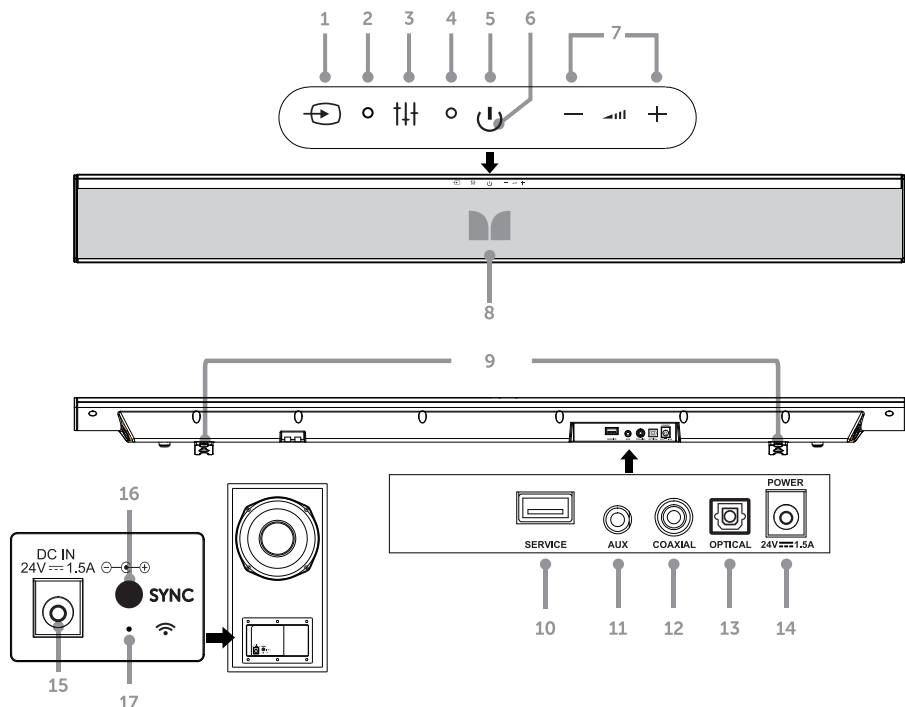


1. **SOURCE TOUCHPAD**: Select an audio source Bluetooth, COAXIAL, OPTICAL, AUX
2. **SOURCE INDICATOR**
3. **EQ TOUCHPAD**: Select an EQ mode from STANDARD, MOVIE, MUSIC or NEWS.
4. **EQ INDICATOR**
5. **STANDBY/MUTE INDICATOR**
6. **STANDBY/MUTE TOUCHPAD**: Switch on the Sound bar or switch to STANDBY mode
7. **VOLUME + / - TOUCHPAD**: Increase or decrease the output volume.
8. **REMOTE CONTROL RECEIVER**
9. **WALL-MOUNT BRACKETS**: Use these brackets to fix the Sound bar to a wall.
10. **SERVICE PORT**: Not for user access.
11. **AUX AUDIO INPUT (3.5mm)**: Connect the analogue audio output from an MP3 player or similar using a 3.5mm audio cable.
12. **COAXIAL AUDIO INPUT (RCA)**: Connect the digital audio output from a TV, DVD or Blu-ray player.
13. **OPTICAL AUDIO INPUT**: Connect the digital optical audio output from a TV, DVD or Blu-ray player.
14. **MAINS POWER DC INPUT**: Connect the supplied power adapter.
15. **SUBWOOFER MAIN POWER DC INPUT**: Connect the supplied power adapter.
16. **SYNC BUTTON**: Press and hold for 3 seconds to connect the soundbar to the wireless subwoofer.
17. **SUBWOOFER INDICATOR**: Indicates the current working status of the wireless subwoofer.

Getting to know your Soundbar

You'll be up and running in no time

 Remote Control

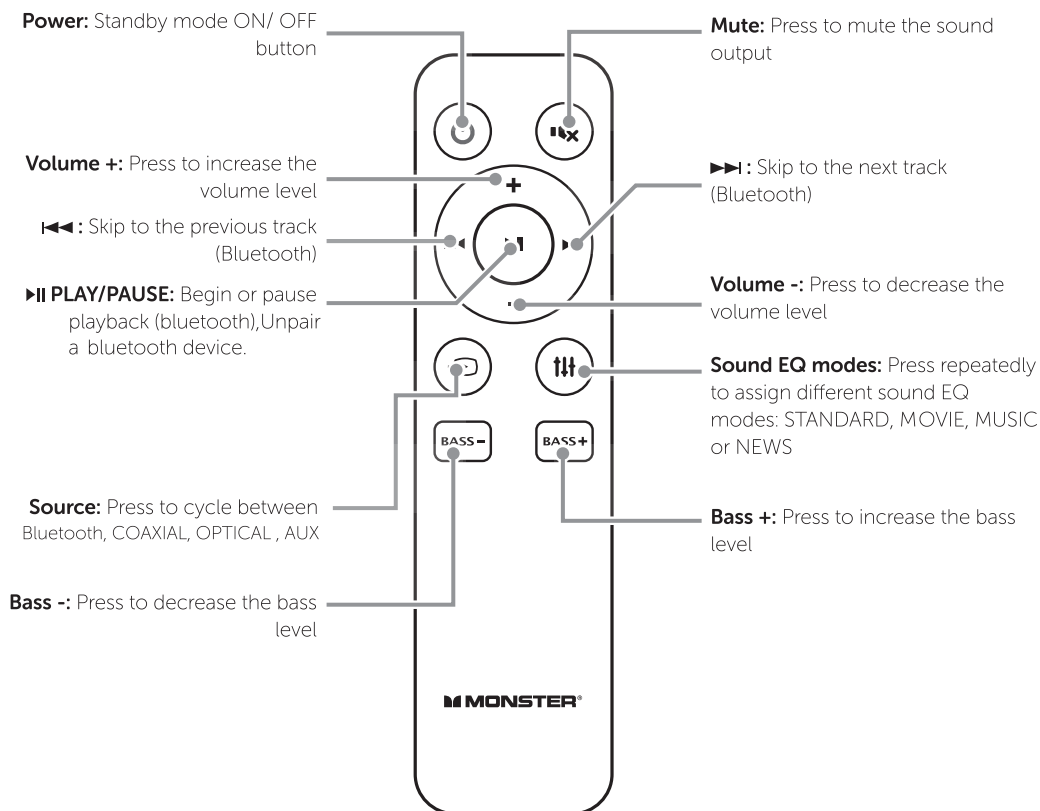

Muting Voice Confirmation

Set to AUX Mode, then press and hold the PLAY button for more than 5 seconds to turn off the voice confirmation function.

The voice confirmation will be muted the next time you turn your unit on.

To reactivate the voice confirmation function repeat the above steps.

 
Getting to know your Soundbar

You'll be up and running in no time

Making the connections

Follow the below connection guide to connect the soundbar to a TV with or without a digital output, a Blu-ray/DVD player or an audio source such as an MP3 player.

Only one digital connection to a TV is required. Use either the coaxial **or** optical connections
DO NOT power on the mains until all other connections are made.

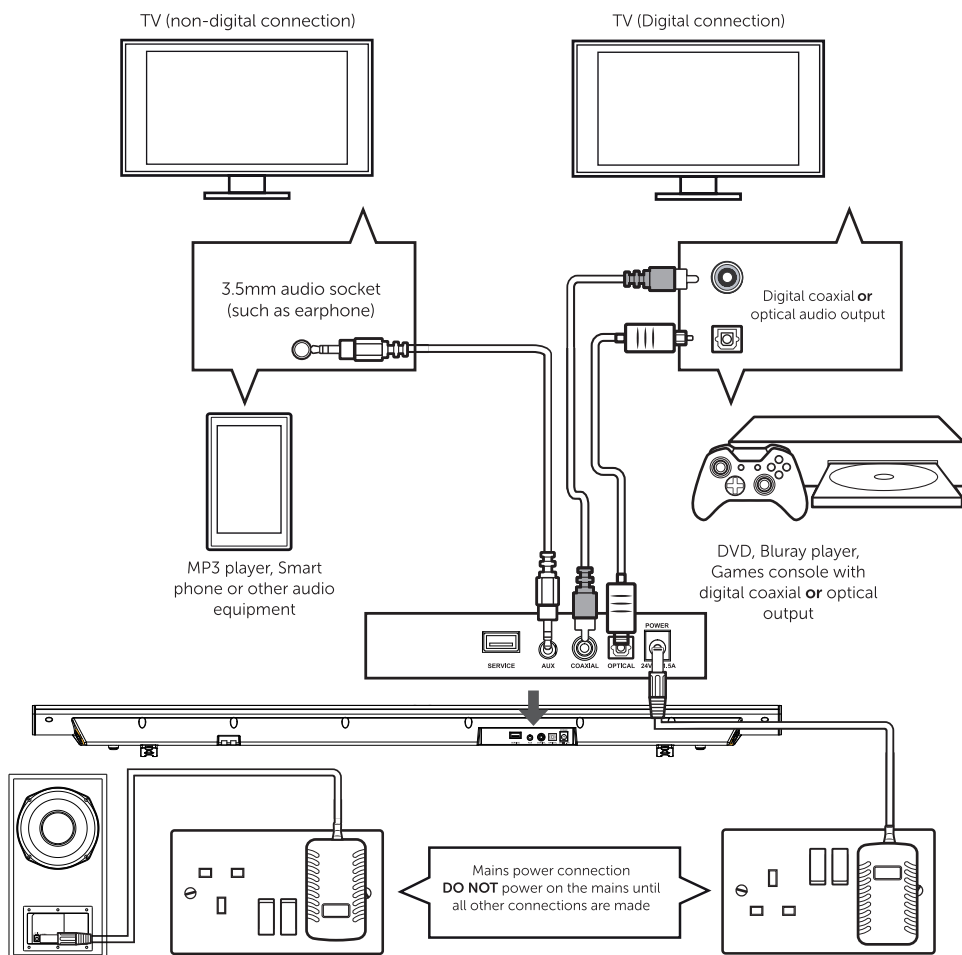


Getting to know your Soundbar


You'll be up and running in no time

Installing the remote battery

 
1. Turn the battery cover counter clockwise using a coin to open the battery compartment.

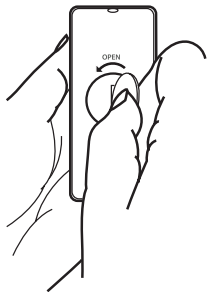

 2. Insert the CR2032 battery into the battery compartment with the + symbol facing upwards.

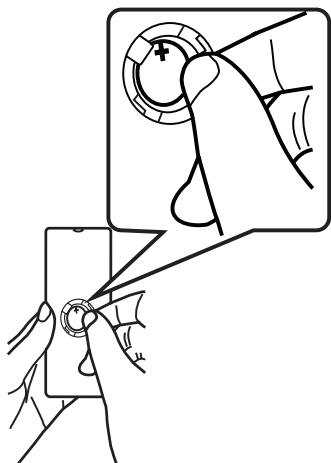

 3. Replace the battery compartment cover and turn clockwise using a coin to close.

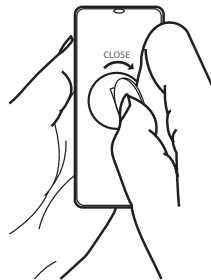

Battery disposal advice

- Dispose of used batteries with regard to the recycling regulations in your area.
- Do NOT short circuit batteries or throw them into water, the general rubbish or in a fire. Weak batteries can leak and damage the remote control. Replace them in good time!
- Keep coin-sized button batteries out of sight and out of the reach of children. Coin lithium batteries can cause serious injury when swallowed.

Using your Soundbar

Let's get started

Standby mode

This unit is designed to enter STANDBY mode automatically after 20 MINUTES (approximately) of inactivity. Press the STANDBY touchpad to wake the unit.

 
1. Press the STANDBY touchpad on the unit (6) or press the STANDBY button on the remote to put the system into standby mode.
2. To resume normal operation press either again.

Switching inputs

Follow the below steps to switch inputs between : Auxiliary, Coaxial, Bluetooth or Optical.

1. Ensure the Sound bar is powered ON. If not press the STANDBY touchpad on the unit (6) or remote.
2. Press the SOURCE touchpad on the unit (1) or remote repeatedly until you reach the required input mode.
 - Auxiliary input GREEN LED
 - Coaxial input PURPLE LED
 - Optical input WHITE LED
 - Bluetooth input BLUE LED

When switching inputs there will be a 2 second pause after selecting BT while the unit scans for paired devices.

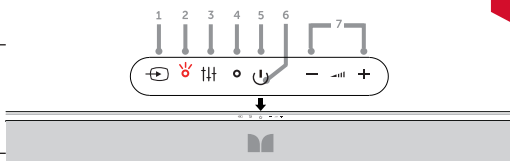

3. Press the **SOURCE** touchpad on the unit (1) or remote repeatedly until you reach the Bluetooth mode.
 - **DO NOT** attempt to connect your Bluetooth device with the soundbar before the subwoofer has been synced.
4. Press the **SYNC** button on the back of the subwoofer for 3 seconds.

If the syncing succeeds, both the indicator on the back of the subwoofer and the indicator of current **SOURCE** will stop blinking and remain solid.

 
If the syncing failed, both the indicator on the back of the subwoofer and the indicator of current **SOURCE** will blink slowly.

Repeat step 3 again to attempt syncing once more.

- The operation range of wireless subwoofer is approximately 6 meters (20 Feet). Any obstacles in the path between devices may reduce this range

Syncing subwoofer with soundbar

1. Power the unit **ON** using the **STANDBY** touchpad.
2. If the connection between the subwoofer and the soundbar is lost, both the indicator on the back of the subwoofer and the indicator of current **SOURCE** (2) will blink slowly.

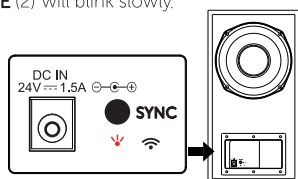

Adjusting the volume

1. To increase the volume level press the VOLUME+ touchpad on the main unit (7) or remote repeatedly or press and hold for fast adjustment. The STANDBY INDICATOR (5) will blink accordingly.
2. To decrease the volume level press the VOLUME- touchpad on the main unit (7) or remote repeatedly or press and hold for fast adjustment. The STANDBY INDICATOR(5) will blink accordingly.

EQ presets

1. Press the SOUND EQ touchpad on the main unit (3) or remote control repeatedly to cycle through the EQ sound modes. The EQ INDICATOR (4) will change color accordingly. Choose between : STANDARD, MOVIE, MUSIC or NEWS.

Bass enhancement

1. To increase the bass press the BASS + button on the remote. The STANDBY INDICATOR (5) will blink accordingly.
2. To decrease the bass press the BASS - button on the remote. The STANDBY INDICATOR (5) will blink accordingly.

The BASS levels range from -3 to +5.

Mute function

1. Pressing the MUTE button on the remote will temporarily silence the audio output. The STANDBY INDICATOR (5) will flash.
2. Press the MUTE button again to resume the audio output. The STANDBY INDICATOR (5) will be off.

LED status table

The below table explains the LED indications.

Operation	Description	Action of SOURCE INDICATOR (2)	Action of STANDBY INDICATOR (5)	Action of EQ INDICATOR (4)
Standby	Standby	off	WHITE(Solid)	off
Source	Aux	GREEN (Solid)	X	X
	Coaxial	PURPLE (Solid)	X	X
	Optical	WHITE (Solid)	X	X
	Bluetooth paired	BLUE (Solid)	X	X
	Bluetooth ready for pairing	BLUE (Flash)	X	X
Vol +/-	Adjust volume	X	Blink once	X
Bass +/-	Adjust bass level	X	Blink once	X
Sound EQ	Assign EQ mode	X	X	off (Standard) RED (Movie) GREEN (Music) WHITE (News)
Mute	Mute sound	X	WHITE (Flash)	X

Using your Soundbar

Let's get started

Pairing a bluetooth device

Before you can use the sound bar with your phone or other bluetooth capable device you will need to pair the device to the sound bar.

1. Press the SOURCE touchpad on the main unit (1) or remote repeatedly until you see the blue LED.
2. When selected the SOURCE INDICATOR (2) will flash while the unit tries to connect to previously paired devices. If no devices are found the SOURCE INDICATOR (2) will remain flashing to indicate it is ready for pairing a new device.
3. Enable the Bluetooth function on your audio device and search for a device labelled 'MONSTER ARENA' in the available list.
4. Select and enable pairing for the 'MONSTER ARENA' device. If prompted for a password enter '0000'.
5. If pairing is successful the sound bar will beep and the SOURCE INDICATOR (2) will stop flashing.
6. If the connected device goes out of range, the sound bar will attempt to connect for 2 minutes. When the device comes into range the sound bar will reconnect again automatically.
7. To remove a paired device, press and hold the ►|| PLAY/PAUSE button on the remote control for 5 seconds. The SOURCE INDICATOR (2) will begin flashing once more.

Bluetooth LED status table

SOURCE INDICATOR (2)	Reason
Solid blue (No flash)	Connected
Blue flashing	Auto reconnecting with the last paired device. Pairing mode.

Controlling a paired device

Once connected you can either use the controls on the audio device to begin playback, skip tracks etc. Or you can use the control buttons on the remote.

1. The ►|| PLAY/PAUSE button on the remote when pressed will begin playback of the selected track on the audio device. Press again to pause playback.
2. To skip to the next track press the SKIP ►► button on the remote.
3. To skip to the previous track press the SKIP ◀◀ button on the remote.
4. Any further operations must be done from the audio device.

The volume output is effected by the volume level on the audio source EG: Phone or laptop, so make sure that is set to about 70-80% (not too loud to avoid distortion).

Bluetooth notes

 
- The operation range of bluetooth is approximately 10 meters (30 Feet). Any obstacles in the path between devices may reduce this range.
- Only one Bluetooth device can be paired at a time.
- Not all Bluetooth devices are compatible.

Other information


Helpful technical information

Wall mounting the soundbar

1. Screw the two wall-brackets (supplied) to the back of the soundbar with the screws supplied in the locations shown below.

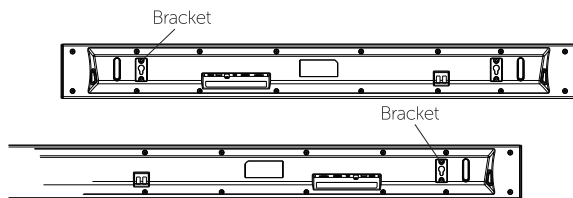


 2. Align the Sound bar in the chosen location. Use a pencil to mark the drilling positions (620mm / 24.4") apart.

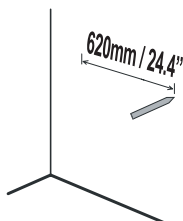

The Sound bar should be located 2-3" (5-8CM) below the TV.

 3. Drill holes as marked in STEP2.

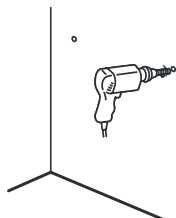


4. Insert 2 screws (not supplied) into the holes and tighten. Take care to leave 5mm between the screw heads and the wall.



You will need to ensure the screws are long enough to sufficiently grip the wall while allowing 5mm between screw head & wall.

 5. Hook the Sound bar into the screws. For secure mounting ensure the screw heads slide firmly into the narrow part of the brackets.

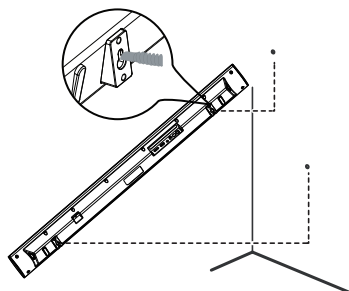

- In order to avoid damage to the unit and personal injury you should get a qualified person to drill the fixing surface and fit the appropriate wall fixings.
- Take care not to allow the main unit to fall while attempting to hook onto the wall mount brackets.
- Before mounting, check the wall strength, if it is not clear then consult relevant qualified personnel.
- When drilling into walls, always check that there are no hidden wires or pipes etc.
- Make sure the screws & wall plugs are suitable for supporting the unit.

Other information

Helpful technical information

Technical specification

Amplifier	
Power output	360W max.
Frequency response	45Hz - 20KHz $\pm$ 3dB
Main unit	
Power supply	INPUT: 100-240V $\sim$ 50/60Hz OUTPUT: 24V $\equiv$ 1.5A
Power consumption	30W
Standby power consumption	$\leq$ 0.5W
L&R speaker drivers	Impedance: 8 Ohm, 2x2.5" + 2x Doom tweeter
Subwoofer	Impedance: 4 Ohm, 6.5"
Dimensions	Soundbar: 900W x 53H x 90D mm (35.43"W x 2.09"H x 3.54"D) Subwoofer: 190W x 370H x 335D mm (7.48"W x 14.57"H x 13.19"D)
Mains cable length of adapter	Soundbar: 2.5m and for Subwoofer 1.5m
Remote control	
Battery	1 x CR2032
Bluetooth	
Bluetooth compatibility	EDR, A2DP, AVRCP
Bluetooth version	4.2

Care & maintenance

After using the Soundbar

Set to Standby.

Switch the unit off at the mains and unplug it if you are leaving it unattended for a long period (holidays etc).

Avoid leaving the battery fitted in the remote control if you leave the unit unattended for long periods. It may leak and damage the remote control.

Care & cleaning

All care and cleaning operations should be carried out with the unit unplugged from the mains power.

Occasionally wipe the cabinet with a lint free duster. Never clean the unit with liquids or solvents.

Troubleshooting

No power.

- Ensure the mains plug is connected to a power supply, and is switched ON.
- Make sure there is power to the mains socket.

Optical cable does not fit well

- Remove the clear rubber cap from each end before use.

No sound?

- Make sure if playing from the AUX input, the external source has the volume turned up and is playing a track.
- Make sure the volume is turned up.
- If using a digital coaxial or optical connection ensure the source DIGITAL output is set to PCM, LPCM, PCM 2Ch stereo or PCM downmix
- Bluetooth device not paired. Check 'Pairing a bluetooth device' on page 9.

No response from the Soundbar.

- Unplug the power cable for 1 minute then plug back in again.

I don't hear sound from my subwoofer.

- Verify that subwoofer is plugged into a power source.
- Check the white light on the back of the the subwoofer. If it is **flashing white**, you need to sync the subwoofer to the sound bar using the instructions on page 7.

Remote control does not work.

- Reduce the distance between the remote and main unit
- Check the batteries are installed correctly.
- Replace the batteries
- Aim the remote directly at the Sound bar

Unit powers off after 20 minutes.

- This unit is designed to enter STANDBY mode automatically after 20 MINUTES of inactivity. Press the STANDBY touchpad to wake the unit.

Product support

Help is always at hand

Disposal



- Disposal of your old product. Your product is designed and manufactured with high quality materials and components, which can be recycled and reused
- When this crossed out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.
- Please make yourself aware of the local collection system for electrical and electronic products.
- Please act according to your local rules and do not dispose of your old products with your normal household waste.
- The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.

Legal notices



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks is under license.

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This equipment has been tested and found

to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAN ICES-3 (B)/NMB-3 (B)

This product complies with CAN ICES-3 (B)/NMB-3(B) of ICES-003. Applicable at the date of manufacture.

Limited Warranty

Model MNARENA-35

This Monster-branded product, marketed as new, in the original carton to the original purchaser ("Product"), is warranted by Russell Distribution Company, LLC against manufacturing defects in materials and workmanship for a limited warranty period of Ninety (90) Days for Labor and One (1) year for Parts. This Limited Warranty is conditioned upon proper use of Product by you, the Purchaser.

This Limited Warranty does not apply to store display products and product sold as a "marked down" special, in "as is" condition, "close outs", "liquidation and clearance sales", "open box", products missing accessories, or no fault found.

Proof of purchase in the form of a Bill of Sale, Receipt or Receipted Invoice is evidence the Product is within the limited warranty period. The Bill of Sale, Receipt or Receipted Invoice must be presented as a pre-condition to obtaining the limited warranty service.

This limited warranty begins on the original date of purchase and is valid only on Products purchased through authorized dealers and used in the United States, and Puerto Rico, by the original Purchaser. To receive warranty service, the Purchaser must first contact us for problem determination and service procedures. The original dated bill of sale, receipt or receipted invoice must be presented upon request as proof of purchase.

We will repair your product or if repairs cannot be made, we will replace it at no charge with the same or similar product. If the Product is defective as specified in this limited warranty during the limited warranty period, we may use new or remanufactured parts to repair the Product. All replaced parts and products become our property and must be returned to us. Replacement parts and products assume the remaining original limited warranty, or ninety (90) days, whichever is longer.

Product freight must be prepaid by you, the original Purchaser and shipped in either its original packaging or packaging affording an equal degree of protection. We will not be responsible for or obligated to replace damaged Products.

If the Product is received damaged, it is your responsibility as the consumer to file a claim against the carrier. We will only store the damaged Product for 30 days and reserve the right, in our sole discretion, to dispose of the damaged Product or ship it back to you at your expense after 30 days.

This limited warranty covers manufacturing defects in materials and workmanship encountered in normal, and except to the extent otherwise expressly provided for in this statement, noncommercial use of this Product, and shall not apply to the following, including, but not limited to: Damage which occurs in shipment; delivery and installation; applications and uses for which this Product was not intended; altered Product or serial numbers; cosmetic damage or exterior finish; accidents, abuse, neglect, fire, water, lightning or other acts of nature; use of products, equipment, systems, utilities, services, hardware, supplies, accessories, applications, installations, repairs, external wiring or connectors not supplied or authorized by us or the manufacturer, which damage this Product or result in service problems; incorrect electrical line voltage, fluctuations and surges; customer adjustments and failure to follow operating instructions, cleaning, maintenance and environmental instructions that are covered and prescribed in the instruction book; reception problems and distortion related to noise, echo, interference or other signal transmission and delivery problems; burned-in images. Uninterrupted or error-free operation of the Product is not warranted.

THERE ARE NO EXPRESS OR IMPLIED WARRANTIES OTHER THAN THOSE LISTED AND DESCRIBED ABOVE, AND NO WARRANTIES WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL APPLY AFTER THE EXPRESS WARRANTY PERIODS STATED ABOVE, AND NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR CORPORATION WITH RESPECT TO THIS PRODUCT SHALL BE BINDING ON US. REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS LIMITED WARRANTY IS YOUR EXCLUSIVE REMEDY AS THE CONSUMER. WE SHALL NOT BE LIABLE FOR ANY INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT; EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED FOR THE DURATION OF THIS LIMITED WARRANTY. THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT, IS NONTRANSFERABLE AND STATES YOUR EXCLUSIVE REMEDY.

Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This limited warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Any provision contained herein which is found contrary to state or local laws shall be deemed null and void and the remaining provisions shall continue in full force and effect.

To obtain warranty service:

Telephone: 800-976-0677

