



GENESIS



Thank you for purchasing this Rear seat smart infotainment system (CCRC).

This user's manual explains how to use the Rear seat smart infotainment system (CCRC).

Before using the product, read the contents of this user's manual carefully and use this product safely.

- The design and the specifications of this product are subjected to change without any pre-notification for the improvement of product.

Start

Name aNd FuNction oF

each compoNeNt	7
Bluetooth remote coNtrol	7 chaNGiNg the Battery oF the Blue-tooth remote coNtrol
rear Seat moNitor	10

BaSiC coNtrolS	11
turniNg the SyStem oN	11
SyStem reSet	13
how to uSe touch ScreeN	14
SelectiNg meNu	14
Swipe	15
how to uSe the Quick coNtrol .	16
BaSiC	

coNtrolS oF home ScreeN 17 editiNg home

ScreeN 19 media

playiNg uSB	21
uSB muSiC ScreeN compoSitiON	21
playiNg uSB muSiC	23
pauSe/play	23
play previouS/Next muSiC	23
Forward/reverSe Search	23
Search previouS/Next muSiC	23
[liSt]	24
[ShuFFle]	25
[repeat]	26
[SouNd SettiNgS]	26
uSB video ScreeN compoSitiON	27
playiNg uSB video	29
pauSe/play	29



SwitchiNg USB diSplay ScreeN (BaSic mode
ScreeN/eNtire ScreeN) .29 play previous/Next
File 30 Forward/reverSe
Search 30 move BeFore/aFter 30
SecoNdS . 30
[liSt] 31
[repeat] 32
[File iNformation] 33
[SuBtitle SettiNgS] 34
[SouNd SettiNgS] 35
 [diSplay SettiNgS] 35 [voice
SettiNgS] 35

eNtertaiNmeNtS 36 SyStem

data/Network SettiNgS 40 move to
data/Network SettiNgS
ScreeN 40 [wi-
Fi] 41
[modem iNformation] 42

SouNd SettiNgS 43 adjuStiNg the SouNd
eFFect (iF
eQuipped) 43 move
to SouNd SettiNg ScreeN . . 45
[premium SouNd] (iF eQuipped) . . . 46
[toNe] 47
[BeoSonic] (iF eQuipped) 47
[poSition] 48 [Start-
up max. vol. limit] 49

**device coNNection Set-
tiNgS 50** move to device coNNection Set-
tiNgS ScreeN 50
[Bluetooth headSet] 51 iN caSe
oF No previous regiStra-

tion (New regiStratiON) 51 iF a device
iS regiStered 53

[Bluetooth remote coNtrol] 54 iN caSe oF
No previous regiStratiON (New
regiStratiON) 54 iF a device iS
regiStered 56

[Bluetooth gamepad] 57 iN caSe
oF No previous regiStra-
tion (New regiStratiON) 57 iF a

device iS regiStered 59 **diSplay**

SettiNgS 60 move to diSplay SettiNgS
ScreeN 60

[illumiNatioN (rear Seat)] 61 [Blue light
Filter] 62 [graphic
themes] 63 [adjuSt video
color] 64 [aSpect
ratio] 65

ButtoN SettiNgS 66 move to rear cuStom

ButtoN Set-
tiNgS ScreeN 66 [rear
cuStom ButtoN ☆] 67 **geNeral**

SettiNgS 68 move to geNeral SettiNg

ScreeN 68
[Sw iNFo/update] 69
[SyStem iNFo] 69
[laNguage] 70
[keyBoarD] 71
[coNteNt Service] 72
[reSet] 73

update



wireleSS update 75

otherS

[climate] 79 operatiNg rear
climate 79

[maNual] 80

[oNliNe maNual] 80
[pop-up guide] 81
[Screen guide] 81
[operation guide] 82
[Bluetooth guide] 82
[Network guide] 83

[mood curator] 84 operatiNg mood
curator 84

[all meNuS] 86 operatiNg all
meNuS 86 editiNg all
meNuS 87

[appS] 88 operatiNg
appS 88 updatiNg
app 89 maNagiNg
app 89

[hdmi] 90 operatiNg
hdmi 90 reFereNce

the iNformation aBout a

owNer'S maNual 93 aBout thiS owNer'S

maNual 93 the SymBol uSed iN thiS
owNer'S

maNual 93

precautionS For SaFety 94 geNeral

iNformation 96 cautionS For the uSe of

uSB 96 playABle File StaNdard 96

97 playABle audio File StaNdard (uSB) .

97

playABle video File StaNdard . . . 97 playABle

SuBtitle StaNdard 97 regiStered

trademark aNd liceNSe 98

dolBy 98 dtS

digital SurrouNd 98

Bluetooth® 98

hdmi® 98

BeFore you thiNk the product iS

deFective 99 reSponSe to Failure

SymptomS 100

SpeciFication 102 rear Seat moNitor

product SpeciFi-

cation 102

coNNected Service termiNal prod-

uct StaNdard 104 aBout

the Service 105

Free Service 105

charged Service 105

compeNSatioN StaNdard For cuS-

tomer damage 105

deSigNated Service ceNter

106 open Source Software Notice

108


Start

Name aNd FuNction OF each compoNeNt

Bluetooth remote coNtrol

The image of this product may be different from the actual product.

You can use it after connecting the Bluetooth remote control. For more details, refer to the "Device Connection settings".

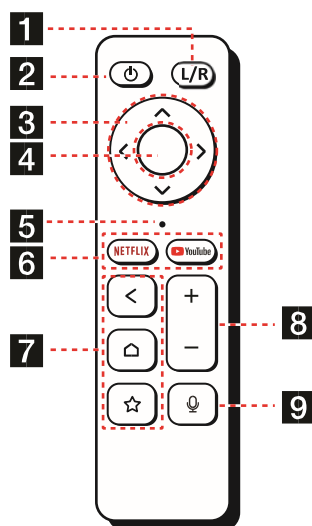

a L/R button

You can select the left rear seat screen or the right rear seat screen to operate. ba button

- Press to turn the system on/off.
- Press and hold to turn the screen on/off. The sound remains on.

c </^/>/v Controller

Press the button to move to the desired menu or item.

d Select button

Select the desired menu or item.

e LED

When the Bluetooth remote control is connected, the LED lights up when operating.



f Entertainments button (if equipped)

Press the desired Entertainments. (OTT services may differ from region.) g <

button

- Press to move to the previous screen.
- Press and hold to go to the home screen.

 button

Moves to home screen.

m (User) button

- Moves to the screen of the function that the user selected.
- Press and hold to move to the custom button settings screen.
- If you press the button after you select [None] on the rear custom button settings screen, moves to the rear custom button settings screen.

hK /L button


Press the button to adjust the volume.

i (Voice recognition) button (Available on YouTube)

Press and hold the button to search for the desired content by using voice. (Voice recognition may not be supported depending on the software version.)

chaNgIng the Battery oF the Bluetooth remote coNtrol

The image of this product may be different from the actual product.

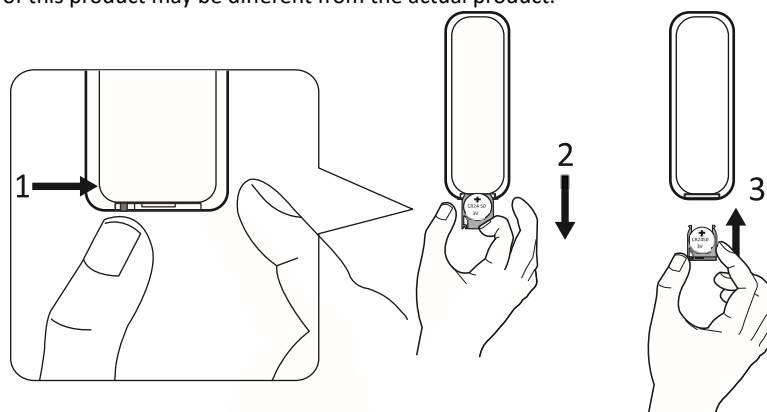


Caution

- There is a risk of fire or explosion if you replace the battery with a battery that does not meet specifications. Replace with a CR2450 or equivalent 3V micro lithium battery.
- Do not heat the batteries in this device above 100 °C.
- Do not swallow batteries. There is a risk of chemical burns.

rear Seat moNitor

The image of this product may be different from the actual product.

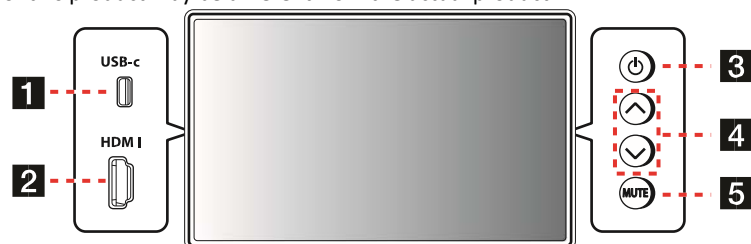

- a USB-C
Connect a USB C type storage device to play media.
- b HDMI
Connect an HDMI cable to connect an external device to this unit. ca button
Press the button to turn the rear seat screen on/off.



dS/W button

Press the button up/down to adjust the volume. (You can adjust the volume up to 45 levels.

Detailed control is possible from low to high volume.) e [MUTE] button



Press the button to turn mute on/off.


Basic controls

turning the System on

1. When the vehicle starts and touch the rear monitor, the screen turns on.

When the system is on, the screen shows the swipe operation pop-up guide, the quick control screen pop-up guide and the sound pop-up guide.

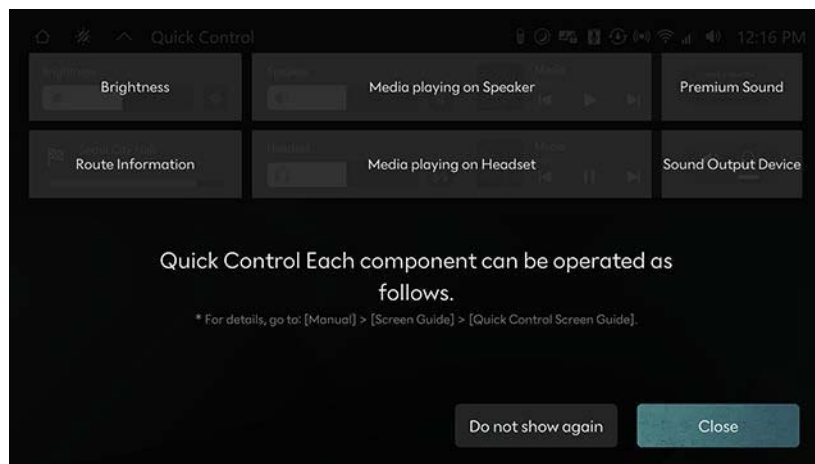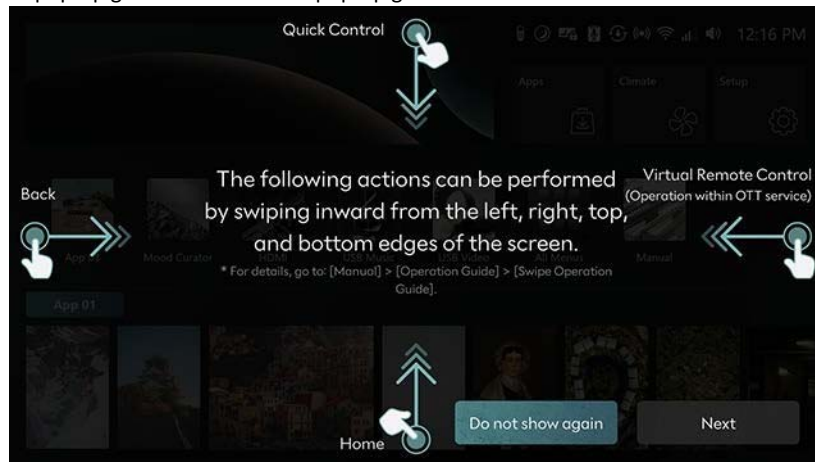

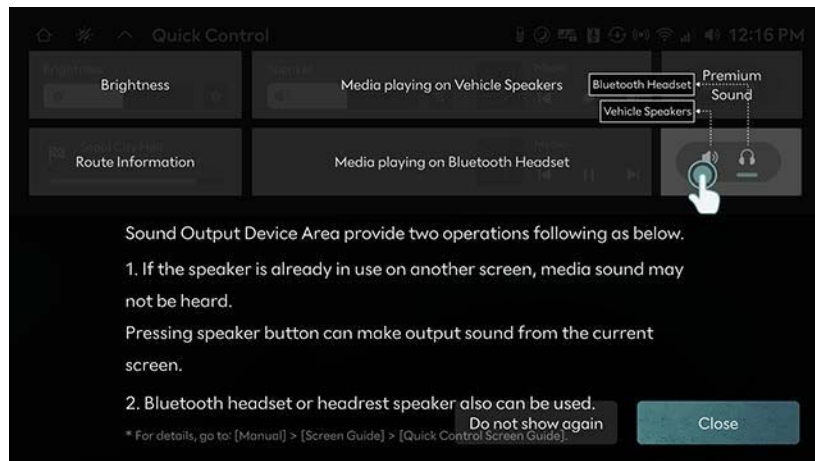

2. Press [Do not show again].




Note

- System control is disabled during the system booting. Some duration is required until the entire system features are ready.
- When the vehicle starts and touch the rear monitor, the swipe operation pop-up guide, the quick control screen pop-up guide and the sound pop-up guide are always displayed. (The guide not be displayed when you turn the vehicle engine off and turn it on immediately.)

SyStem reSet

System Reset is a feature to recover from the production malfunctions.


Press and hold [W] button and [MUTE] button for 5 seconds on the rear seat monitor to reset the system.

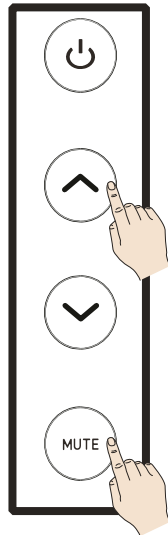

how to use touch Screen

Selecting menu


Select the menu by finger touch on the rear seat screen.

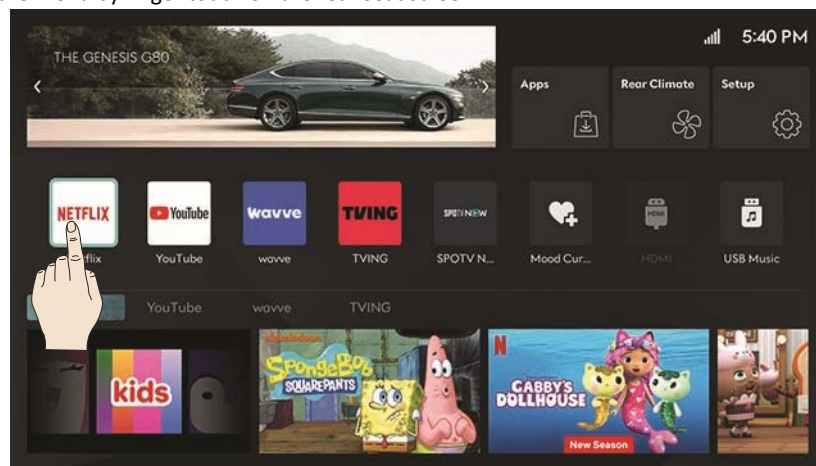



Swipe


Touch and lightly swipe the top/bottom/left/right edges of the screen.

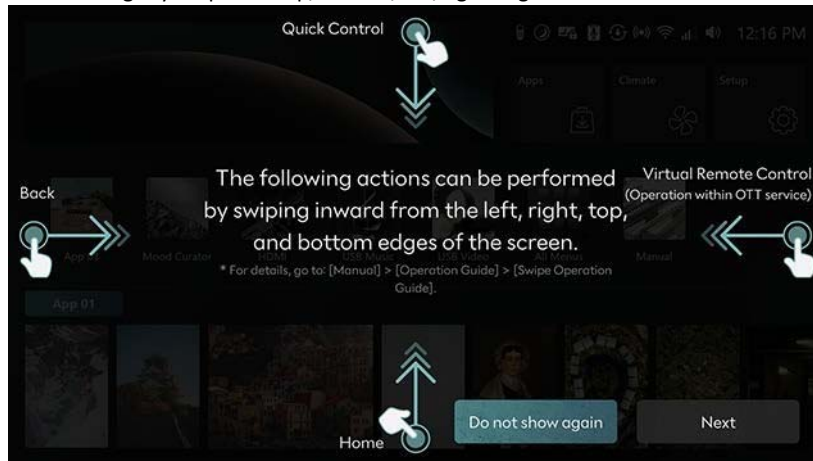

- If you swipe the screen from top to bottom, the quick control screen is displayed.
- If you swipe the screen from left to right, moves to the previous screen.
- If you swipe the screen from right to left, the virtual remote control is displayed. (Only works with the entertainments.)
- If you swipe the screen from bottom to top, moves to the home screen.

how to uSe the Quick coNtrol

Displays the quick control by swiping down from the top of the screen on the rear seat screen.

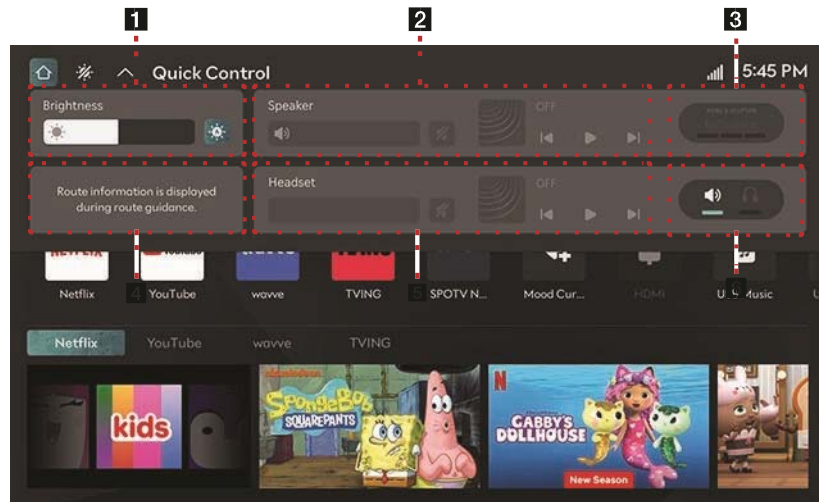


- a Screen brightness
Adjusts screen brightness.
- b Vehicle speakers/Media
Adjusts the volume of playing media through the vehicle speakers.
- c The sound effect (if equipped) Adjusts the sound effect.
- d Show route
Checks the current driving information. (You can check information when the destination is set in the front seat screen.)
- e Headset/Media
Adjusts the volume of playing media through the Bluetooth headset. f Sound output
Changes the output source of the playing media.

BaSiC coNtRoLS of home Screen

The images displayed on this system may differ from actual ones.

Press [] on the remote control or press [] on the quick control screen. The home screen opens.

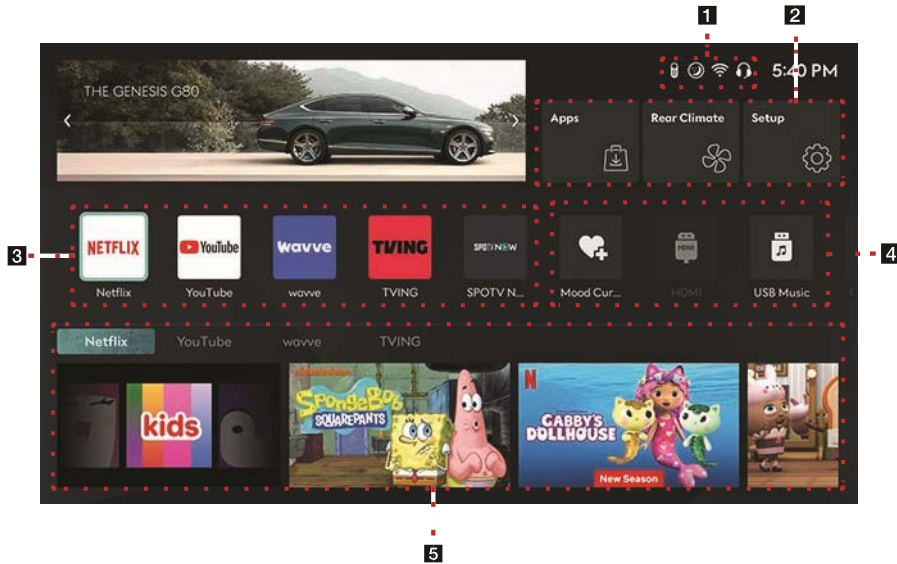

a Indicator icon

Network, sound, updates, vehicle status, etc are displayed as icons. b [Apps]

Moves to the apps screen.

[Rear Climate]

Moves to the rear climate screen.

[Setup]

Moves to the setup screen.

c Entertainments

Press the desired Entertainments.

d [Mood Curator]

Moves to the mood curator screen.

[HDMI]

Moves to the HDMI screen. (Connects an HDMI device to use it.)

[USB Music]

Moves to the USB music screen.

[USB Video]



Moves to the USB video screen.

[All Menus]

Moves to the HDMI screen.

[Manual]

Moves to the Manual screen.


e Recommendation contents

You can check recommendation contents in Entertainment.

editiNg home Screen

Press and hold the menu icon on the home screen to change the location.


Press and hold the desired menu icon on the home screen and then drag it left or right to change its location.

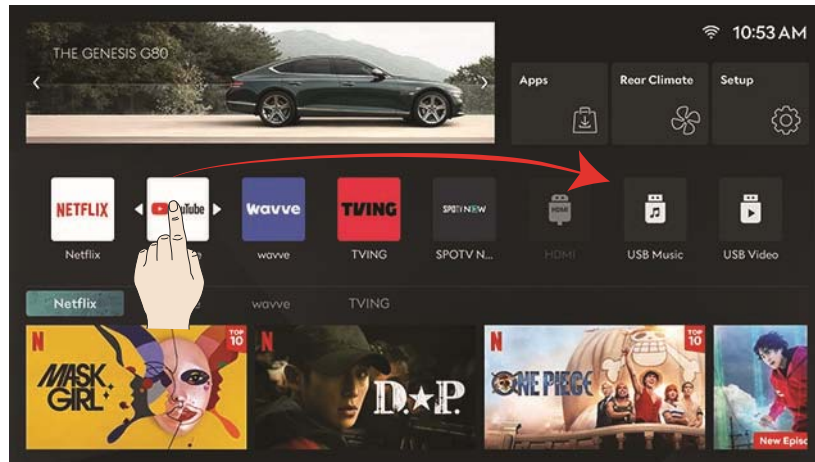

media

playiNg uSB

uSB muSic ScreenN compoSition

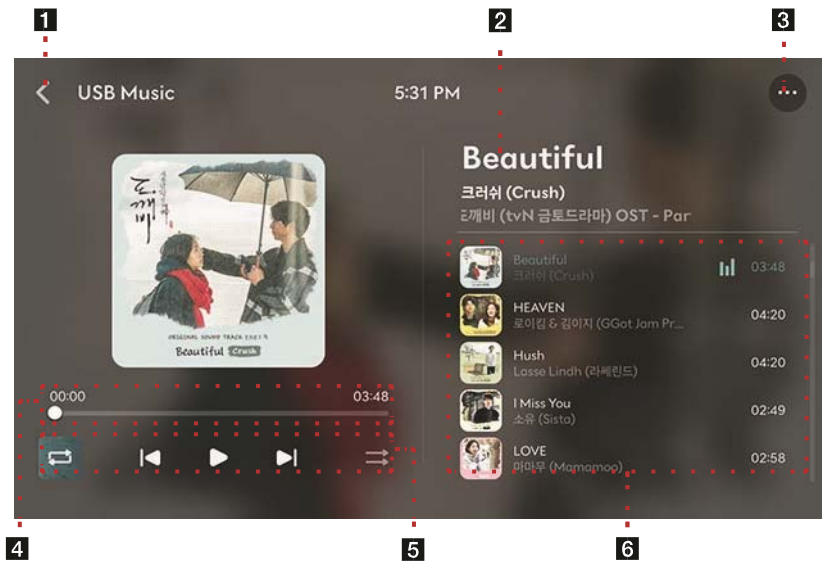

a <

Moves to the home screen or the previous screen.

b Played File Information

Shows the song title, the artist and the album title.

c ⋮

Shows USB music menu.

d Play Time

Shows the play time information.

e Repeat

Activates repeat.

Control Panel

Controls play, pause and search.

Shuffle

Activates/Clears random play.

f Play List

Displays the play list.

playiNg uSB muSic

Connect a USB memory to USB connection terminal.

pauSe/play

Pause/Play a file.

Location	Details
Rear seat screen	• Touch [M] during play. • Touch [d] during pause.
Bluetooth remote control	• Press the select button during play. • Press the select button during pause.

play previous/Next muSic

Location	Details
----------	---------

Bluetooth remote control	Press [^ / v] and then press the select button when the desired music is displayed.
Plays the previous/next music.	
Location	Details
Rear seat screen	Touch [◀ / ▶].

Forward/reverse Search the file
Rapidly searches in play.

Location	Details
Rear seat screen	After touching on [◀ / ▶] for a long time and release the finger at the pot.



Note

- When pressing [◀ / ▶] for 5 seconds or longer, the play speed changes as 4X > 20X.
- No sound is on during forward/reverse searching.


Search previous/Next music

Plays the previous/next music.

During searching, the file name is highlighted. When the desired file name is displayed, press the select button on the Bluetooth remote control to play the file.

[list]

May play a desired file by searching the list.

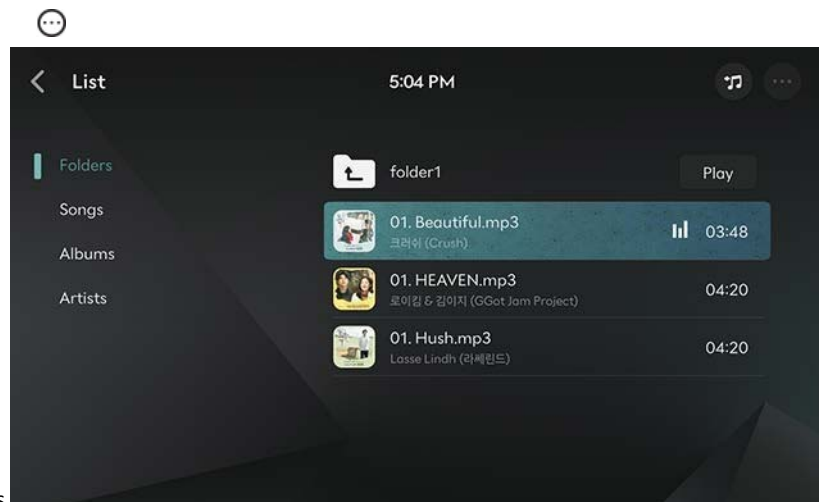

1. Press **[List]** on the playing screen.
2. In list screen, search a desired file by folder, songs or albums, artists. When the desired file found from the search is selected, the file plays.




Note

If you press **[Play]** on the list screen, plays from the first file within the selected folder.

[Shuffle]

Play the entire files in a random order.


Press **[Shuffle]** on the playing screen to activate/clear shuffle play.

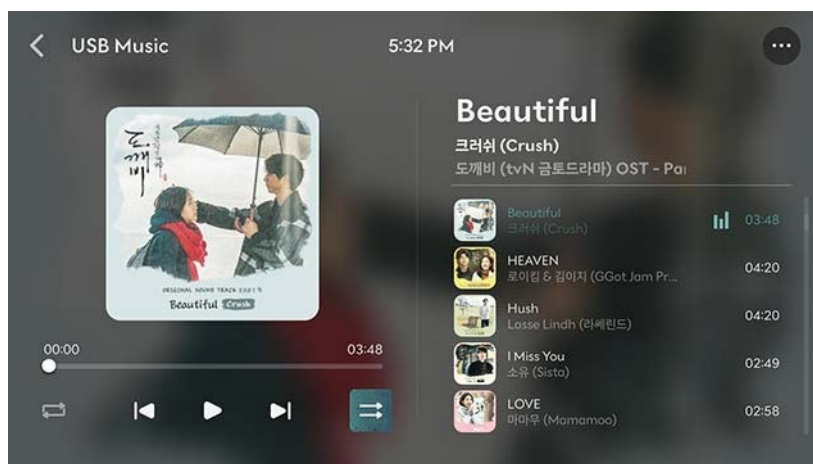

[repeat]

A file plays repeatedly.

Select  /  /  /  on the playing screen.

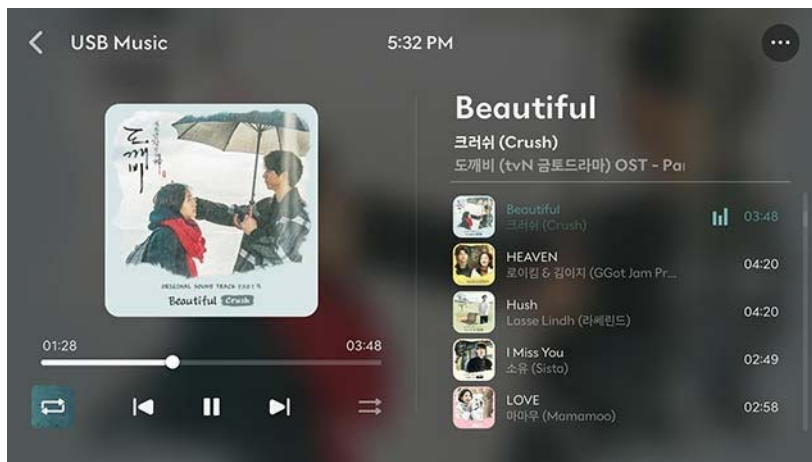

: [Repeat all]

: [Repeat album] / [repeat Artist] (It is displayed when all files repeat during playback)

•

• from the [Albums] or [Artists] category.)

 •: [Repeat folder]

 •: [Repeat One]

[Sound Settings]

1. Press  > [Sound Settings] on the playing screen.
2. For more details, refer to the "Sound Settings".

uSB video ScreenN compoSition



a <

Moves to the home screen or the previous screen.

b File Index

Shows the entire number of files.

c Control Panel

Controls play, pause, search and 30 seconds before/after.

d ⋮

Shows USB video menu.

e Play Time

Shows the play time information.

Repeat

Activates repeat.

f Play List

Displays the play list.

playiNg uSB video

Connect a USB memory to USB connection terminal.

pauSe/play

Pause/Play a file.

Location	Details
Rear seat screen	• Touch [M] during play. • Touch [d] during pause.
Bluetooth remote control	• Press the select button during play. • Press the select button during pause.

SwitchiNg uSB diSplay ScreeN (BaSic mode ScreeN/eNtire ScreeN)

Location	Details
Rear seat screen	Touch the screen.
Bluetooth remote control	When the select button pressed on the entire screen, basic mode screen opens.



Note

- When no control within 5 seconds on basic mode screen, it automatically switches to the entire screen.
- Press  > [Full Screen] on the screen to open the entire screen.

play previous/Next File

Plays the previous/next file.

Location	Details
Rear seat screen	Touch [⏮/⏭].

Forward/rev erSe Search the file

Rapidly searches n play.

Location	Details
Rear seat screen	After touching on [⏮/⏭] for a long time and release the finger at the starts from that spot.

! Note

- When pressing [⏮/⏭] for 5 seconds or longer, the play speed changes as 4X > 20X.
- No sound is on during forward/reverse Searching.

move BeFore/aFter 30 SecoNdS


Moves the playing file 30 seconds before/after.

Location	Details
Rear seat screen	Press [⏮30]/[⏭30] to move the playing file 30 seconds before/after.

[liSt]

May play a desired file by searching the list.

1. Press [⏮]

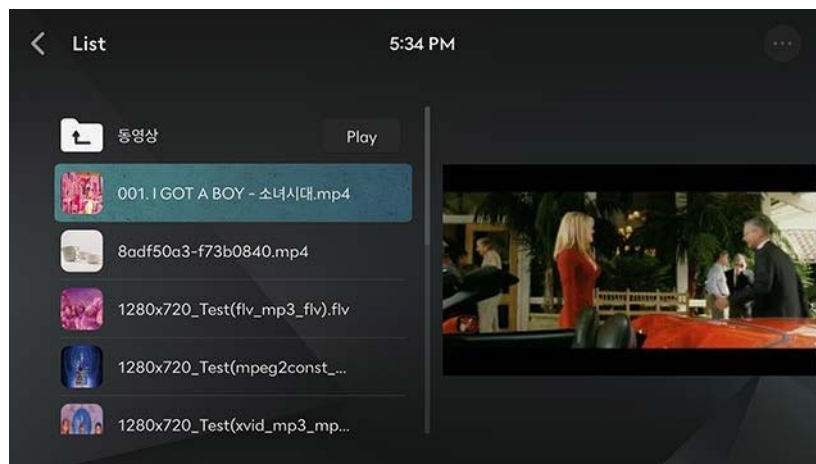

2. Selecting a desired file in list screen starts playing the file.

! Note


] > [List] on the playing screen.

If you press [Play] on the list screen, plays from the first file within the selected folder.

[repeat]

A file plays repeatedly. 1. Press

 > [Repeat] on the playing screen.

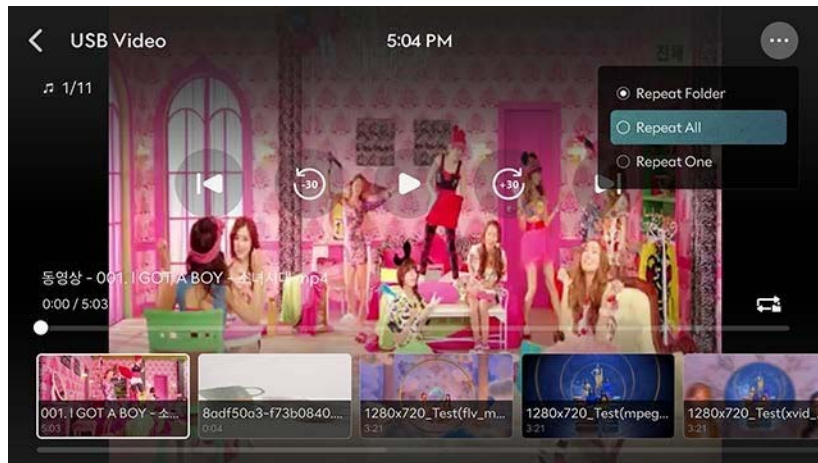

2. Press a desired repeat mode.

- [Repeat Folder]: The entire files saved in the folder play repeatedly.
- [Repeat All]: The entire files play repeatedly.
- [Repeat One]: The file currently in play is repeated.

Note


Selecting []/[]/[] on the rear seat screen also activates repeat.

-  [Repeat Folder]
- 
- 

- : [Repeat All]
- : [Repeat One]

[File iNformation]

Shows the information on the name, size and play time of the file currently in play.

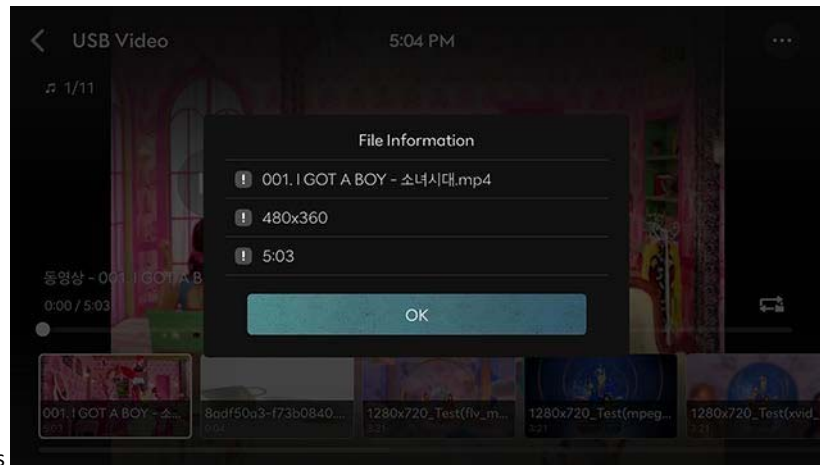


1. Press  > [File Information] on the playing screen.
2. Press [OK].

[SuBtitle SettiNgS]

Available to use for a file supporting multiple-subtitles. Selects the subtitle displayed on the screen.

 > [Subtitle Settings] on the playing screen.

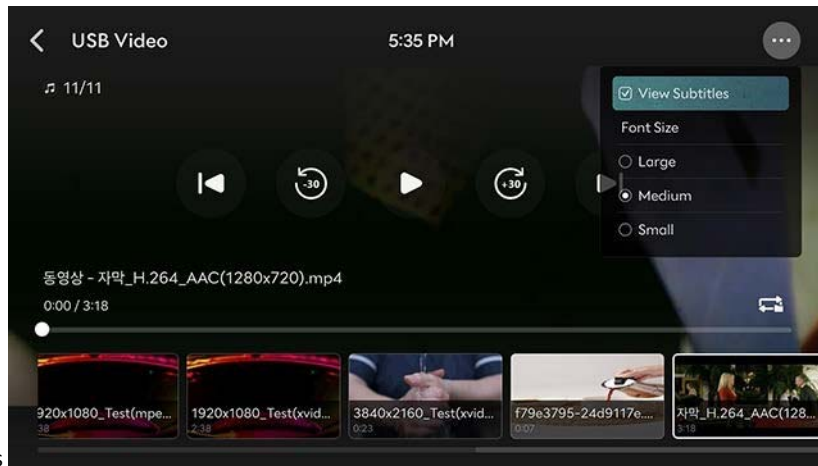

1. Press
2. Selecting a desired menu.
 - [View Subtitles]: Activates/Clears the subtitle display.
 - [Font Size]: Sets the font size for the subtitle displayed on the screen.

[SouNd SettiNgS]

1. Press  > [Sound Settings] on the playing screen.
2. For more details, refer to the "Sound Settings".



[diSplay SettiNgS]

Adjusts Brightness/Contrast/Saturation for video play.

1. Press [⏏] > [Display Settings] on the playing screen.
2. For more details, refer to the "Display Settings".

[voice SettiNgS]

Available to use for a file supporting multiple voices.

1. Press [⏏] > [Voice Settings] on the playing screen.
2. Select a desired voice.

eNtertainNmeNtS


You can watch content by streaming without connecting to a mobile phone in the vehicle.



Note

- You can use it after subscribing to the streaming services of the content platform and subscribing to a Streaming Plus in the MY GENESIS app.
- To use this feature, you need to install the MY GENESIS app on your smartphone and subscribe to Genesis Connected Services.


1. Selects the desired content platform on the home screen.

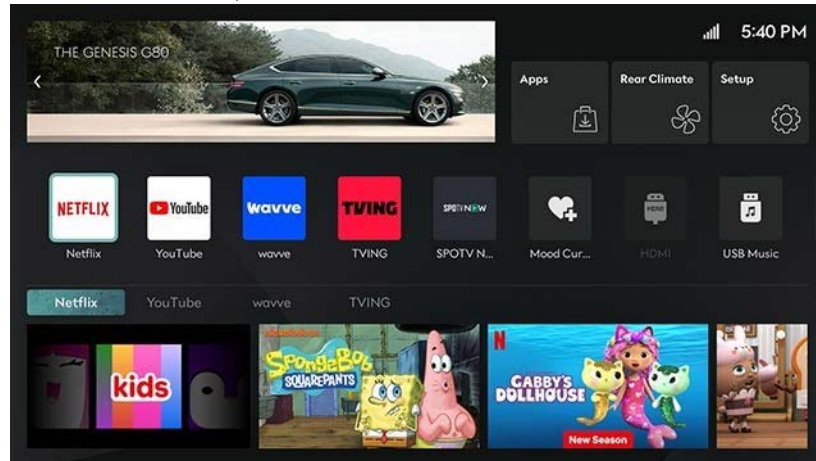


2. Select the desired contents.

 Note

- If you change the aspect ratio, some screens, including subtitles, may experience tearing.
- Depending on the model and specifications, the displayed screen can be different.
- Depending on the situation of the content platform company, the provision of services may not be smooth.
- Service may not be provided if the vehicle is not in normal operation due to modifications, detachable damage, poor maintenance, or other causes such as modification of the vehicle navigation system.
- Use may fail due to temporary communication failure.
- Access may be restricted in areas with communication failures.

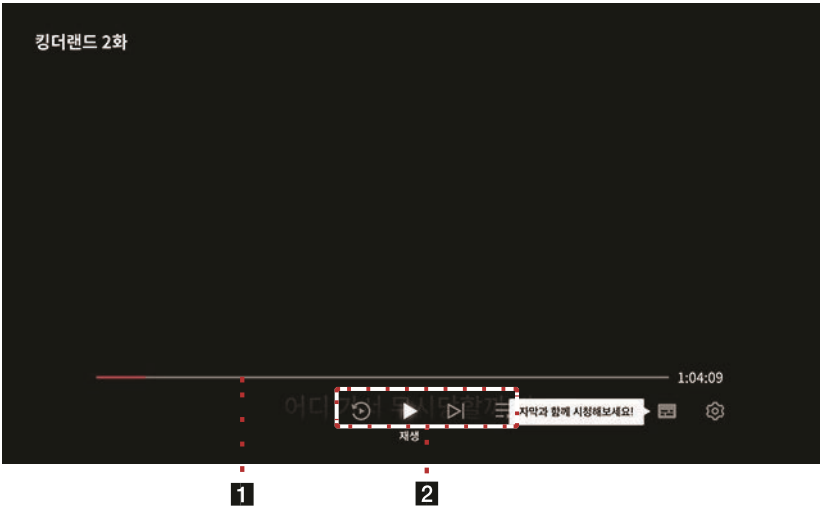

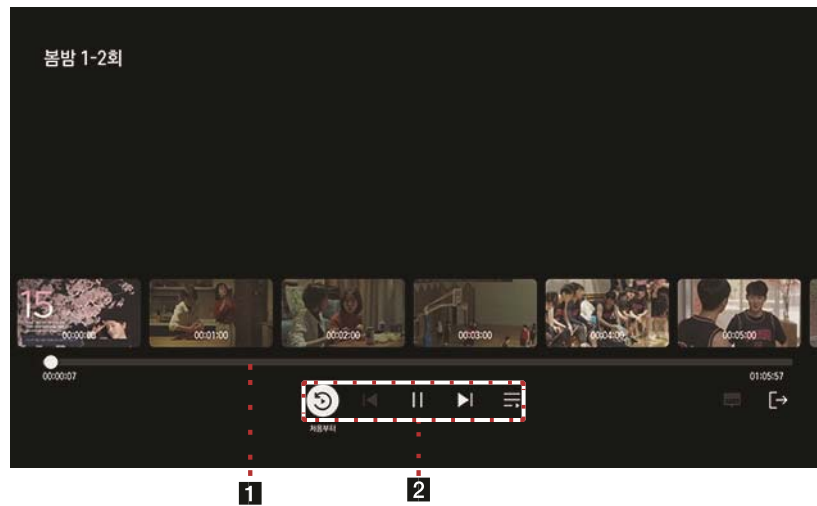

- a Play Time
Shows the play time information.
- b Control Panel
Controls play, pause , search, etc.


SyStem

data/Network SettiNgS

The images displayed on this system may differ from actual ones.

move to data/Network SettiNgS Screen


Press [Setup] > [Data/Network] on the home screen. Data/Network settings screen is displayed.

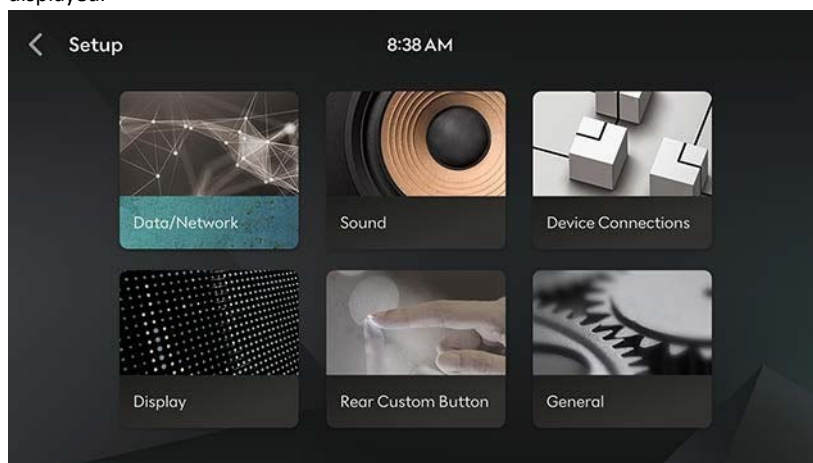

[Wi-Fi]

This menu describes Wi-Fi settings for using the connected service.

1. On the data/network settings screen, press [Wi-Fi].

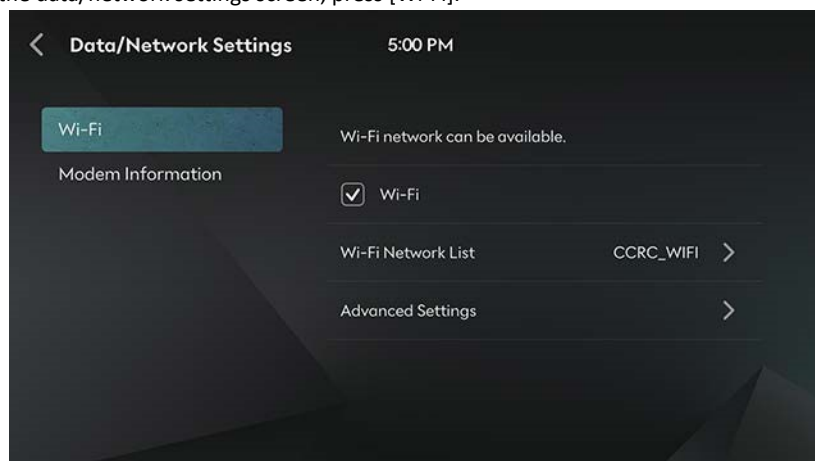


2. Press the desired item.
 - [Wi-Fi]: Turns Wi-Fi on or off.
 - [Wi-Fi Network List]: Selects the desired Wi-Fi.

- [Advanced Settings]: Sets the detailed Wi-Fi settings.

[modem iNformation]

You can check modem number/USIM/IMEI related information. On the data/network settings, press [Modem Information].

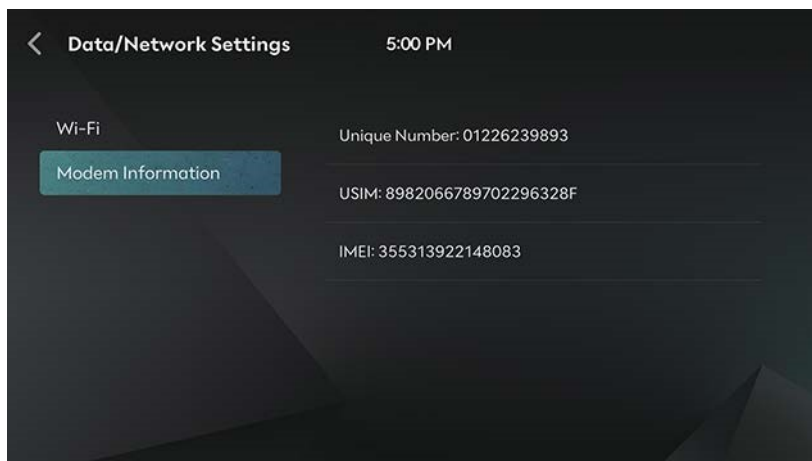

- [Unique Number]: Displays the unique number.
- [USIM]: It displays information of Serial No. of USIM card.




- [IMEI]: Displays the unique identification number of the connected terminal.

SouNd SettiNgS

The images displayed on this system may differ from actual ones.

adjuStiNg the SouNd eFFect (iF eQuipped)

Press the sound effect button on the media/broadcasting screen to adjust.

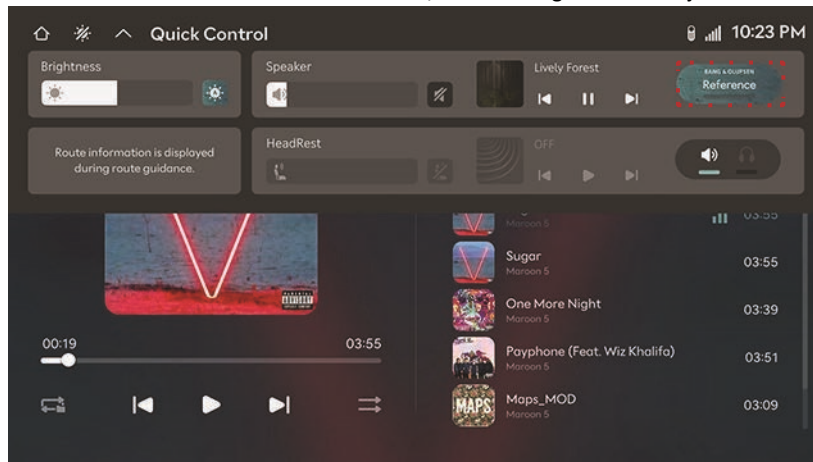

! Note

- However, this function is not provided in the sound settings.
- Sound effect can be set separately for each media/entertainments mode.

Description of sound effect modes by the specification.

Bang & Olufsen sound system (if equipped)

- [Reference]: Delivers true sound focusing on original sound source.
- [Surround]: The surround sound technology identifies and re-authors individual sound sources into a precise multi-channel soundstage providing a 10-step surround effect enabling customized surround sound with variable intensity. Bang & Olufsen premier sound system (if equipped)
- [Reference]: Delivers true sound focusing on original sound source.



- [Surround]: The surround sound technology identifies and re-authors individual sound sources into a precise multi-channel soundstage providing a 10-step surround effect enabling customized surround sound with variable intensity.
- [Bang & Olufsen Home]: An immersive in-cabin venue experience based on algorithms created by detailed and accurate measurements of where Bang & Olufsen’s new innovations are perfected within the acoustics of a home.
- [Boston Symphony Hall]: An immersive in-cabin venue experience based on algorithms created by detailed and accurate measurements of Boston Symphony Hall, one of the world’s top concert halls and the first built using acoustic principles.




Bang & Olufsen Home



Boston Symphony Hall


move to SouNd SettiNg Screen

Press [Setup] > [Sound] on the home screen. Sound settings screen is displayed.

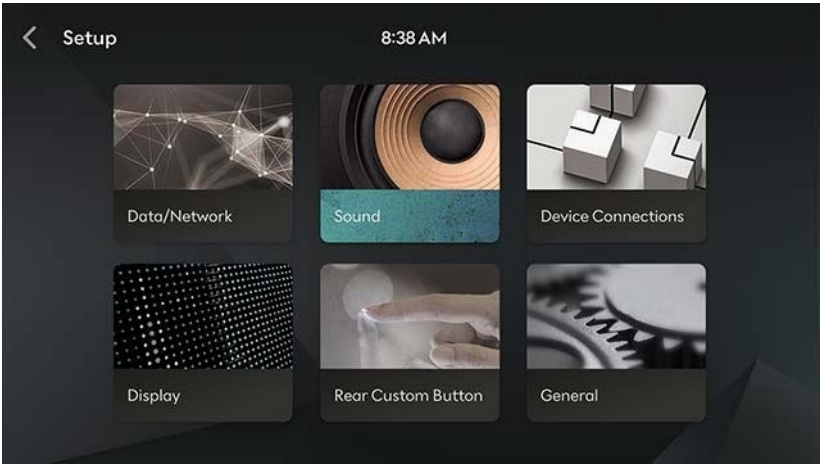

[premium SouNd] (iF eQuipped)

1. On the sound settings screen, press [Premium Sound].

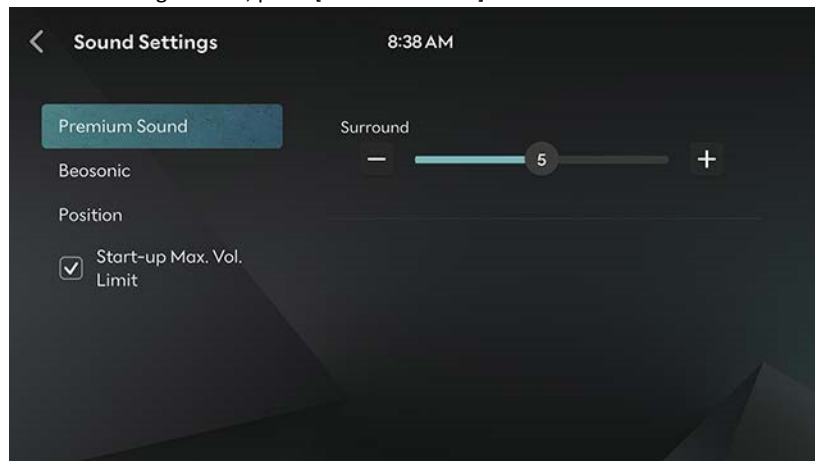


2. Adjust the desired sound quality.

- [Surround]: Provides various sound effects by classifying the location of each instrument in the recorded sound source. The surround effect can be adjusted in 10 steps.

[toNe]


1. On the sound settings screen, press [Tone].

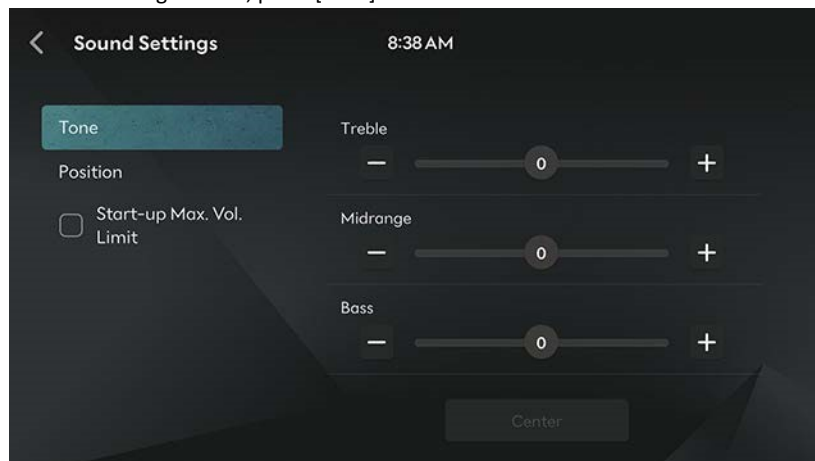

2. Adjust the desired sound quality.

[BeoSoNic] (iF eQuipped)


1. On the sound settings screen, press [Beosonic].

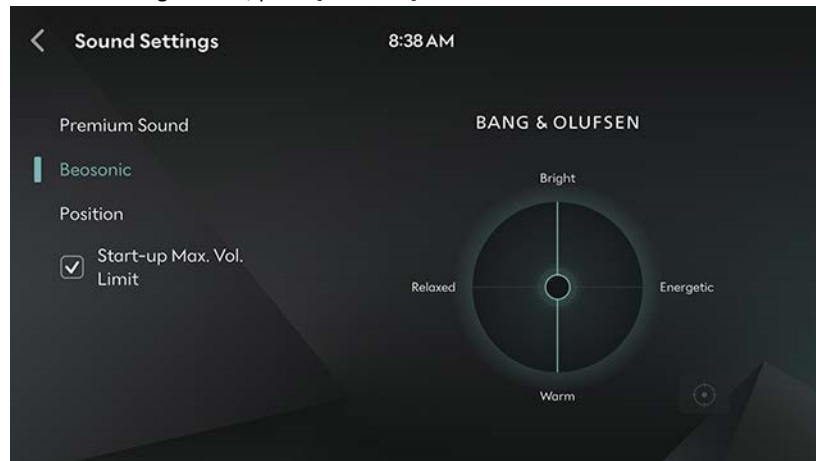

2. Adjust the desired sound quality.

[poSitionN]

1. On the sound settings screen, press [Position].

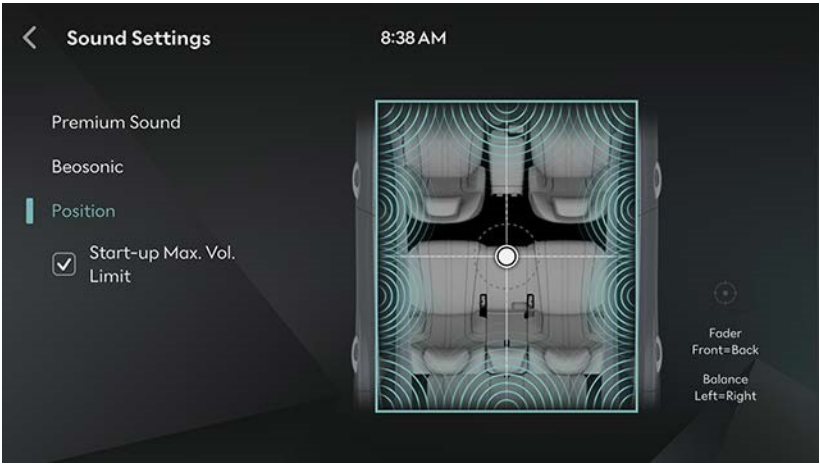

2. Adjust the sound position.

 
 Note

You can adjust sound location toward driver seat so that volume at the back seat or side seat becomes relatively smaller.

[Start-up max. vol. limit]

Lowers audio volume at vehicle start-up if higher than a set max. level.

On the sound settings screen, press [Start-up Max. Vol. Limit].

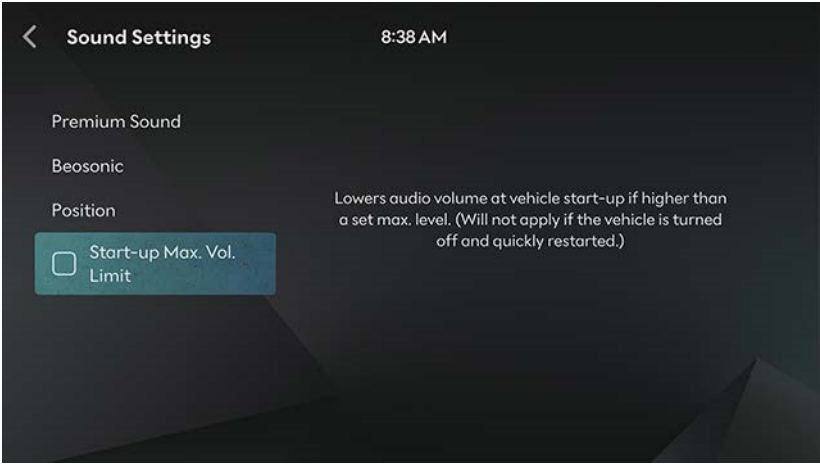


device coNNection SettiNgS

The images displayed on this system may differ from actual ones.

move to device coNNection SettiNgS Screen

Press [Setup] > [Device Connections] on the home screen. Device connection settings screen is displayed.

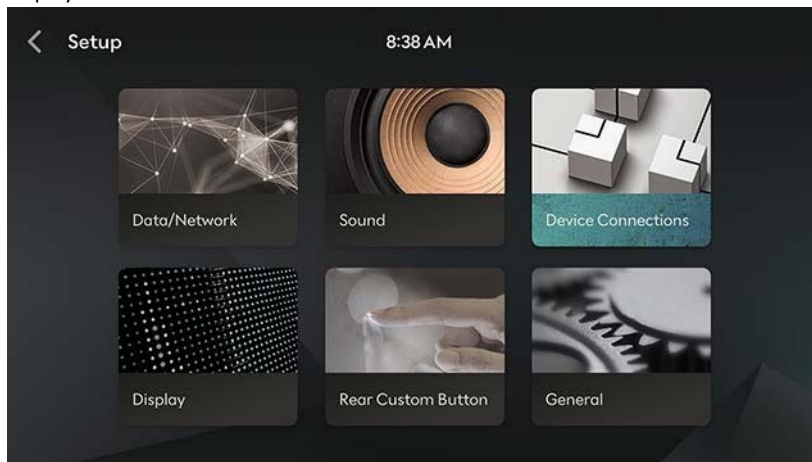


[Bluetooth headSet]


Connects the bluetooth headset.

iN caSe oF No previOuS regiStratiON (New regiStratiON)

1. On the device connection settings screen, press [Bluetooth Headset].
2. Press [Add] if you want to pair a Bluetooth headset.

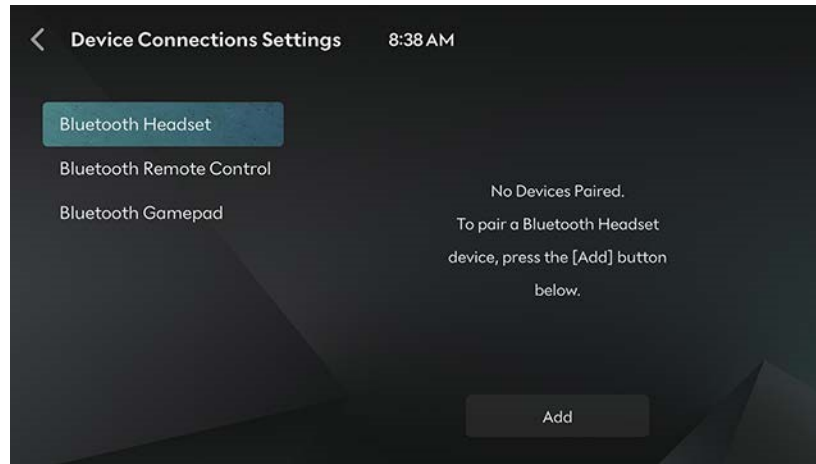


3. Press [Search] after changing the Bluetooth headset to pairing mode. (Please refer to the user manual of the headset to change the pairing mode of the Bluetooth headset.)

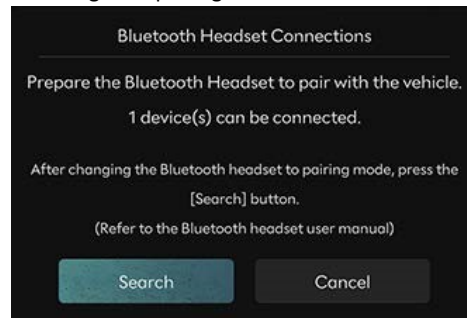

4. Press the name of searched Bluetooth headset on the Bluetooth headset connection screen.



5. When completion of registration and connection, the registered device is displayed as shown below.

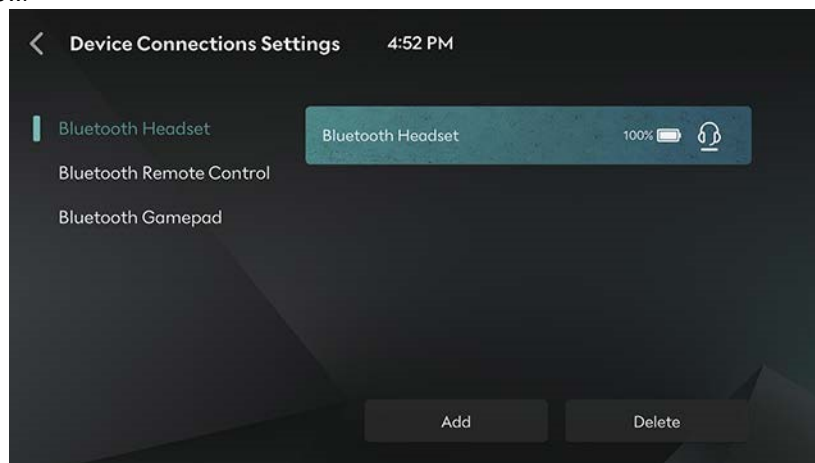


 Note

Up to 5 Bluetooth headsets can be registered.

if a device is registered

 1. On the device connection settings screen, press [Bluetooth Headset].
2. Press the name of Bluetooth headset to connect. If the Bluetooth headset to connect is not found, register the Bluetooth headset by selecting [Add].
3. When completion of registration and connection, the registered device is displayed as shown below.

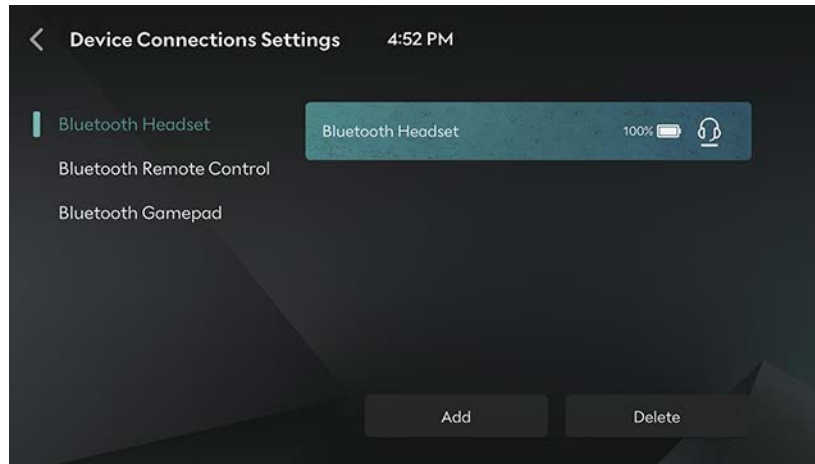

Note

Up to 5 Bluetooth headsets can be registered.


[Bluetooth remote coNtrol]

Connects the bluetooth remote control.

iN caSe oF No previouS regiStratioN (New regiStratioN)

1. On the device connection settings screen, press [Bluetooth Remote Control].
2. Press [Add] if you want to pair a Bluetooth remote control.


3. Press

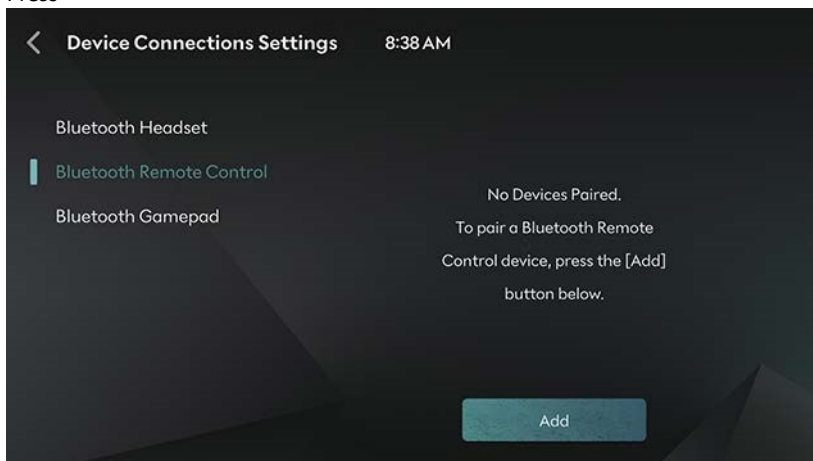


<] and [⏮] on the Bluetooth remote control at the same time for more than 3 [seconds. When the LED is on, press [Search].



4. Press the name of searched Bluetooth remote control on the Bluetooth remote control connection screen.

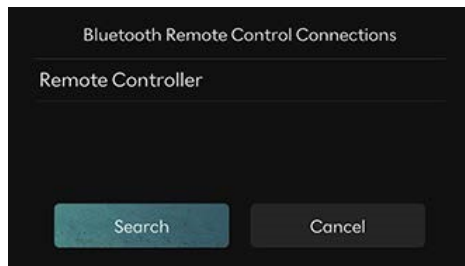

5. When completion of registration and connection, the registered device is displayed as shown below.

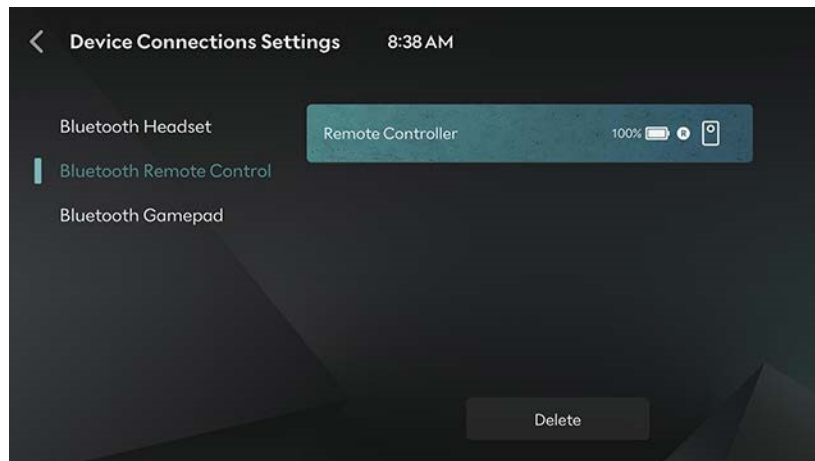


 Note

Up to one Bluetooth remote control can be registered with both the left/right rear seat screens.

if a device is registered

 1. On the device connection settings screen, press [Bluetooth Remote Control].
2. Press the name of Bluetooth remote control to connect. If the Bluetooth remote control to connect is not found, register the Bluetooth remote control by selecting [Add].
3. When completion of registration and connection, the registered device is displayed as shown below.

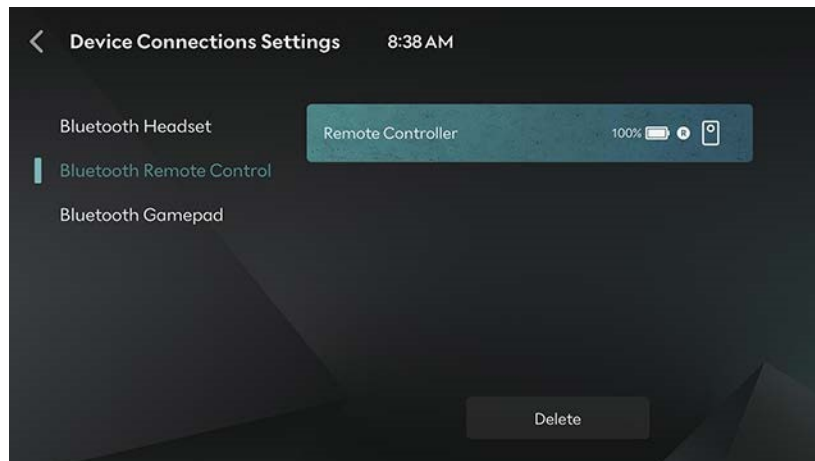

 Note


- Up to one Bluetooth remote control can be registered with both the left/right rear seat screens.
- By selecting [L/R] on the Bluetooth remote control, you can set which screen to operate between the left/right rear seat screens.

[Bluetooth gamepad]


Connects the bluetooth gamepad.

iN caSe oF No previOuS regiStratiON (New regiStratiON)


1. On the device connection settings screen, press [Bluetooth Gamepad].
2. Press [Add] if you want to pair a Bluetooth gamepad.

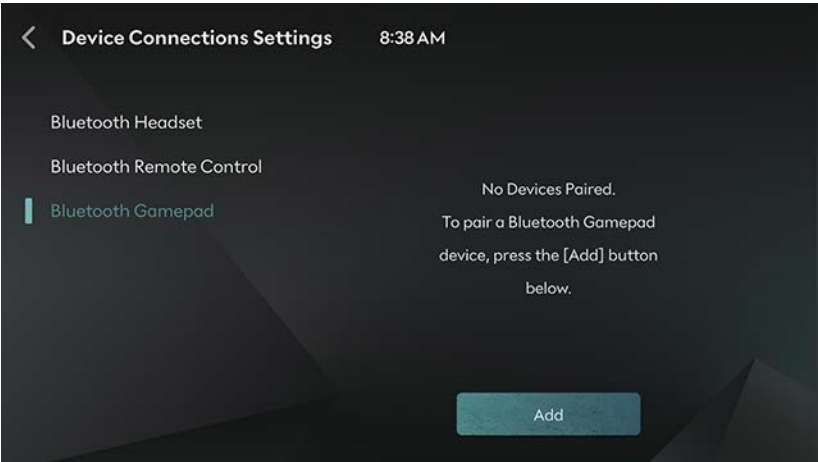


3. Press [Search] after changing the Bluetooth gamepad to pairing mode. (Please refer to the user manual of the gamepad to change the pairing mode of the Bluetooth gamepad.)

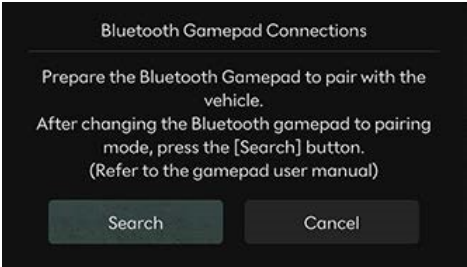

4. Press the name of searched Bluetooth gamepad on the Bluetooth gamepad connection screen.

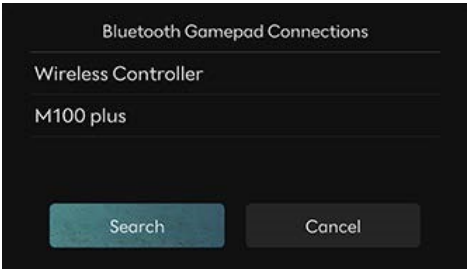


5. When completion of registration and connection, the registered device is displayed as shown below.

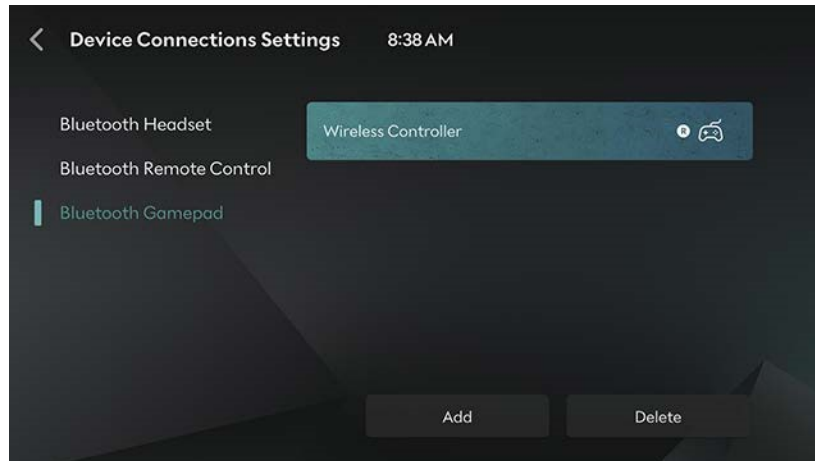

 Note

Up to 5 Bluetooth gamepads can be registered with both the left/right rear seat screens.
[if a device is registered](#)

1. On the device connection settings screen, press [Bluetooth Gamepad].
2. Press the name of Bluetooth gamepad to connect. If the Bluetooth gamepad to connect is not found, register the Bluetooth gamepad by selecting [Add].
3. When completion of registration and connection, the registered device is displayed as shown below.

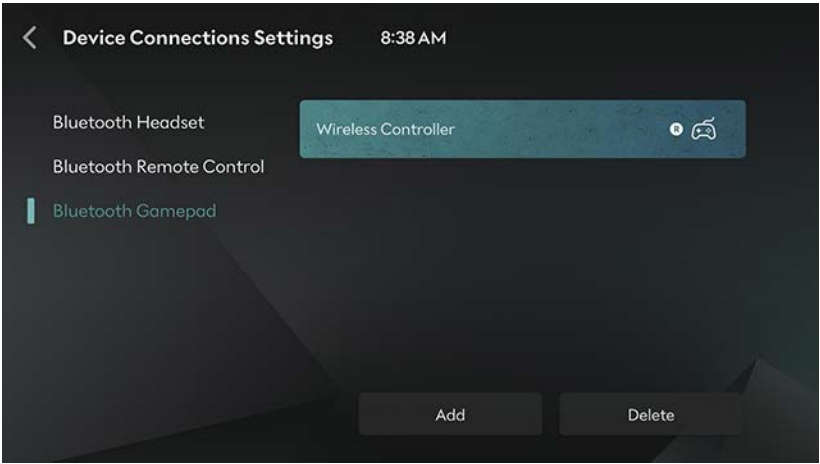

 Note


Up to 5 Bluetooth gamepads can be registered with both the left/right rear seat screens.

diSplay SettiNgS

The images displayed on this system may differ from actual ones. [move to](#)

diSplay SettiNgS Screen


Press [Setup] > [Display] on the home screen. Display settings screen is displayed.

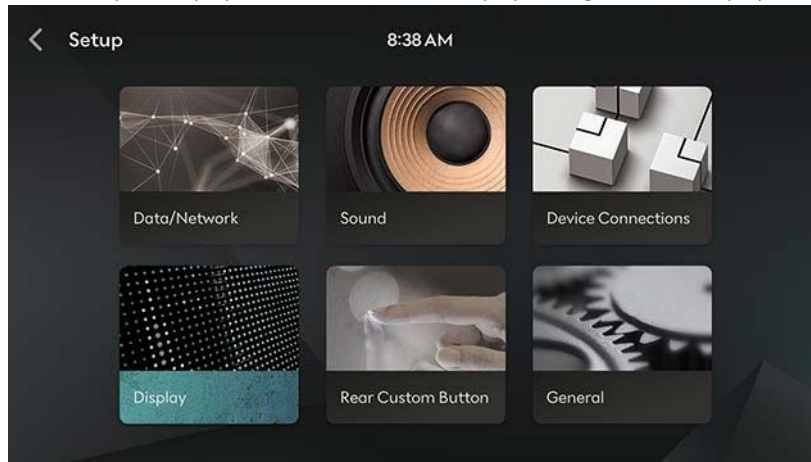

[illumiNation (rear Seat)]

It sets screen's brightness.

1. On the display settings screen, press [Illumination (Rear Seat)].

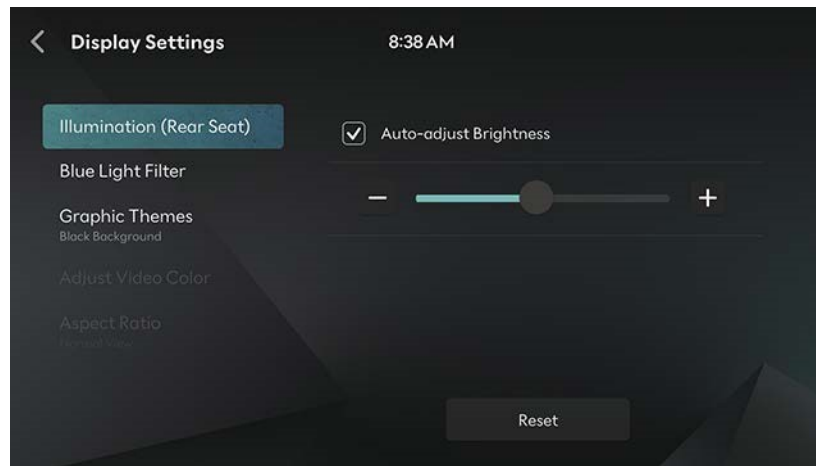

2. Adjust LCD brightness.

- [Auto-adjust Brightness]: When selected, the display brightness automatically changes according to the ambient light level.
- You can manually set the screen brightness by disabling the [Auto-adjust Brightness] function.


Note

Visibility may decrease if you adjust the brightness to dark in a bright environment.

[Blue light Filter]

Reduces eye strain by limiting the amount of blue light emitted when outside brightness is low.

1. On the display settings screen, press [Blue Light Filter].

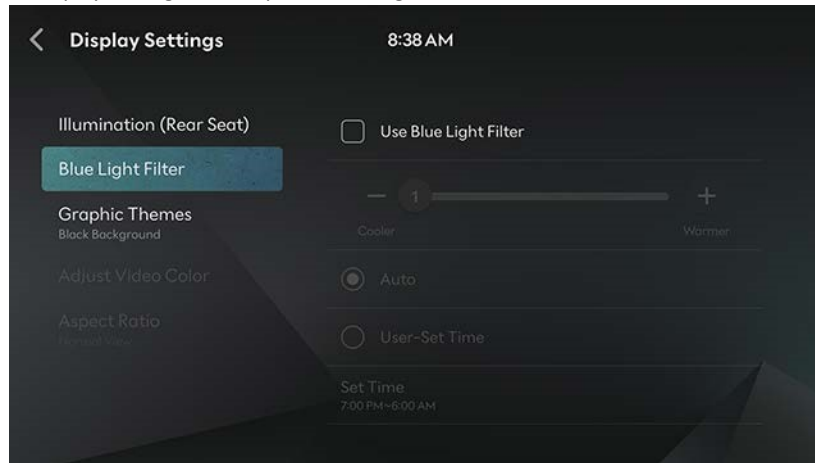


2. Press the desired item.
 - [Use Blue Light Filter]: Activates the blue light filter.
 - [Auto]: Activates the blue light filter according to surrounding brightness.
 - [User-Set Time]: Activates the blue light filter according to the time set by the user.
 - [Set Time]: Sets the blue light filter time.

[graphic themes]

You can set a graphic theme.

1. On the display settings screen, press [Graphic Themes].

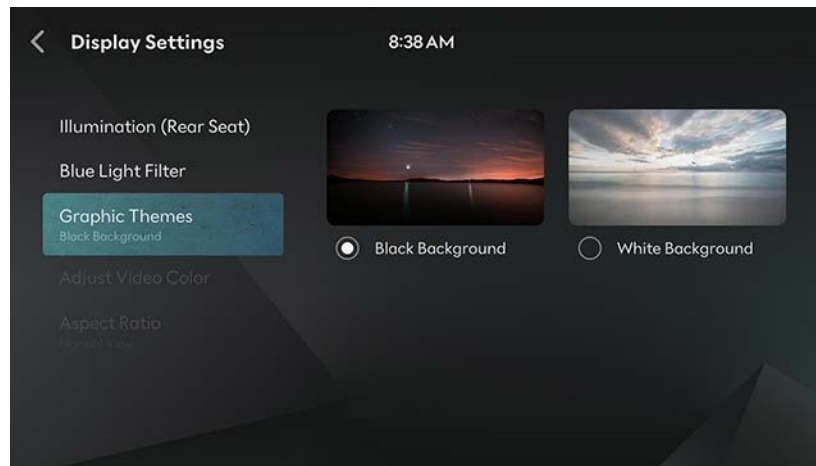


2. Press the desired item.

[adjust video color]

During video playing, you can set brightness/contrast/saturation.

1. During video playing, press [⋮] > [Display Settings] > [Adjust Video Color].

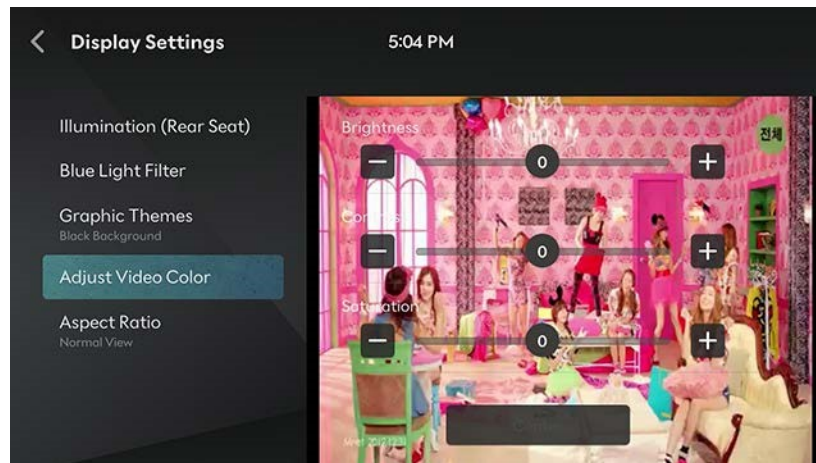

2. Adjust the desired items.




Note

You can set display settings menu only when you moved through video [⋮] > [Display Settings].

[aspect ratio]

You can select the desired size video screen to enjoy video with sense of realism.

1. During video playing, press  > [Display Settings] > [Aspect Ratio].

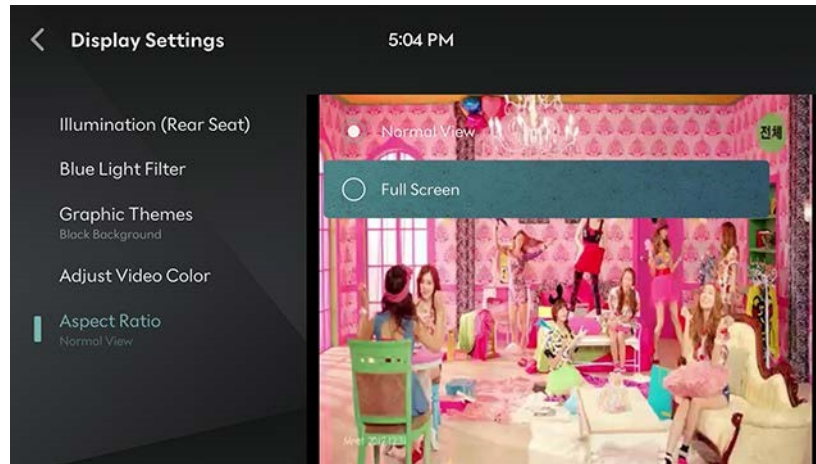

2. Press desired mode.
 - [Normal View]: Black strip appears at the top/bottom of the screen, and it is set to 4:3 ratio.
 - [Full Screen]: It sets video to entire screen.


Button Settings

The images displayed on this system may differ from actual ones.

move to rear custom Button Settings Screen

You can set rear custom button Settings Items.

Press [Setup] > [Rear Custom Button] on the home screen. Rear Custom Button settings screen is displayed.

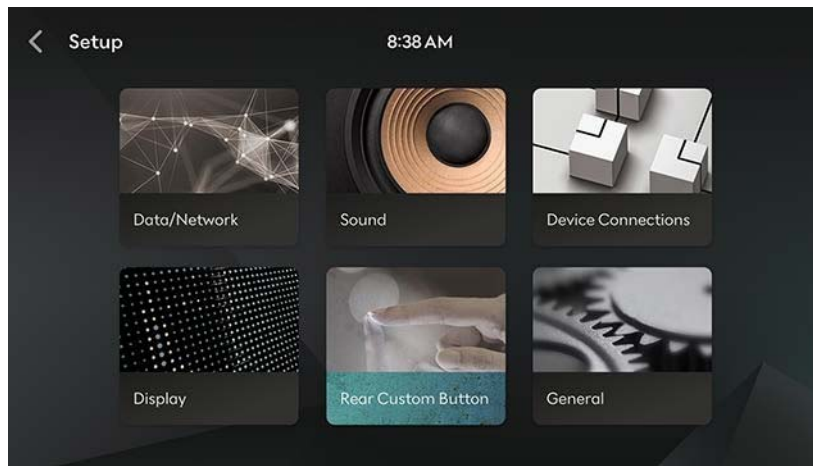


Button settings

[rear cuStom ButtoN ☆]

You can set the function you want to execute with the user button.

1. On the rear custom button settings screen, press [Rear Custom Button ☆].

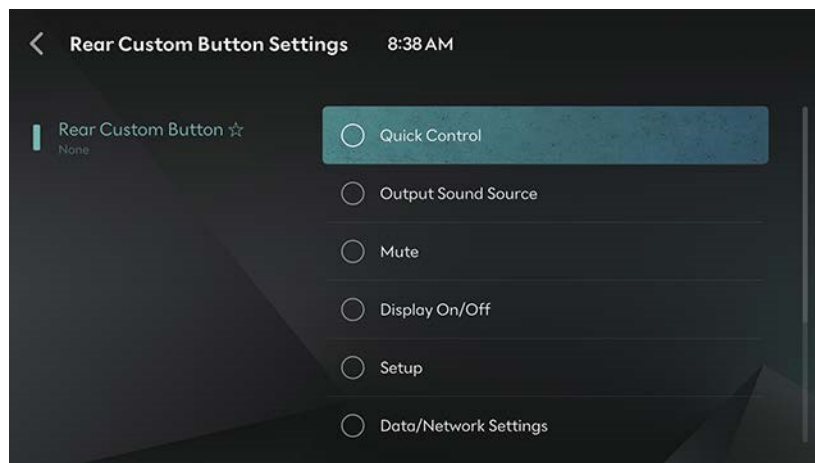


2. Press the desired item.

geNeral SettiNgS

The images displayed on this system may differ from actual ones. [move to](#)

geNeral SettiNg Screen

Press [Setup] > [General] on the home screen. General settings screen is displayed.

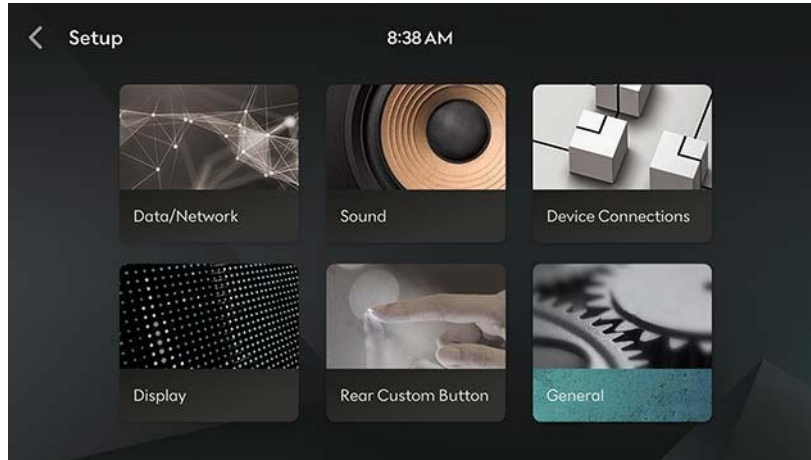

[Sw iNfo/update]

You can see S/W version, Firmware version information, etc. On the general settings screen, press [SW Info/Update].




Note

Software information is applied differently according to the system update time point.

[SyStem iNfo]

1. On the general settings screen, press [System Info].

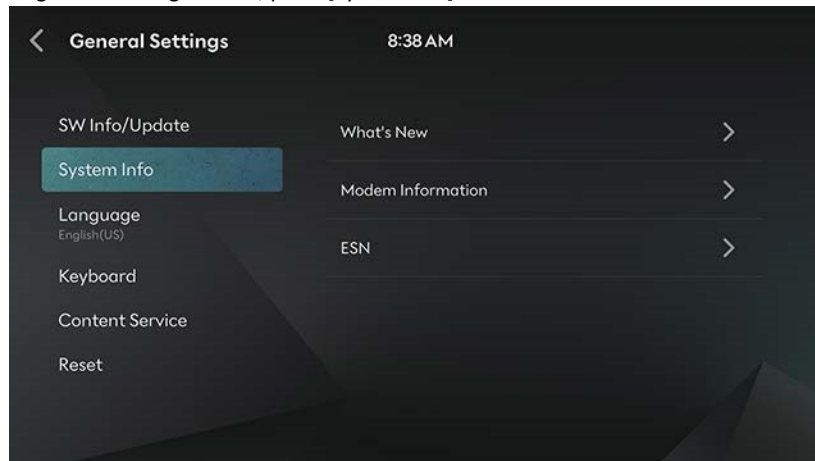

2. Press the desired item.

- [What's New]: You can check updates history when updating with the latest version of navigation and software.
- [Modem Information]: Shows the unique number/USIM/IMEI.
- [ESN]: You can check ESN information.




Note

Wireless updates to the latest version of software is available via Genesis Connected Services.

[laNguage]

You can set the system's display language to Korean or English.

1. On the general settings screen, press [Language].

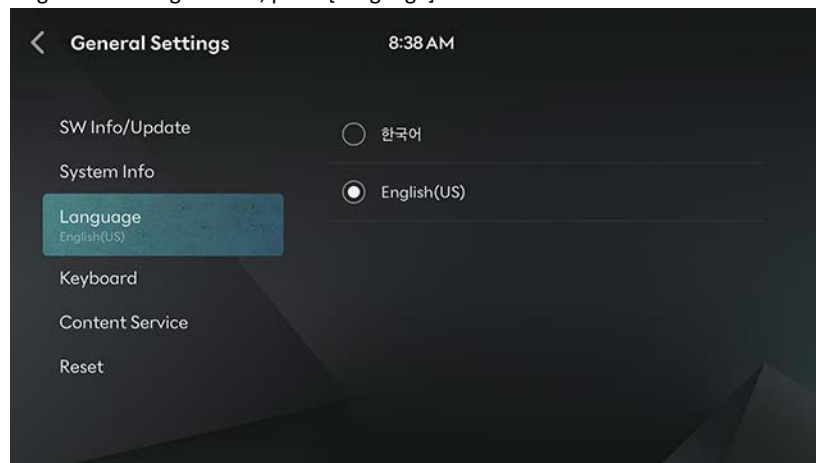


2. Press the desired language.

[keyBoard]

You can set type of keyboard used in the system.


1. On the general settings screen, press [Keyboard].

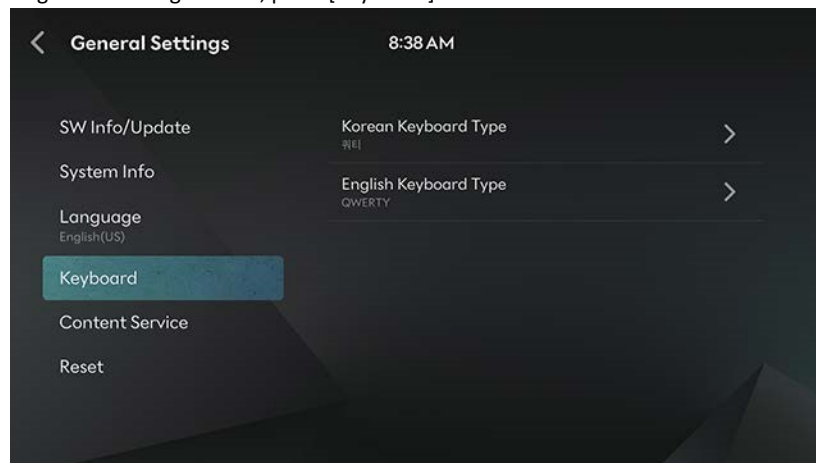

2. Press the desired keyboard type.

[coNteNt Service]

1. On the general settings screen, press [Content Service].

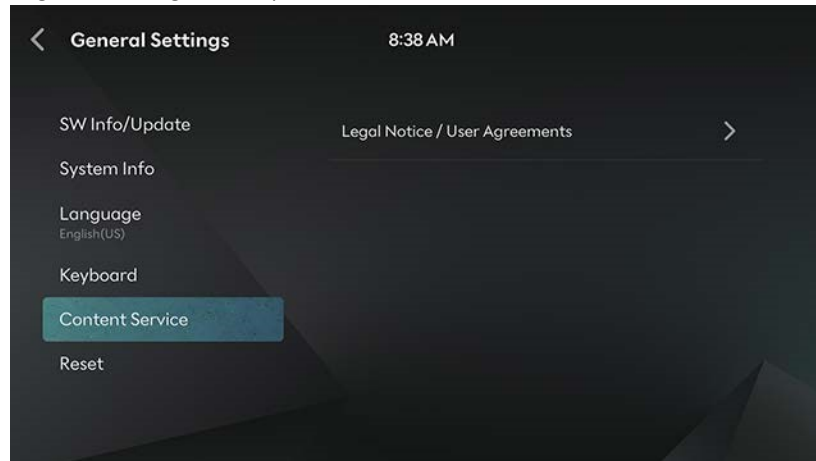


2. Press the desired item.

- [Legal Notice / User Agreements]: Agree or withdraw consent to the content services terms of use.

[reSet]

You can reset user designated settings.

1. On the general settings screen, press [Reset].

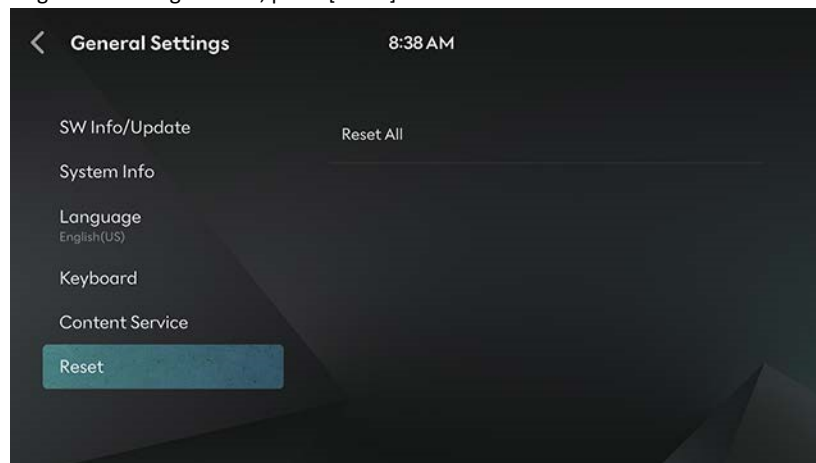

2. Press [Yes] if you want to reset the system.

update

wireleSS update


Downloads and installs the latest software automatically through wireless update.

After update, you can check the result by scanning QR code.


The images displayed on the screen can be differ from the actual one.

If you have signed up for Genesis Connected Services, the system is updated automatically when turning on the vehicle whenever there is a latest version.

1. When turning on the vehicle, the update file is downloaded and the download icon is displayed in top right of the screen.

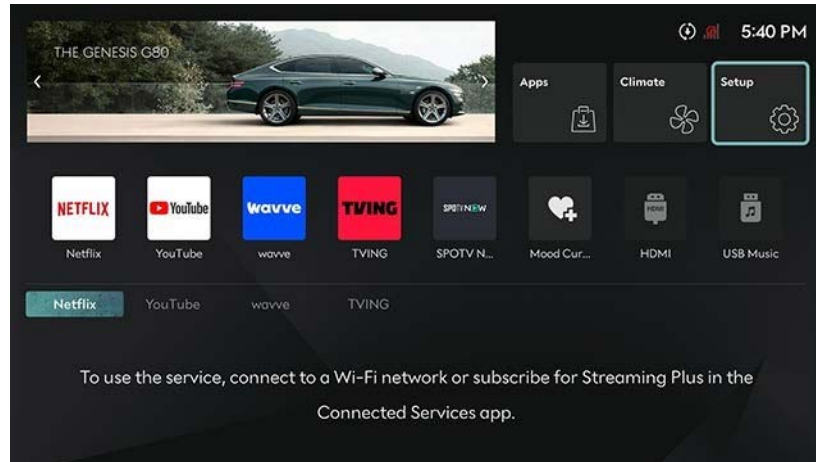


2. After finishing download, software is updated and the update icon is displayed in top right of the screen.

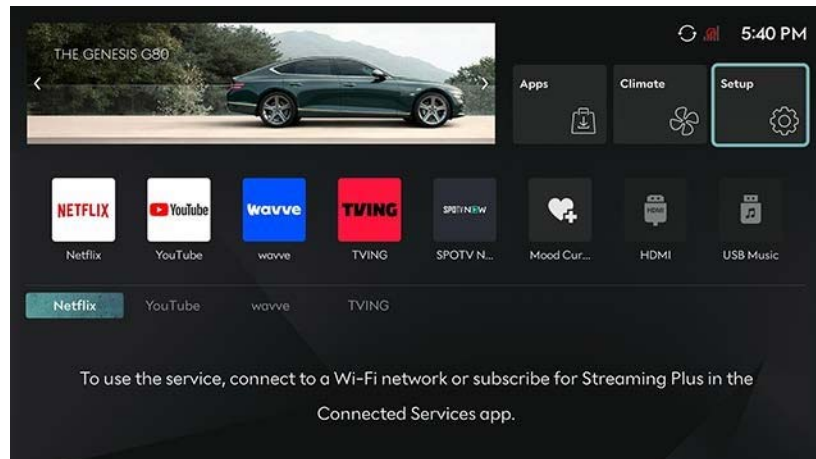

Wireless Update

3. The infotainment system will restart and during the installation of the latest software of it, all functions including the sound are restricted.

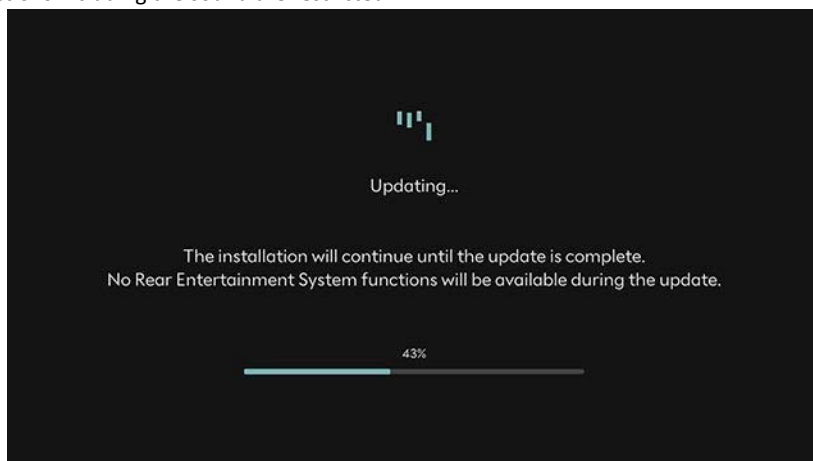

4. After update, you can find update record [System Info] > [What's New] on the general settings screen.



 Note

- This function is offered during the subscription on Genesis Connected Services.
- Even if the vehicle is turned off and on again during the update, update is resumed.
- What's New is not displayed right after purchasing the vehicle or in case that update has never been performed.
- If the system failed update, the wireless update is performed automatically when next latest version is distributed.

otherS

[Climate]


[climate]

The image of this product may be different from the actual product. **operatiNg rear**

climate

Controls the climate of the rear seat.

Press [Rear Climate] on the home screen.

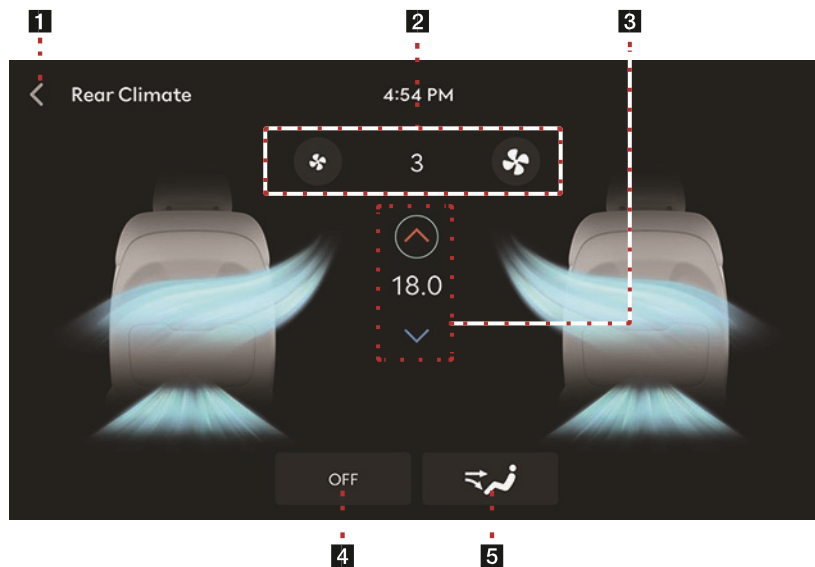

a <

It moves to the home screen or a previous screen.

b Blower Level
Sets the blower level.

c Rear Seat Set Temperature
You can set the temperature of the rear seat.

d [OFF]

Turns off the climate function.

e Blower Position


Changes the seat blower position.

[maNual]

[oNliNe maNual]

You can see web manual through QR code.

1. Press [Manual] > [Online Manual] on the home screen.

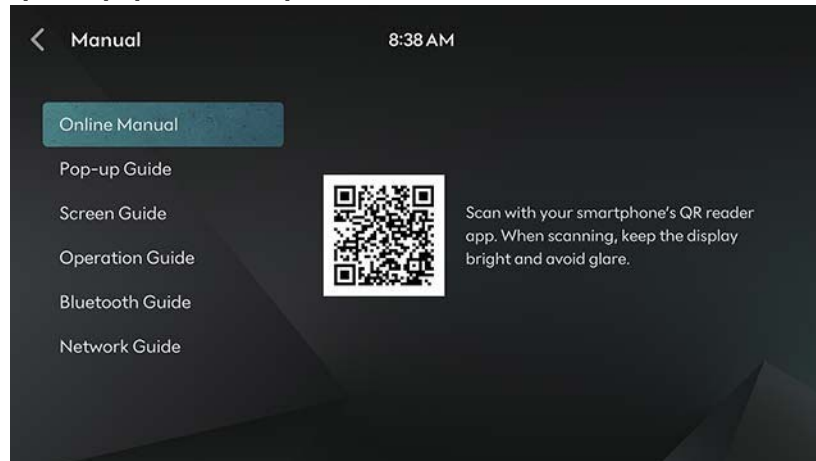


2. Scan QR code with mobile device. For precise scan, avoid reflecting light, and maintain bright screen.




[pop-up guide]

Provides swipe operation pop-up guide and quick control pop-up guide. Press [Manual] > [Pop-up Guide] on the home screen.

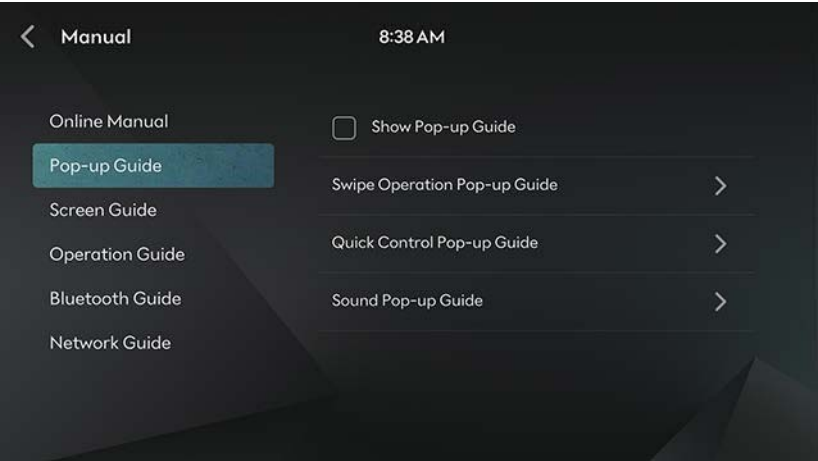


[ScreenN guide]

Provides home screen guide and quick control screen guide. Press [Manual] > [Screen Guide] on the home screen.

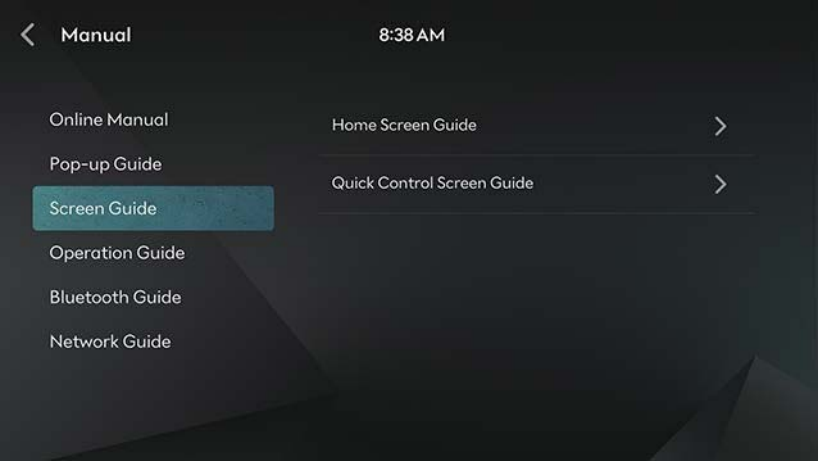

[operationN guide]


Provides swipe operation guide and remote control operation guide. Press [Manual] > [Operation Guide] on the home screen.

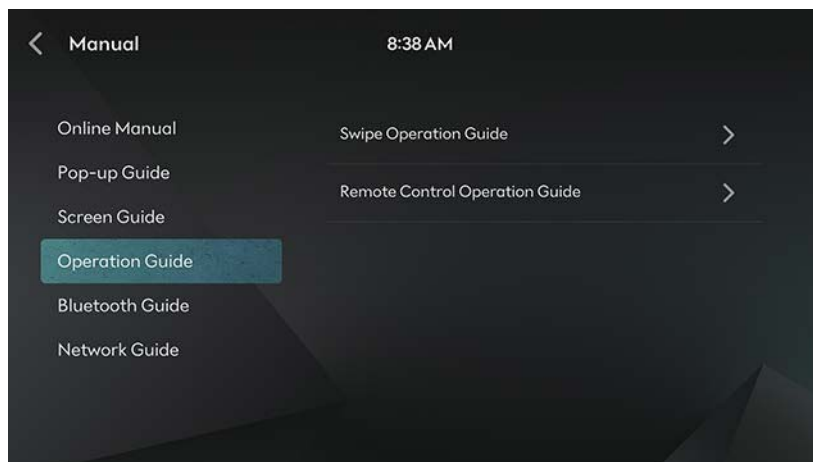

[Bluetooth guide]

Provides headset connection guide, remote control connection guide and gamepad connection guide.


Press [Manual] > [Bluetooth Guide] on the home screen.

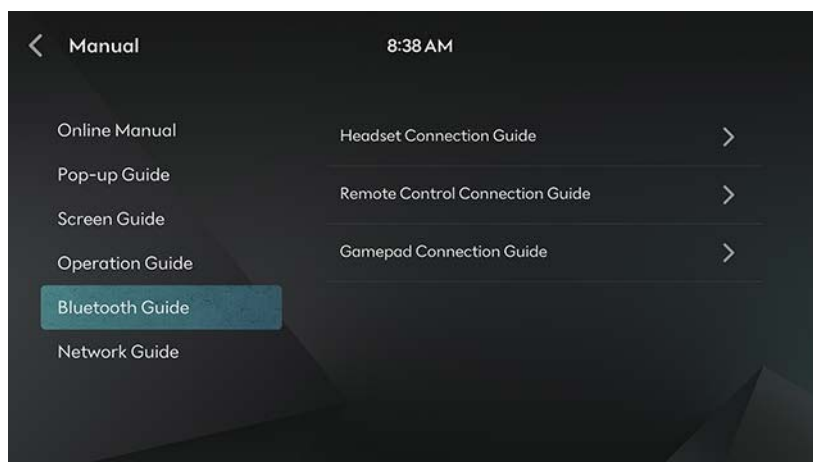

[Network guide]

Provides Wi-Fi guide.

Press [Manual] > [Network Guide] on the home screen.

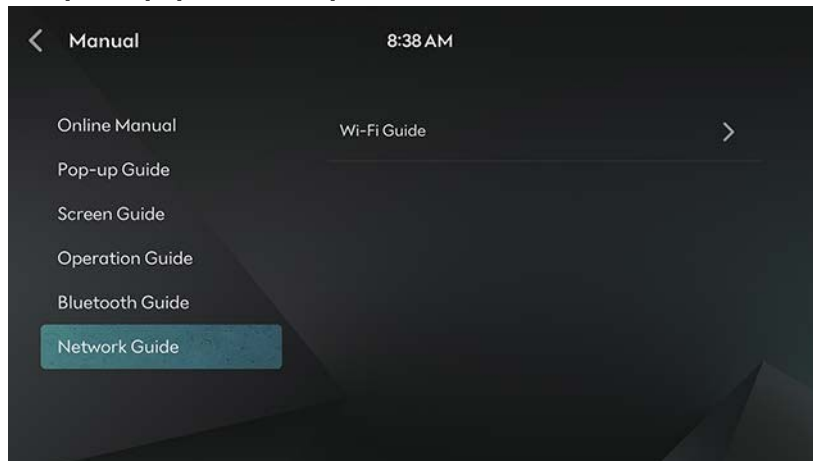


[mood curator]

The image of this product may be different from the actual product.

The combination of systems provides 4 moods that stimulate the senses and help improve emotions.

operatiNg mood curator

Press [Mood Curator] on the home screen.

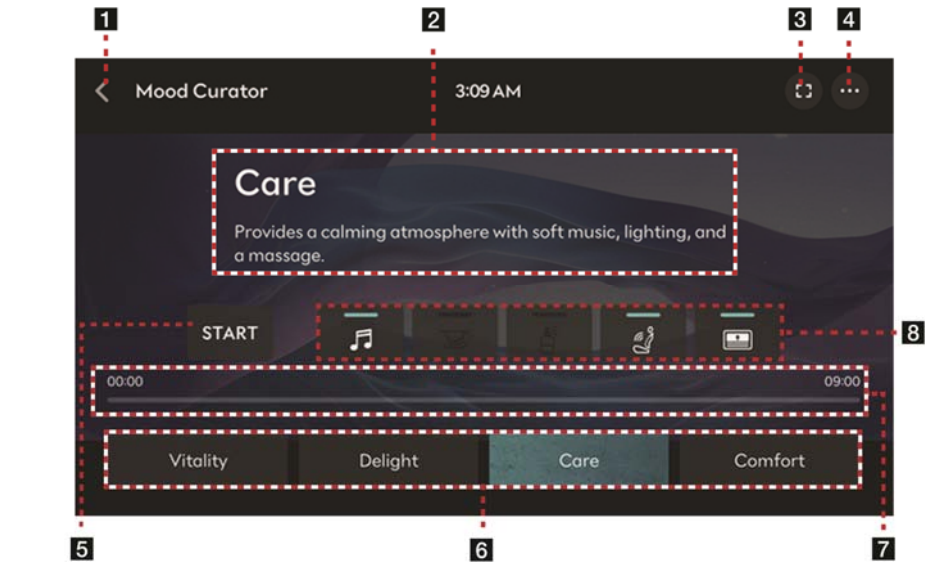

1 <

Moves to the home screen or the previous screen.

b Mode Information

Displays current mode information.

c 

Displays background image only.



It displays mood curator menu.

Mood Curator]

e [Start]/[Stop]

Press to start or stop the mood curator.

f Mode List

You can select a desired mode and displays currently playing mode. g Play

Time

Shows the play time information.



Select whether to play music in the current mode.



Select whether to play interior mood light in the current mode.



Set whether to play scent diffusion in the current mode.



(If equipped)

Set whether to play massage in the current mode.



(If equipped)

Set whether to close curtains in the current mode.

All Menus]


[all meNuS]

Check out all apps.

Short press the app to enter the app, and long press the app to delete the app. operatiNg

all meNuS


1. Press [All Menus] on the home screen.
2. Short press the app to enter the app, and long press the app to delete the app.

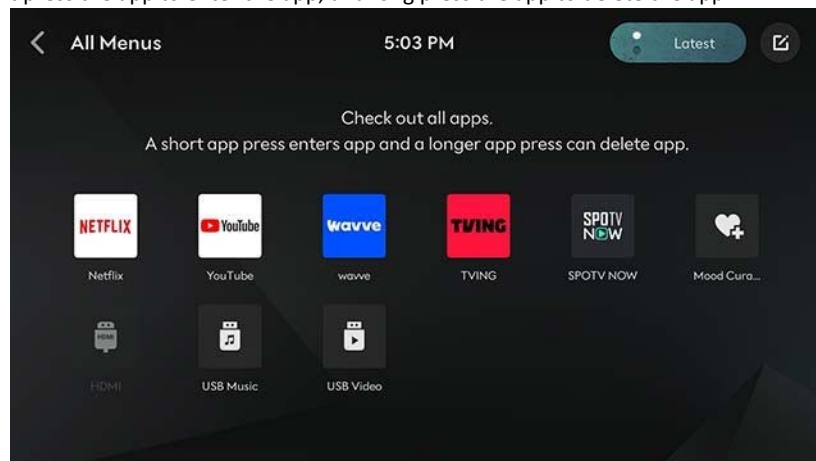

All Menus]

editiNg all meNuS

1. Press [All Menus] on the home screen.

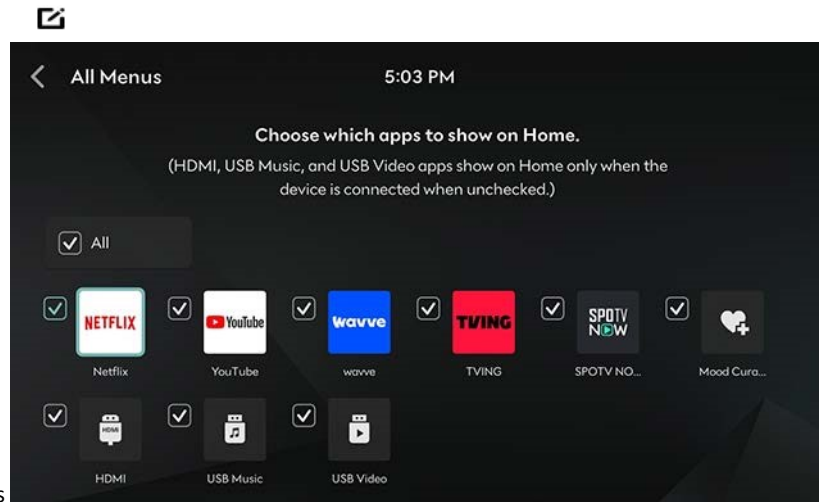


2. Press  on the all menus screen.
3. Select which apps to show on the home screen. (HDMI, USB Music and USB Video apps show on the home screen only when the device is connected when unchecked.)

[Apps]

[appS]

You can download and update the entertainment you want. **operatiNg appS**

1. Press [Apps] on the home screen.

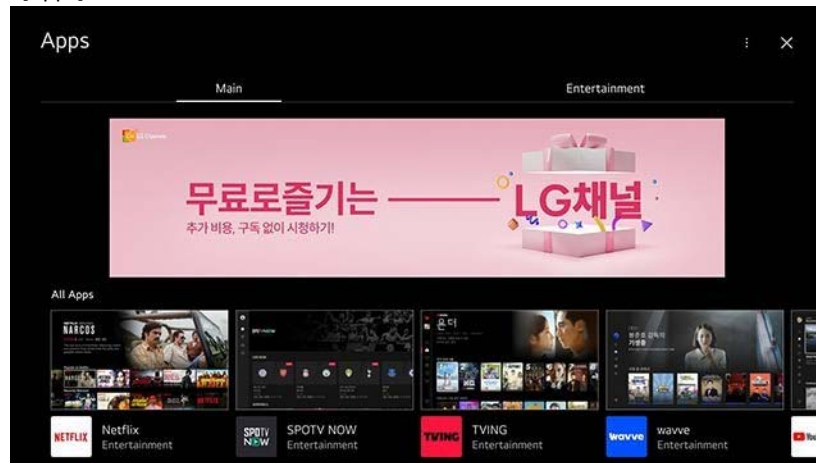


2. Press the desired app. Moves to the app's detail page when you select an item.

[Apps]


updatiNg app

1. Press [Apps] on the home screen. 2. Press
⋮] > [App Update] on the apps screen.

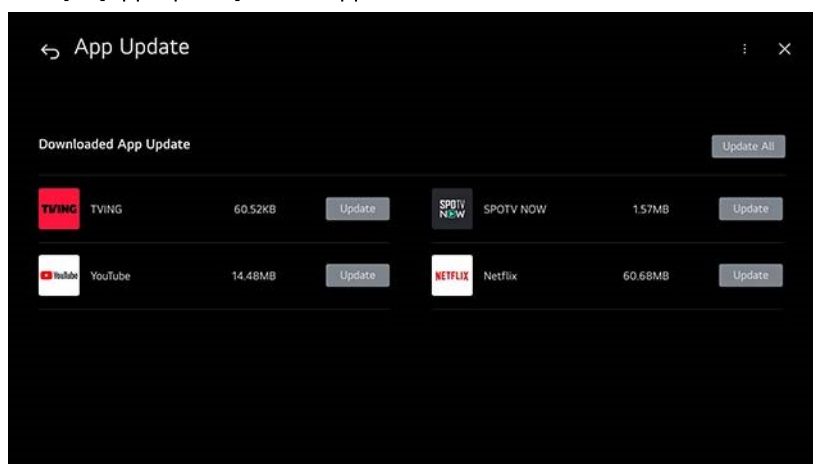

3. Update the desired apps. [maNagiNg app](#)

1. Press [Apps] on the home screen. 2. Press
⋮] > [Manage App] on the apps screen.

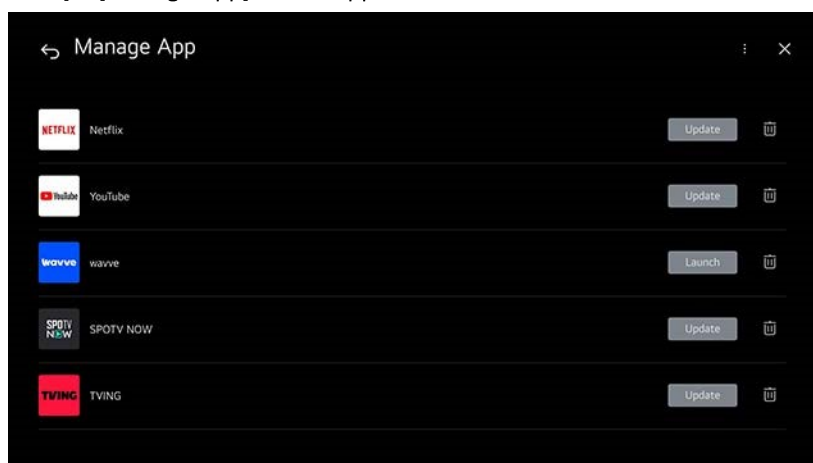


3. Update or delete the apps you want.
[HDMI]

[hdmi]


You can operate on the rear seat screen when you connect HDMI-capable device (mobile phone, laptop, etc.).

operatiNg hdmi

1. When connecting an HDMI device, a pop-up is displayed. Press [Yes] if you want to connect HDMI.

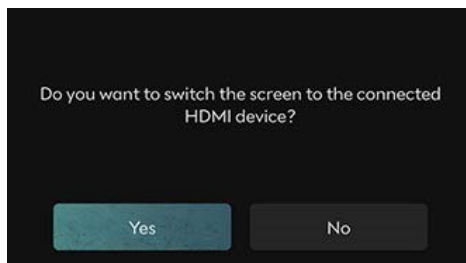

2. When connected, [HDMI] button on the home screen is activated.

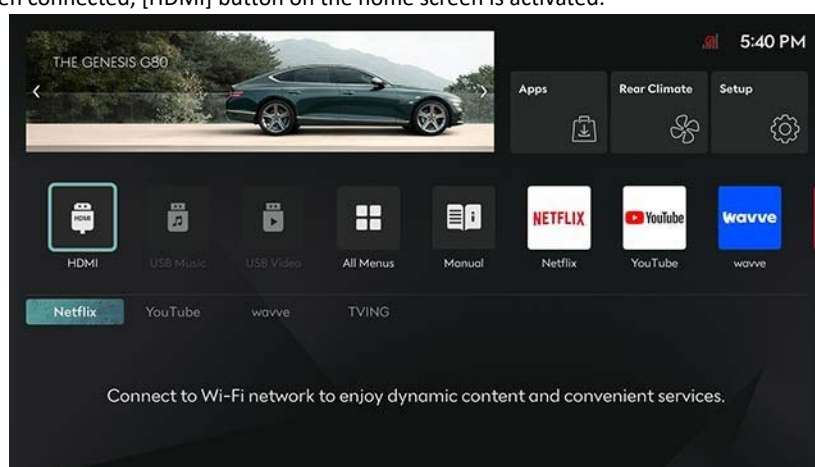

[HDMI]

3. Press [HDMI] on the home screen. Switches to HDMI screen. (ex. OTT services screen)



Note

Moves to the home screen when disconnecting HDMI.

reFereNce

the iNformation aBout a owNer'S maNual

aBout thiS owNer'S maNual

Before use, please be sure to read precautions for safety and use it properly.

This owner's manual presents warning, caution and reference about the case that a driver or other person can be injured and its response to the case.

Be sure to read and observe this content since it is a very important point related to safety. Please note that the vehicle model shown in the video manual may differ from your vehicle. Please note that the vehicle model and option may differ from your vehicle.

the SymBol uSed iN thiS owNer'S maNual



warning

A symbol about issues that may lead to serious injury and accident related to life if the warnings described in this owner's manual are not observed.

Caution

A symbol about issues that may lead to an accident and bring injury or cause damage or failure of a car if the cautions described in this owner's manual are not observed.



Note

- Explanation about detailed information to understand the right use of product and its function.
- Explanation about related terms in case of explaining its function.

Precautions for safety

precautionS For SaFety

Please keep the precautions for safety since they are to prevent an unexpected accident or danger by using a product safely and properly.

The precautions are divided into 'warning' and 'caution' and the meaning of 'warning' and 'caution' is as follows. **! warning**

The violation of instructions can cause serious injury and death.

	Do not change head unit use environment through voluntary modification of a vehicle and improper operation. It causes traffic accidents. Please dispose of packaging materials (vinyl) out of reach of children. prevent suffocation accidents caused by the packaging.
	Please use it by adjusting the volume at an appropriate sound level. Do not receive audio guidance at a very loud volume. It causes traffic accidents.

Precautions for safety

The company does not take responsibility for any type of accident caused by not following traffic regulations and actual situations

, Caution

The violation of instructions can cause light injury or damage of a product.

	Do not use the system for long hours while the vehicle is not started. Do not use the system for long hours while the vehicle is not started. It can cause a battery discharge. (Even if you turn off the system power with the ACC on, the battery discharge will continue.)
	Do not drop an object on this product or handle it roughly. It causes the failure.
	Do not disassemble or repair or modify it. It causes a fire hazard due to abnormal operation.
	When cleaning the screen, wipe it with a dry, soft cloth after turning off the power. Do not use a hard cloth, chemical rag or organic solvent (alcohol, benzene, thinner) since they may scratch or deteriorate the surface of a head unit.
	Please be careful that water or foreign substances can flow into the device. It generates smoke and causes an ignition and failure.

geNeral iNFormation

cautioNS For the uSe oF uSB

Please use it by installing a USB device after starting an engine. If the vehicle is started with a USB device installed, a USB device can be damaged. If it is not a standard format file, it is not played.

- MP3/WMA file only supports a music file with a compression level of 8 Kbps to 320 Kbps. • Be careful of static electricity when connecting and disconnecting a USB external device.
- If encrypted MP3 player is connected to an external USB device, it is not recognized.
- When connecting a USB external device, it may not be recognized depending on the condition of a USB external device.
- It supports FAT16, FAT32, exFAT and NTFS.
- Some USB devices may not be supported due to compatibility issue.
- Please do not allow human body or object to touch the USB connection.
- Connecting and disconnecting a USB device for a short time repeatedly can cause its failure.
- Please connect and disconnect a USB external device only with the audio power turned off.
- The recognition time can vary depending on the type, capacity and format of a stored file but it is not a product failure.
- When using separate devices like USB HUB and extension cables, the USB may not be recognized. So, please use it by directly connecting to an infotainment system port of a car.
- When uploading an application program in a specific USB, the file may not be played
- When the USB device, that is not recognized as removable discs like MP3 Player, mobile phone and digital camera, was connected, it may not be operated properly.
- The charge through USB may not be supported in case of some mobile devices.
- No operation may be guaranteed except standard product (Metal Cover Type) USB memory.
- The operation of HDD Type, CF and SD memory is not guaranteed.
- The file that applied DRM (Digital Rights Management) is not played.
- The USB memory stick (SD Type or CF Type) used by being inserted into an adapter may not be recognized.

playaBle File StaNdard

playaBle audio File StaNdard (uSB)

- Playable file format: “.mp3”, “.wma”, “.mka”, “.wav”, “.flac”, “.ogg”, “.ac3”, “.dts”, “.m4a”
- Playable Codec format: “MPEG-1 layer I, II, III”, “AC-3”, “AAC”, “WMA”, “PCM (WAV only)”, “ADPCM (WAV only)”, “DTS”, “FLAC”
- Sampling frequency: 8 - 48 KHz (MP3), 22.5 - 96 KHz (WMA), 8 - 192 KHz (PCM/WAV), 8 - 44 KHz (ADPCM/WAV), 32, 33.1, 48 KHz (AC-3), 8 - 192 KHz (AAC), 8 - 192 KHz (FLAC), 8 - 192 KHz (DTS)
- Bit rate: 8 - 320 Kbps (MP3), 20 - 320 Kbps (WMA), 8 ~ 12.3Mbps (PCM/WAV), 8 ~ 352.8Kbps (ADPCM/WAV), 8 - 320Kbps (AC-3), 8 - 320 Kbps (AAC), 8~4.6Mbps (FLAC, ALAC, APE, TTA, AIFF)

playaBle video File StaNdard

- Playable file format : “.avi”, “.mpg”, “.mpeg”, “.mp4”, “.asf”, “.wmv”, “.mkv”
- Playable Codec format : “MPEG-1”, “MPEG-2 simple profile – main level”, “MPEG-2 main profile – low,main,high level”, “VC-1”, “AVC”, “H.263 profile 0 ~ profile2”, “MPEG4 v2,v3” • Playable resolution and frame rate: (MPEG-1) within 1280 x 720 30fps, 720 x 480p 30fps / 720 x 576p 25fps (H.263), 1920 x 1080 30fps (other supported Codec format)

playaBle SuBtitle StaNdard

- Playable file format : “.smi”, “.srt”
- Playable subtitle language : Korean, English, Japanese, Chinese etc
- When the file name of image and subtitles is different, subtitles may not be displayed.

regiStered trademark aNd liceNse



Dolby, Dolby Atmos, and the double-D symbol are registered trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories. Confidential unpublished works. Copyright © 2012-2020 Dolby Laboratories. All rights reserved.

dtS digital SurrouNd



For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS, Inc. (for companies headquartered in the U.S./Japan/Taiwan) or under license from DTS Licensing Limited (for all other companies). DTS, Digital Surround, and the DTS logo are registered trademarks or trademarks of DTS, Inc. in the United States and other countries. © 2020 DTS, Inc. ALL RIGHTS RESERVED.

Bluetooth®



Bluetooth® word mark and logo is a registered trademark of Bluetooth SIG, Inc. and all the Bluetooth marks and logos are under the license. In order to use Bluetooth wireless technology, a headset, a remote control, a gamepad, that Bluetooth function is supported, is required.

hdmi®



Before you think the product is defective

BeFore you thiNk the product iS deFective

1. You can mistake an error at the time of operating or installing a device as its defect.
2. If you think it is defective, check for defects in the below table.
3. If a problem continue to occur even after checking the below details, please call a

Symptoms	Functions
There are small red dots, blue dots and green dots on the screen.	Since LCD is made with very high dot densities, under 0.01 percent of the total number of pixels, there may be lack of pixel or LED always lit.
No sound is heard and no image is shown.	• Is a starter switch of a car on [ACC] or [ON]? • Isn't the system off?
The USB is not played.	When a USB memory is damaged, please use it after formatting with FAT 12/16/32.
Image is shown but sound is heard.	• Is the volume control set at a low volume? • Is it mute?
A sound is heard only in one speaker.	Dose the volume control of the front and rear and the right and left lean to one side?
It does not operate normally if an external device is connected.	Is the connection of an external device correctly made with a cable with warranty?
The last mode screen is not displayed when the power is OFF > ON.	The mode that plays by reading external source just as USB, iPod and Bluetooth audio mode may not be moved back to the mode shown last when the power is on according to the current condition If the previous mode is not in normal playback condition, it moves back to a previous mode.

designated agent and service centers.

reSpoNSe to Failure SymptomS

Mode	Symptoms	Details of measure
Common	It does not operate normally.	You can reset the system. Refer to 'System Reset' to initialize the system.
	The volume is not played.	Adjust the volume using the remote control.
	The screen is dark.	Adjust the brightness in Setup-Display-Screen Brightness menu.
	Volume and video are not played.	Please check the starter switch of a car is on "ACC" or "ON".
	When the power is on, the corner of the screen seems dark.	The use of LCD panel fluorescent tube for a long time makes itself seem darker over time due to the nature of fluorescent tube and it is not a failure.
USB	The USB is not played.	When a USB memory is damaged, please use it after formatting with FAT 12/16/32.
		If the USB memory is contaminated with foreign substances, please remove them in the contact surfaces between USB memory and infotainment port.
		When a separate USB HUB purchased on the market is used, please use USB memory by directly connecting to a infotainment port of a car.
		When USB extension cables are used, please use them by directly connecting USB memory to a infotainment port of a car.

		If it something else is used other than a standard product, a Metal Cover Type USB memory, please use a standard product USB memory.
		When HDD type, CF and SD memories are used, please use a standard USB memory.
		When there are no playable video clip, and music, please use a sound source of a file format that can be supported.

Response to failure symptoms

Mode	Symptoms	Details of measure
Bluetooth	The remote control is not working.	Check the battery in the remote control.
	The headset is not connected.	Check the power status of the headset.
	The gamepad is not connected.	Check the power status of the gamepad.
	The device is not paired.	Please refer to the device's user manual and pair the device.

SpeciFication

rear Seat moNitor product SpeciFication

Common	Power Supply	DC 12 V	
	Operating Power	DC 9 V ~ DC 16 V	
	Current Consumption	Maximum 5A (CCRC R) Maximum 2A (CCRC L)	
	Dark current	Less than 4 mA	
	Operating Temperature	-20 °C ~ +70 °C	
	Storage Temperature	-40 °C ~ +85 °C	
	External dimension	350.75 (W) x 65.5 (H) x 215.38 (D) mm (CCRC R, CCRC L Common)	
	Weight	CCRC R: 2.58 kg, CCRC L: 2.315 kg	
	Company name	LG Electronics	
	Name of equipment (model name)	Rear Seat Entertainment (CCRC R / CCRC L)	
	Manufacturer / the country of manufacture	LG Electronics/South Korea	
Bluetooth department	Supported profile	HFP(1.8), A2DP(1.4), AVRCP(1.6.2), SPP(1.2), HID(1.1.1), HID over GATT(1.0)	
	Supported Bluetooth Specification	5.0	
	Frequency Range	2402 MHz ~ 2480 MHz	
	Output power (Class2)	-6 ~ 4 dbm	
	Number of Channels	Bluetooth Classic(79), Bluetooth Low Energy(40)	
LCD display	Screen size	Rear Seat	342.14mm(H) x 206.76mm(V) x 8.0mm(D) (w/o Pemunt , w/ CG 1.1T)

	Resolution	Rear Seat	1920x1080 (14.6")
	Operating Method	Rear Seat	LTPS Incell Touch, TFT LCD
	Viewing Angle	Rear Seat	88/88/88/88 (L/R/U/D)
	Internal Lighting	Rear Seat	LED
Wireless Bluetooth Module	Name of equipment (model name)	Certain low power wireless device for the use of wireless data telecommunications system BT Full module (ATB2CUL001.KM01) BT WIFI Combo module (ATC5CPL002.KM00)	
	Manufacturer / the country of manufacture	LG Innotek/South Korea	
Bluetooth remote control	Company name	Ohsung Electronics Gumi Factory	
	Certification number	R-C-OHS-T6965-ABZR0	
	Date of manufacture	2023. 10.	
	Manufacturer / the country of manufacture	Ohsung Electronics Gumi Factory / South Korea	
	Name of equipment / Model name	Specific low power wireless device (Wirelessdevice for wireless data communication system) / T6965-ABZR0	

- To get GPL, LGPL, MPL mounted on this product and other source code developed under the open source license, visit <http://opensource.lge.com>. You can download all license content and copyright note and no warranty liability along with a source code. If you request for an open source of a software mounted on this product by sending an email to opensource@lge.com within 3 years after purchasing this product, you will receive it in a CD-ROM for the least costs such as media cost and delivery costs.
- The design and product standard details are subject to change without due notice to improve the product performance.
- Since this wireless equipment can cause an electric wave interference during operation, the service related to human safety is not provided.
- This equipment as an electromagnetic compatibility equipment can be used in all areas since it has the purpose of being used for a domestic use (class B).

coNNected Service termiNal product StaNdard

KC certification	Name of equipment (product name)	Specific low power wireless device (Wireless device for wireless data communication system)
	Model name	CCRC R
		CCRC L
	Certification number	CCRC R: R-C-LGW-LTD-LN1000, R-C-LGE-CCRCR
		CCRC L: R-C-LGE-CCRCL
	Name of the person certified	LG Electronics
	Manufacturer / the country of manufacture	LG Electronics/South Korea

aBout the Service

Since the warranty period is calculated from the release of a car (registered date), please receive enough service during the warranty period.

Free Service

The free repair will be provided if you used it normally within the warranty period from the day of purchase and it caused a failure.

The warranty period is subject to the period described in an instruction and a letter of warranty

by car model provided by a car manufacturer. **charged Service**

- In case of mishandling failure by a customer
- In case of failure caused by natural disaster (fire, earthquake, flood damage, falling of a thunder bolt)
- In case of failure due to power abnormality
- In case of failure due to the defects of connecting device
- In case of failure caused by the repair or modification by a person who is not a repairer of a designated service center

compeNSatioN StaNdard For cuStomer damage

The compensation standard for customer damage of this product is based on customer dispute settlement standard posted by Fair Trade Agreement



Please be careful that if the metalized tint film (2 tons of them) with metal components is attached on a car that the glass antenna is applied, it can degrade the reception performance of this product.

The components being replaced during repair can be the used components from the different country of origin or manufacturer but the same component that has normal operation is used.

Designated service center

deSigNated Service ceNter

For inquiry of warranty service and counseling, feel free to call ☎ 1588-7386 anywhere with no area code.

Area	Address	TEL
Northern Service center	76, Banghak-ro, Dobong-gu, Seoul	070-7012-9712
Eastern Service center	134, Seongsui-ro, Seongdong-gu, Seoul	070-7012-9713
Southern Service center	53, Noryangjin-ro, Dongjak-gu, Seoul	070-7012-9715
Gangnam Service center	26, Mabang-ro, Seocho-gu, Seoul	070-7012-9787
Incheon Service center	22, Gajwa-ro 83beon-gil, Seo-gu, Incheon	070-7012-9716
Goyang Service center	217-6, Kintex-ro, Ilsanseo-gu, Goyang-si, Gyeonggi-do	070-7012-9602
Ilsan Service center	939, Gyeongui-ro, Ilsanseo-gu, Goyang-si, Gyeonggi-do	070-7012-9781
Sangam Service center	37, Deogeun-ro, Goyang-si, Gyeonggi-do	070-7012-9744
Opo Service center	16-1, Meorusut-gil, Opo-eup, Gwangju-si, Gyeonggi-do	070-7012-9783
Sihwa Service center	37, Gyeongje-ro, Siheung-si, Gyeonggi-do	070-7012-9717
Suwon Service center	6, Yonggu-daero 2219beon-gil, Giheung-gu, Yongin-si, Gyeonggi-do	070-7012-9718
Osan Service center	9, Naesammi-ro, Osan-si, Gyeonggi-do	070-7012-9741
Gangneung Service center	9, Gangbyeon-ro 534beon-gil, Gangneung-si, Gangwon-do	070-7012-9719
Chuncheon Service center	57, Dongnae-ro, Dongnae-myeon, Chuncheon-si, Gangwon-do	070-7012-9785
Wonju Service center	200-22, Mandae-ro, Wonju-si, Gangwon-do	070-7012-9791
Cheongju Service center	257, Jikji-daero, Heungdeok-gu, Cheongju-si, Chungcheongbuk-do	070-7012-9752
Seosan Service center	20-8, Nambusunhwan-ro, Seosan-si, Chungcheongnam-do	070-7012-9784

Cheonan Service center	28, Sindangsaeteo 2-gil, Seobuk-gu, Cheonan-si, Chungcheongnam-do	070-7012-9730
Daejeon Service center	271, Dongdaeyeon-ro, Dong-gu, Daejeon	070-7012-9751

Designated service center

Area	Address	TEL
Pohang Service center	102, Dongmun-ro, Yeonil-eup, Nam-gu, Pohang-si, Gyeongsangbuk-do	070-7012-9736
Andong Service center	773, Pungsaesa-ro, Pungsan-eup, Andong-si, Gyeongsangbuk-do	070-7012-9728
Daegu Service center	6, Nowon-ro, Buk-gu, Daegu	070-7012-9735
Changwon Service center	397, Bongyang-ro, Seongsan-gu, Changwon-si, Gyeongsangnam-do	070-7012-9733
Eastern busan Service center	2736, Gimhae-daero, Gimhae-si, Gyeongsangnam-do	070-7012-9737
Ulsan Service center	317, Yeompo-ro, Buk-gu, Ulsan	070-7012-9734
Busan Service center	1168, Jungang-daero, Yeonje-gu, Busan	070-7012-9731
Sasang Service center	86, Gaya-daero, Sasang-gu, Busan	070-7012-9732
Jeonju Service center	96, Yeosan-ro, Deokjin-gu, Jeonju-si, Jeollabuk-do	070-7012-9755
Gunsan Service center	570, Haemang-ro, Gunsan-si, Jeollabuk-do	070-7012-9756
Suncheon Service center	197, Sungwang-ro, Suncheon-si, Jeollanam-do	070-7012-9754
Mokpo Service center	600, Yeongsan-ro, Mokpo-si, Jeollanam-do	070-7012-9743
Gwangju Service center	31, Songam-ro 76beon-gil, Nam-gu, Gwangju	070-7012-9753
Jeju Service center	1323, Iljudong-ro, Jochon-eup, Jeju-si, Jeju-do	070-7012-9757

Open Source Software Notice

open Source Software Notice

This product from LG Electronics, Inc. contains the open source software.

Please refer to the linked open source licenses for the terms and conditions of their use detailed below.

<http://webmanual.genesis.com/ccRC/opensource.html>

