

Home Screen (horizontal view)

- Notifications: Appears when connecting the tablet to a PC.
- Swipe down: To view notifications.
- Quick Settings: Press & hold to change wallpaper.
- select to view all apps: Press & hold to view all apps.
- Previous, Home, Multi-tasking: Navigation buttons at the bottom.

Widgets

- To add a widget or change the wallpaper, press and hold anywhere on the home screen and select the desired option as shown below.
- Press & hold widgets to place them on the Home Screen.
- Widget options: Shows options for adding widgets.

Apps Screen


- Swipe for more apps: Swipe up to view more apps.
- Back to Home Screen: Button to return to the home screen.

Connecting

- Wi-Fi and Bluetooth?: To setup Wi-Fi or connect the tablet to a Bluetooth device, swipe down on the top right of the home screen as shown below to access the **Quick Settings** panel.
- Quick Settings panel: Accesses Wi-Fi and Bluetooth settings.

Remote management (Net Nanny)

1. Click the toggle to the left to disable **Net Nanny**.



When **Net Nanny** is disabled, the icon will not appear on the Apps Screen.

To enable Net Nanny:


- Swipe down on the top right of the Home Screen to access the **Quick Settings** panel.
- Select the **Net Nanny** quick settings toggle.
- Net Nanny** will be enabled, the icon will appear on the Apps screen and settings and other web browsers will be blocked.

Child Mode

Child Mode is a friendly and safe environment for children that includes games, books, videos and more.


To access **Child Mode**, follow the steps below:

- Swipe down on the top right of the **Home Screen** as shown below to access the **Quick Settings** panel.




2. Select **Child Mode** and the **Child Mode** Home screen appears.

You will be asked to create a password upon first use. This password will prevent your child from exiting **Child Mode**.




3. Select **Child Mode**.

• Briefly press to randomly change wallpaper
• Press & hold to see all wallpaper options



4. Select **Child Mode**.



5. Select **Child Mode**.

Parental Controls

Managing Apps
Not all the apps that are included on the tablet are available in **Child Mode**. You can use the Parental Controls feature to enable those apps or new apps downloaded from Google Play.

To enable or disable the apps that are available in **Child Mode**:

- Tap the **Parental Controls** icon.
- Enter the password you created earlier.

Exit Child Mode

1. Tap the **Parental Controls** icon.

2. Enter the password.

3. Select **Exit Child Mode**.

Legal information

Warranty Guidelines
This device is sold with a 1-year warranty. The warranty is limited to the device and does not cover accessories, software, or data. The warranty is void if the device is damaged by accident, misuse, or unauthorized repair. For more information, see the [Warranty and Support](#) page.

Privacy Policy
This device collects and uses certain data to provide you with a better experience. For more information, see the [Privacy Policy](#) page.

Terms of Service
This device is sold under the terms of the [Google Play Store Terms of Service](#). For more information, see the [Terms of Service](#) page.

Limited Warranty

This device is sold with a 1-year limited warranty. The warranty is limited to the device and does not cover accessories, software, or data. The warranty is void if the device is damaged by accident, misuse, or unauthorized repair. For more information, see the [Warranty and Support](#) page.