



Introduction	
Thank you for purchasing the KODAK Wi-Fi Photo Frame. From our company we hope you will enjoy this user guide of discharging your memories and sharing them with your family.	
Before operating this unit, please read this manual thoroughly and keep it for future reference. This manual will help you do many of the interesting and useful functions to make your KODAK Wi-Fi Photo Frame share more enjoyable.	
The KODAK Wi-Fi Photo Frame lets you view digital photos and videos directly from your smartphone/memory card or USB drive. You will be able to create a photo album, share photos and videos with others, or display only one photo at a time. No computer, digital camera, or cable connection is necessary.	
Part 1 shows you the everyday photo displaying every day in a KODAK Wi-Fi Photo Frame.	
Important safety precautions	
Always follow these basic safety precautions when using your KODAK Wi-Fi Photo Frame. This will reduce the risk of fire, electric shock and injury.	
Warning: To reduce the risk of fire or shock hazard, do not expose the product to dripping water or moisture. Do not remove the cover. There are no user-serviceable parts inside. Refer all servicing to qualified personnel.	
• Caution: The KODAK Wi-Fi Photo Frame is for indoor use only.	
• Caution: The KODAK Wi-Fi Photo Frame before performing care and maintenance.	
• Caution: Do not touch the ventilation holes on the back of the KODAK Wi-Fi Photo Frame.	
• Caution: The KODAK Wi-Fi Photo Frame away from direct sunlight and away from heat sources.	
• Prevent the product from cables. Route power cables so that they are not likely to be pulled or damaged by items placed on or against them. For particular safety information, see the chapter on the KODAK Wi-Fi Photo Frame.	
• Prevent the use of the supplied AC adapter with the KODAK Wi-Fi Photo Frame. Using any other AC adapter may cause damage to the product.	
• Make the power cable from the back when you do not use the device anymore.	
Check the power cord carefully	
Do not open the cover or cut on the LCD screen. It is recommended to use a soft, non-abrasive cloth such as a cotton or linen cloth.	
If you use a special LCD screen cleaning kit, do not apply the cleaning solution directly to the LCD screen. Clean the LCD screen with the cleaning solution by applying to the cleaning cloth.	
Check the KODAK Wi-Fi Photo Frame	
Clean the outer surface of the KODAK Wi-Fi Photo Frame (including the screen), with a clean cloth.	
TABLE OF CONTENT	
Box content	1
Features	1
Design	2
Installation	2
How to get the application	5
How to upload	6
How to use the KODAK Wi-Fi Photo Frame	7
Specifications	18
Technical Support	19
Radio and TV Interference Statement	19
Warranty	19

