

YS-BF01

(STK-12/1963)

Smart Track & Find



INSTRUCTION MANUAL

**PLEASE READ ALL INSTRUCTIONS CAREFULLY
AND RETAIN FOR FUTURE USE**

Thank you for choosing itek™ Smart Track & Find. It can chase your easy-lost & valuable belongings (such as keys, wallet, luggage and more) with smart phones through specified App software within a preset Bluetooth connection distance.

Getting Started

- Remove the device from the box.
- Please retain all packaging until you have checked and counted all the parts and the contents against the parts list.

Package Contents

- Smart Track & Find
- CR2032H battery (preinstalled in the product)
- Instruction Manual

Key Features

- Stay connected to your mobile device via Bluetooth, through the App. Your phone will beep when the tracker moves away from the phone.
- Vice versa, your tracker will beep when your phone moves away from the tracker.
- Keep track of valuable items including - Phone, Keys, Wallet, Luggage & more
- Also acts as a remote control for your phone camera - great for selfies
- Built-in button cell battery (included)
- Bluetooth 5.0

Safety Instructions

- Keep the unit away from heat sources, direct sunlight, humidity, water and any other liquids.
- Do not operate the unit if it has been exposed to water, moisture or any other liquids to prevent damage to the unit.
- Do not use the unit if it has been dropped or damaged in any way.
- Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.
- Do not use the unit with wet hands.
- Do not put objects into any of the openings.
- Keep the unit free from dust, lint etc.
- Do not use this unit for anything other than its intended use.
- Keep the unit out of reach of children.
- This appliance is not a toy.
- Batteries (battery pack or batteries installed) shall not be exposed to excessive heat place, such as sunshine, fire or the like.

 
Specifications

- Bluetooth version: Bluetooth 5.0 Low Energy
- Size: Length 1.50 inches (38.1 mm), Width 1.50 inches (38.1 mm) and Height 0.28 inches (7.0mm)
- Compatible Phone: iPhone 13/13 Pro/13 Pro Max/13 mini/12/12 Pro/12 Pro Max/12 mini/11/11 Pro/11 Pro Max/XS/XS Max/XR/X/8+/8/7+/7/6+/6 or above, iPad 5th/4th, iPad mini, iPad Air, iPod touch (iOS 9.0 or above, and with Bluetooth 4.0)
- Samsung Galaxy S22/S21/S20/S10/S9/S8/S7/S6/S5 or later, NOTE 4/5/8/9/10, LG Nexus 5 (Android OS 9.0 or above, and with Bluetooth 4.0)
- Working distance: About 33-66 Feet (without barrier)
- Suitable for: Wallet, Car, Bags, Suitcase or other belongings
- Battery: CR2032/CR2032H battery
- Standby time: About 6 months
- Net weight (with battery inside): 0.3 oz (9g)
- App Name: **iSearching** (Download free of charge from App Store or Google Play Store)



- App icon:


Description of Parts

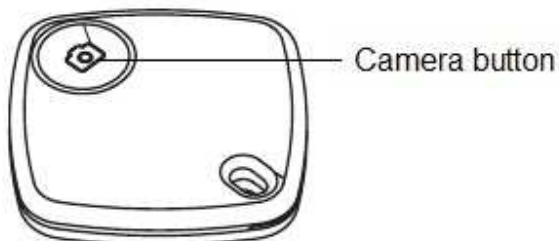


Battery replacement

When the battery is drained, replace it as stated below:

 1. Use a small flat screwdriver to separate the top cover from the snap gap.

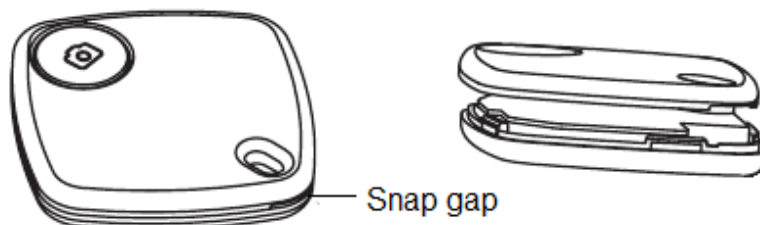

 2. Place a new CR2032/CR2032H battery inside the tracker, as per the indicated polarity. (negative polarity facing down)

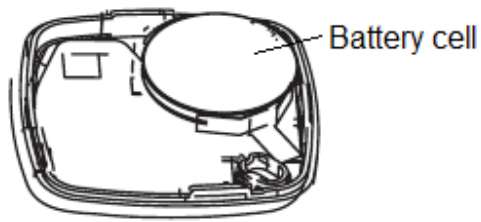

3. Secure back the top cover.

Instructions for Use

Switch on/off the unit

 
For the first time use, pull out the battery insulating film.

Switch on: Press and hold the camera button for 3 seconds until you hear two “Beep” sounds.

Switch off: Press and hold the camera button for 3-5 seconds until you hear long “Beep” sound.

Connection

1. Turn on the Bluetooth on your smartphone, and open the software App.
2. Smart Tag will connect the smartphone automatically when power on.
3. Click the button “+” on the top right corner to find more connectable Smart Tag devices, such as car keys, bags and so on. Click the “Unconnected” button to connect it, then, it will show “Click Alarm” and battery level. [Note: Click the “Setting” button will turn to submenu, such as add photo for Smart Tag, rename, get actual alarm when Bluetooth disconnected (i.e. when Smart Tag and your smartphone is out of Bluetooth’s range) and select the ringtone (i.e. alarm sound).]

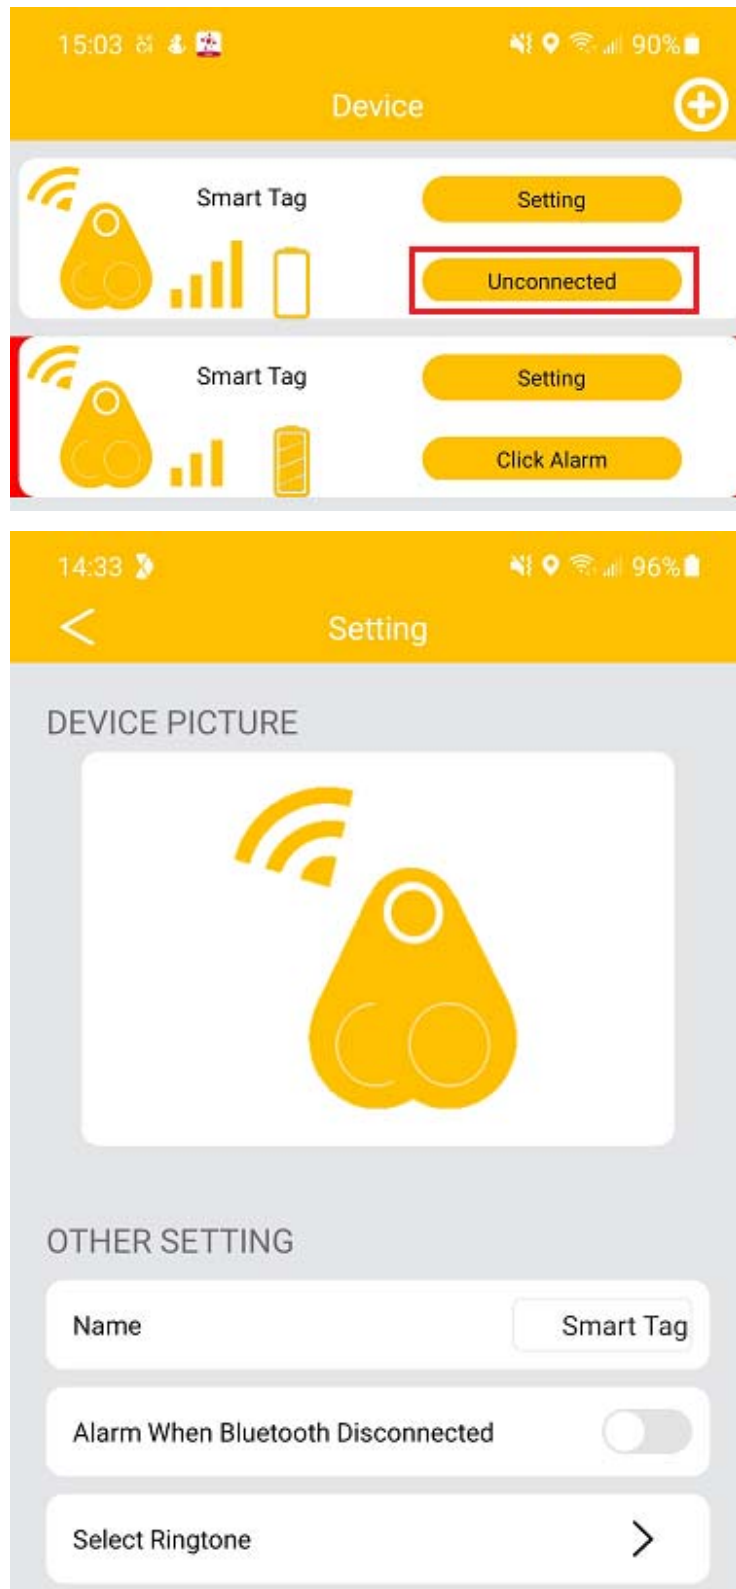

4. To delete a device, just scroll left the list to delete it.

Do Not Disturb Mode

 
On the “Settings” interface, switch “WIFI Do Not Disturb” on, alert function of all devices will be shut down.




Setting for Alarm

As shown in below image -

1. Double click the camera button on Smart Tag to trigger the alarm on the smart phone.
2. Click the “OK” button to stop the phone alarm.

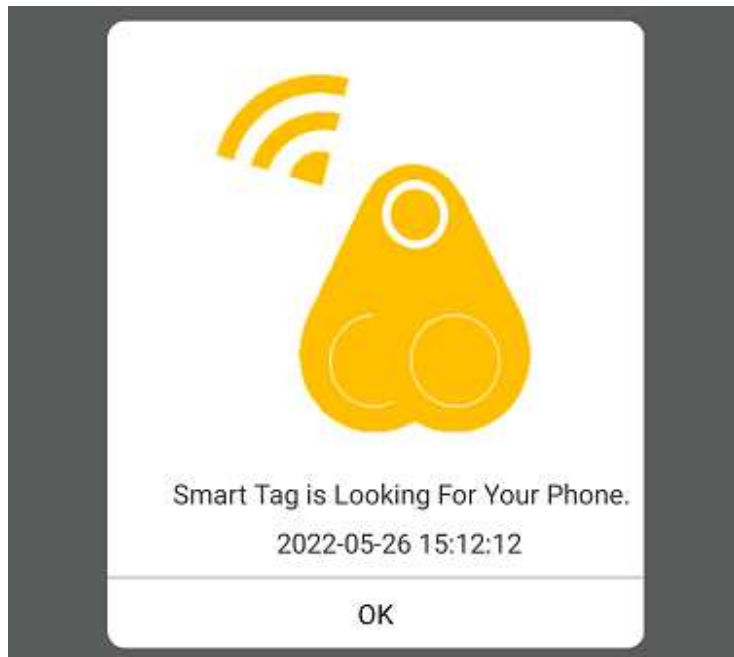

 3. Click “Click Alarm” button, Smart Tag starts an alarm, and click the “Stop Alarm” will stop the alarm from Smart Tag.

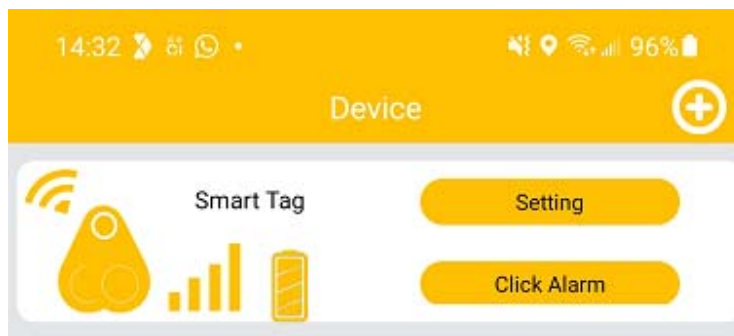


Camera

As shown in below image -

Press the “Camera” button, it will turn to camera mode.




 - Press  to switch the front and rear camera.
- Press the camera button on Smart Tag once, it works as a remote shutter to take photo.

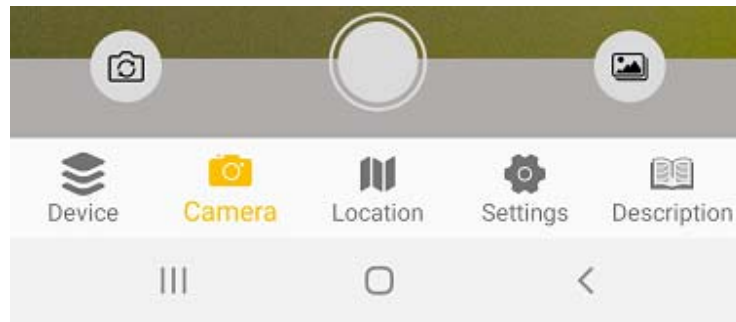

Location

 As shown in below image -

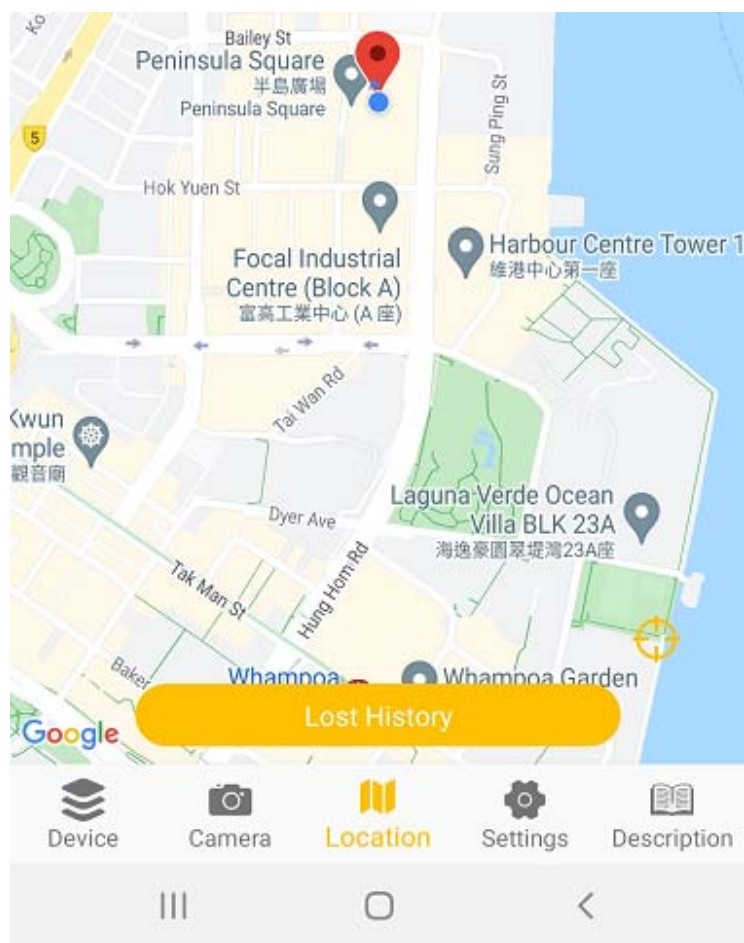


Lost History: If the Smart Tag is lost, a pin-drop will be marked automatically on the Map to tell you the site it was lost. Just click “Lost History” to find the record.

Setting

In order to experience the functions of Smart Tag better, enter into the settings menu to set your Smart Tag.

 As shown in below image -

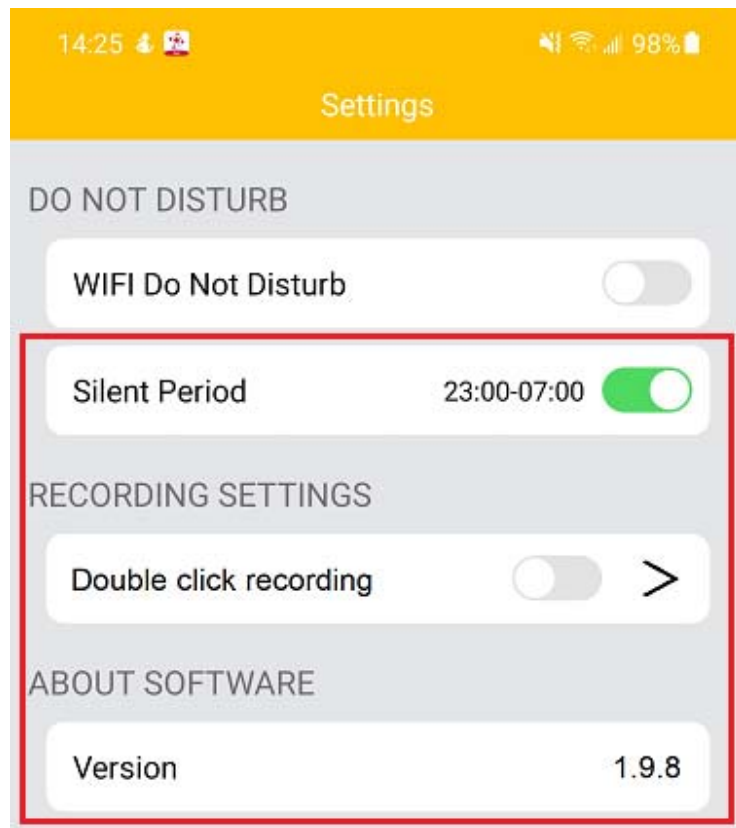

Silent Period: Set the silent time for not receiving alarm.

Double click recording: Only available on iOS device. Turn this function on, double click the camera button on Smart Tag to start recording, and double click again to finish and store the record file. Simply press > button to see the record files and click the file to play.

Version: Version of current software App.

Care and maintenance

Read the following recommendations before using the unit. Following these you will be able to enjoy the product for many years.

- Do not expose the unit to liquid, moisture or humidity to avoid the product's internal circuit being affected.
- Don't use abrasive cleaning solvents to clean the unit.

- Do not expose the unit to extremely high or low temperature as this will shorten the life of electronic devices, destroy the battery or distort certain plastic parts.
- Don't dispose of the unit in fire as it will result in an explosion.
- Don't expose the unit to contact with sharp objects as this will cause scratches and damage.
- Don't let the unit fall down onto the floor. The internal circuit might get damaged.
- Don't attempt to disassemble the unit as it may get damaged if you are not professional.

FCC Instructions

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

NOTE: This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the product does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures :

- Reorient or relocate the receiving antenna.
- Increase the separation between the product and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement.

LIMITED WARRANTY

This manufacturer's product warranty extends to the original consumer purchaser of the product. Neither the retailer nor any other company involved in the sale or promotion of this product is a co-warrantor of this manufacturer warranty.

WARRANTY DURATION: All materials and workmanship are warranted to the original consumer purchaser for a period of ninety (90) days from the original purchase date.

WARRANTY COVERAGE: This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty doesn't cover the following which may be supplied with this product, including but not limited to; LCD Screens, glass parts, lenses, bulbs etc. This warranty is effective only if the product is purchased and operated in USA and Canada, and does not extend to any units which have been used in violation of written instructions furnished by manufacturer or to units which have been altered or modified or, to damaged products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

WARRANTY DISCLAIMERS: This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume for manufacturer any other liability in connection with the sale of our products. There shall be no claims for defects or failure under any theory of tort, contractor commercial law including but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract. Under no circumstances will Manufacturer's / Distributor's maximum liability exceed the retail value of the product.

WARRANTY PERFORMANCE: During the above 90 day warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at manufacturer's option). The repaired or replacement product will be in warranty for the balance of the 90 day warranty period and an additional one-month period. No charge will be applicable for such repair or replacement.

SERVICE AND REPAIR: If service is required for this product, you should first contact Midwest Trading Group Customer Service at info@mtradinggroup.com or by calling 1 (866) 815-4714, Monday to Friday 10am to 6pm EST.

NOTE: Manufacturer cannot assume responsibility for loss or damage during incoming shipment. As a precautionary measure, carefully package the product for shipment, and insure it with the carrier. Be sure to enclose the following details with the product: your full name, return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.