

GYD26-0970-G1_DOM_I/S

Size: 11" x 18"



Front



G1: Updated the images per engineer's comment.

Back

INSTRUCTIONS



Keep these instructions for future reference as they contain important information.
IMPORTANT: Please read all instructions before operating your wheelchair.

CAUTION:
Surfaces may become hot and cause burns if electronics get wet. To prevent entanglement, keep all hair away from moving parts.
Adult supervision is recommended when the wheelchair is being operated.

The wheelchair and helmet logo is a registered trademark of WCMX International LLC.

©2021 Mattel. "®" and "™" designate U.S. trademarks of Mattel, except as noted. Mattel, Inc., 636 Grand Avenue, East Aurora, NY 14052, U.S.A. Consumer Services: 1-800-524-8697. Mattel U.K. Limited, The Potter Building, 1 Brunel Way, Slough, SL1 1PL, UK. Mattel Australia Pty. Ltd., 658 Church St., Richmond, Victoria, 3121. Consumer Advisory Service - 1300 353 312. Mattel South Africa (Pty) Ltd, Office 102/13, 39 Melrose Boulevard, Johannesburg 2196. Mattel East Asia Ltd, Room 503-505, North Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China, Tel.: (852) 3185-6500, Dimpert & Dredeman (Neth. Mattel Continental Asia Sdn Bhd, Level 19, Tower 3, Avenue 7, No. 8 Jalan Kerinci, Bangsar South, 59200 Kuala Lumpur, Malaysia.

HOTWHEELS.COM

6+

2.4 GHz

MATTEL

GYD26-0970-G1-00M

?

1: CONTENTS





CHARGE CORD
USB Charger not included.

REMOTE CONTROLLER
Colors and decorations may vary.

CARDBOARD RAMP

2: FEATURES

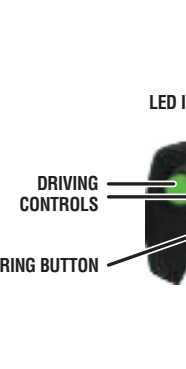

ON/OFF SWITCH

CHARGE PORT

LED INDICATOR

DRIVING CONTROLS

PAIRING BUTTON

LED INDICATOR


BOOST BUTTON

ALIGNMENT BUTTONS

3: SET UP

A. REMOTE CONTROLLER BATTERY INSTALLATION

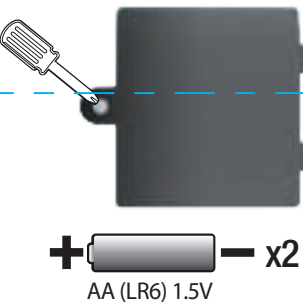


- Unscrew the battery cover with a Phillips head screwdriver (not included).
- Install 2 AA (LR6) 1.5V alkaline batteries (not included) with polarity (+/-) as shown inside the battery compartment. For longer life, use alkaline batteries.
- Replace battery cover and tighten screw.
- Replace batteries in the remote controller if the wheelchair does not respond well after a recharge.



B. CHARGING THE WHEELIE CHAIR

- The wheelie chair is powered by a permanently installed Lithium-Ion (Li-Ion) battery, and it must be fully charged before first use.
- Switch off the wheelie chair by sliding the power switch to OFF (O).
 - Connect one end of the charge cord to the wheelchair's charge port and plug the other end in to a 5V/1000 mA USB charger (not included).
 - A red LED will light up on wheelchair as it is charging.
 - The red LED will turn green when the wheelchair's battery is fully charged. A full charge will take approximately 60 minutes (charging time may vary). Unplug the cord when charging is complete.
 - Recharge the wheelie chair if its LED rapidly flashes then goes off or if the wheelie chair begins to respond slowly.



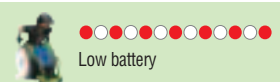



TIPS:

- Power switch must be in the OFF (O) position when charging the wheelchair.
- Charging the battery for more than what is recommended will not give you a longer running time.
- The battery will be hot after play. Wait at least 10 to 15 minutes until the battery cools down before recharging the wheelchair.

C. PAIRING THE REMOTE CONTROLLER AND WHEELIE CHAIR

- Slide the power switch to ON (I) on the wheelchair.
- Press the pairing button on the remote controller after switching on the wheelchair.
- Pairing is complete when the LED changes from flashing red to solid red on the remote controller.

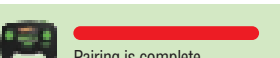

NOTE: If the LED indicator does not stop flashing in approximately 10 seconds, switch off the wheelchair, turn it back on, and then press the pairing button on the remote controller to try pairing again.

D. STEERING ALIGNMENT

- Check the wheelchair's steering alignment before playing by driving it forward to see if it is driving straight.
- If the wheelchair automatically steers toward the right/left, press the alignment button in the opposite direction a few times until it runs in a straight line.


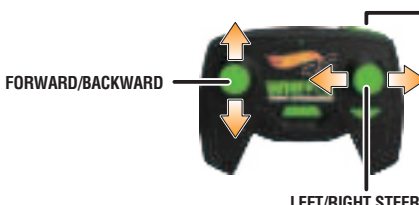


4: HOW TO DRIVE

CHECKLIST

- ☐ Is the wheelchair fully charged?
- ☐ Is the remote controller equipped with fresh batteries?
- ☐ Is the remote controller paired with the wheelchair?
- ☐ Has the wheelchair's steering been aligned?

CONTROLS



FORWARD/BACKWARD

LEFT/RIGHT STEERING

TIP:
Tilt the wheelchair back and try pulling off different tricks with the driving controls!

NOTE:

- Operating range of the remote controller is up to 25 m (82 ft).
- The wheelchair and remote controller will go into sleep mode if left idle for approximately 5 minutes. To resume normal play, press and hold the remote controller's pairing button until the LED lights up again.

SPEED BOOST

Press the **FORWARD + BOOST** buttons, for extra speed off the ramp!



STUNT RECOVERY

Fall down, toggle the **DIRECTIONAL CONTROLS** to get up and keep stunting!




360 SPINS

Press the **BOOST** button for wild 360 spins!

CONSUMER INFORMATION

TIPS & HINTS – FOR ALL DRIVING ENVIRONMENTS

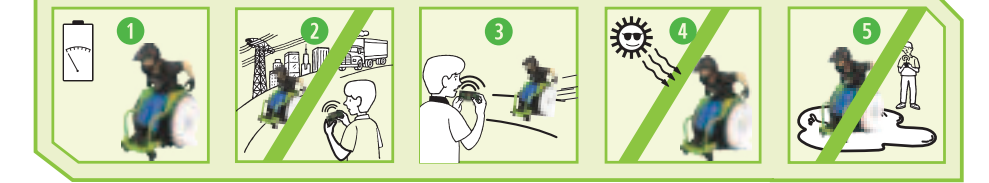

- When your wheelchair starts to lose power, it may lose functionality or performance. It's time for a recharge. For the best performance, always start with a fully-charged battery. Your wheelchair's running time may change depending on driving style and driving environment.
- Radio interference can make your wheelchair run badly. Interference can be caused by other RC vehicles running on the same frequency, electrical wires, large buildings, CB radios, or other wireless gear. Try to stay away from them.
- Point your remote controller up, and not down toward your wheelchair chair. If your wheelchair gets too far away, it won't work properly.
- Don't leave your wheelchair chair near heat or in direct sunlight. Always turn switches OFF and remove all batteries from remote controller before storage.
- Don't drive your wheelchair chair in sand or through water or snow. Do not immerse your wheelchair chair in water. If your wheelchair chair does get wet, wipe it with a towel and allow to dry completely overnight. If your remote controller is accidentally dropped in water, remove battery(ies) and allow your remote controller to air-dry. Replace with fresh battery(ies) before operation.
- When exposed to an electric shock source, the remote controller and/or the wheelchair chair may malfunction. To resume normal operation of the remote controller, remove the batteries and reinstall them after 5 seconds. To resume normal operation of the wheelchair chair, turn the power OFF for 5 seconds, then turn it ON again.

SAFETY TIPS

- Play safely! Do not drive the wheelchair in the street!
- DO NOT pick up the wheelchair chair while in motion.
- Keep fingers, hair, and loose clothing away from the wheels while the wheelchair chair is switched ON.
- Adult supervision is recommended when the wheelchair chair is being operated.
- To avoid accidental operation, remove all batteries from the remote controller when not in use and switch the wheelchair chair OFF before storage.

RECHARGEABLE BATTERY SAFETY INFORMATION

- Rechargeable batteries are only to be charged under adult supervision.
- Do not recharge battery if it is hot. Allow to cool before recharging.
- Do not recharge a battery pack that shows leakage or corrosion.
- Do not disassemble the battery pack. The battery pack is a sealed rechargeable Li-ion battery pack.
- If the battery pack and/or charging port are wet, thoroughly dry before charging.
- Do not recharge non-rechargeable batteries.
- The Li-ion battery in the wheelchair chair is not intended to be replaced or removed by consumers. Before disposal in the waste stream, the Li-ion battery must be removed by a qualified professional and disposed of separately according to local regulations on battery collection and recycling.
- Do not dispose of the batteries in a fire.

BATTERY SAFETY INFORMATION

- In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:
- Non-rechargeable batteries are not to be recharged.
 - Rechargeable batteries are to be removed from the product before being charged.
 - Rechargeable batteries are only to be charged under adult supervision.
 - Do not use alkaline, standard (carbon zinc), or rechargeable batteries.
 - Do not mix old and new batteries.
 - Only batteries of the same or equivalent type as recommended are to be used.
 - Batteries are to be inserted with the correct polarity (+ and -).
 - Exhausted batteries are to be removed from the product.
 - The supply terminals are not to be short-circuited.
 - Dispose of battery(ies) safely.
 - Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Protect the environment by not disposing of this product or any batteries with household waste. This symbol indicates that this product shall not be treated as household waste. Check your local authority for recycling advice and facilities.

FOR PRODUCT SOLD IN USA - POUR LES PRODUITS VENDUS AUX ÉTATS-UNIS

- This device complies with Part 15 of the FCC Rules.
- Operation is subject to the following two conditions:
- (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- NOTE:** Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

- Cet appareil est conforme à l'article 15 de la réglementation de la FCC.
- L'utilisation de ce dispositif est autorisée seulement aux deux conditions suivantes:
- (1) Il n'est pas produit de brouillage nuisible, et (2) l'utilisateur du dispositif doit être prêt à accepter tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre le fonctionnement du dispositif.
- Cet appareil a été testé et jugé conforme aux limites de la classe B pour un appareil numérique en vertu de l'article 15 de la réglementation de la FCC. Ces limites ont été instaurées pour assurer une protection raisonnable contre toute interférence nuisible dans une installation résidentielle. Cet appareil génère, utilise et peut émettre de l'énergie radioélectrique. S'il n'est pas installé et utilisé conformément aux instructions, il peut provoquer des interférences sur les communications radio. Cependant, il n'est pas garanti que des interférences ne se produiront pas dans certaines installations. Si cet appareil cause des interférences à la réception radio ou télévision (ce qui peut être vérifié en éteignant l'appareil puis en le remettant sous tension), l'utilisateur peut tenter de les résoudre en suivant une ou plusieurs des mesures ci-après:
- Reorienter ou déplacer l'antenne réceptrice.
 - Augmenter l'espace entre l'appareil et le récepteur.
 - Brancher l'appareil sur une prise de courant différente de celle sur laquelle le récepteur est branché.
 - Pour obtenir de l'aide, contacter le vendeur ou un technicien radio-télévision expérimenté.
- REMARQUE:** Tout changement ou modification de cet appareil n'ayant pas été expressément approuvé par les parties responsables de sa conformité peut entraîner l'annulation du droit d'exploitation de l'équipement par l'utilisateur.

FOR PRODUCT SOLD IN CANADA - POUR LES PRODUITS VENDUS AU CANADA

- This equipment complies with FCC & Canada radiation exposure limits set forth for uncontrolled environments. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
- This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s).
- Operation is subject to the following two conditions:
- (1) This device must not cause interference. (2) This device must accept any interference, including interference that may cause undesired operation of the device.
- Cet équipement est conforme aux limites d'exposition aux radiations définies par le Canada pour des environnements non contrôlés. Cet émetteur ne doit pas être installé au même endroit ni utilisé avec une autre antenne ou un autre émetteur.
- L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence.
- L'exploitation est autorisée aux deux conditions suivantes:
- (1) L'appareil ne doit pas produire de brouillage; (2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.