

## Operating Description

**The EUT is operated by pressing a momentary switch. The switch activates the digital encoder. The digital encoder sends a Pulse Width Modulated data packet to the RF Oscillator section. The RF Oscillator section transmits the signal with an RF carrier at 433.92MHz via a PCB antenna.**