


REMOTE CONTROL PROGRAMMING INSTRUCTIONS

GD-R14

INSTRUCTIONS TO PROGRAM A NEW REMOTE USING A LEARN BUTTON:


1. Set the dip switches to a random sequence of your preference

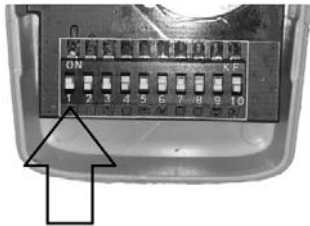

2. Press and release the learn button on the receiver in your garage. (it will be green in color)
3. Within 30 seconds press and hold the button on the remote you are programming
4. If you wish to program any additional remotes repeat step 2.
5. Remove the front panel from the remote control which will expose the 10 digit code selector.

INSTRUCTIONS TO PROGRAM A NEW REMOTE USING DIP SWITCHES:

1. Locate the dip switch cover on the back of the receiver you are programming.
2. Match the dip switch sequence to the receiver you are programming to

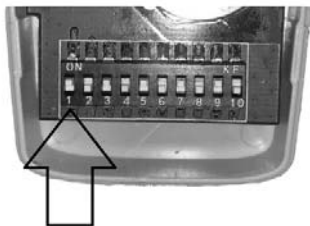

3. Programming is now complete

WARNING

In order to prevent possible **SERIOUS INJURY or DEATH** from a moving gate or garage door:

- Keep remote controls out of the reach of children.
- Only use the remote control when the gate/garage door can be seen clearly, is properly adjusted, and there are no obstructions to door travel.
- Keep the gate/garage door in sight until it is completely closed. Do not allow anyone to cross paths with the gate/garage door while moving or operating the remote control.

FCC Statement

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.