



X7 SPORT RUGGED TABLET QUICK START GUIDE



www.soten.com.cn

Manual

Please read the instructions first.

Thank you for using our rugged sports tablet computer built on the Google Android operating system.

·Please read all safety precautions and this manual carefully before using the device to ensure safety and correct use.

·The description in this manual is based on the Default Setting of the device.

·The images and screenshots used in this manual may differ from the actual appearance of the product.

·The contents of this manual may differ from the product, service provider or software provided by service provider. Subject to change without prior notice.

·Available features and additional services may vary by device, software or service provider.

·The format and information in this manual are based on the Google Android operating system, which may be different.

·Applications and their functions may vary by country, region, or hardware specification. We are not responsible for performance issues caused by third party applications.

·We are not responsible for performance issues or incompatibilities caused by editing registry Settings of customers.


·The sound sources, wallpapers and images provided in this equipment are licensed for limited use by us and their respective owners. The use of these materials for commercial or other purposes is a violation of copyright law.

We are not liable for such copyright infringement by our users.

·Additional charges may be incurred for sending and receiving messages, uploading and downloading, automatic synchronization or using location services. To avoid the additional charges, choose the right data charging plan. Contact your service provider for more information.

·Please keep this manual for future reference.

Comes with the Google™ app and Google Chrome™.
Android is a trademark of Google LLC.

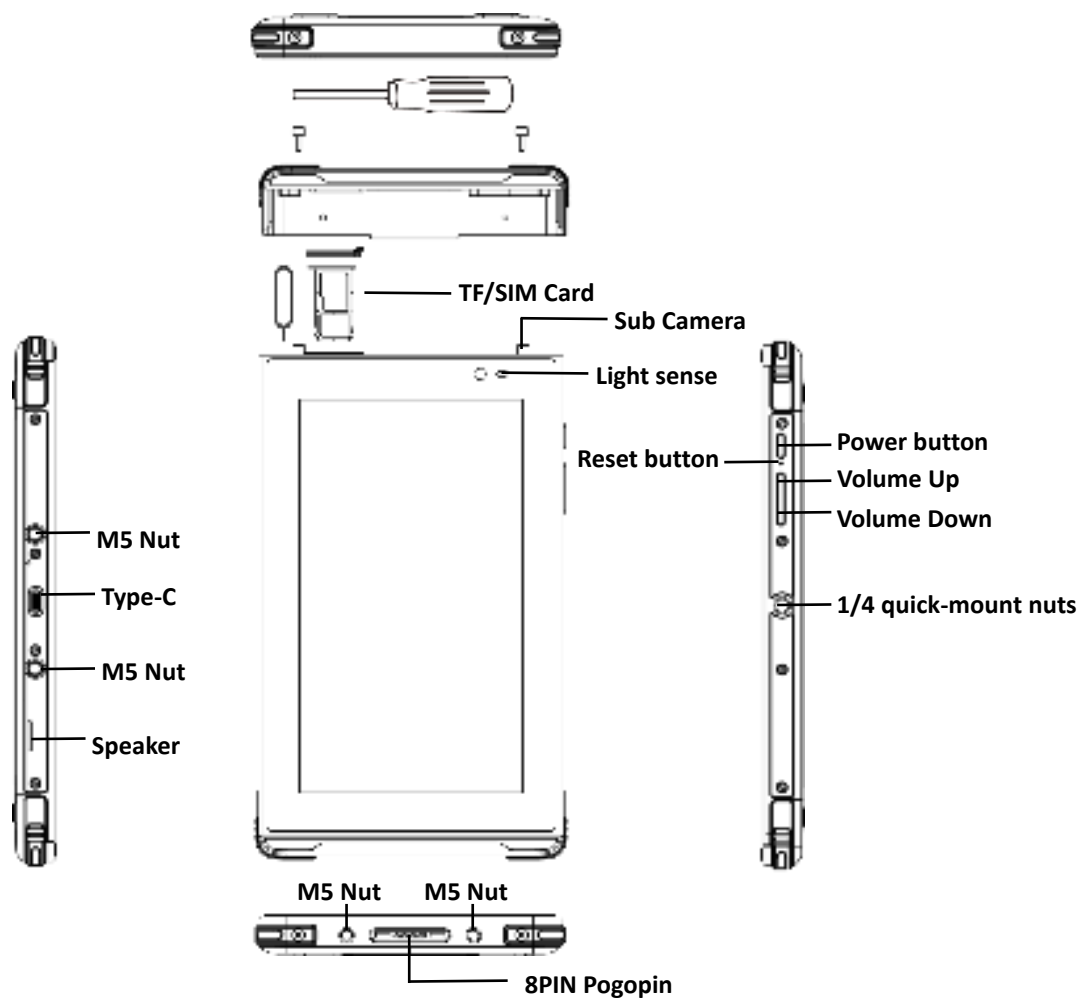

Accessories



**Magnetic
Charging Cable**



Type-C Cable



**Flight Controller
Data Cable**




Hex Wrench



SIM Card Ejector

Comes with the Google™ app and Google Chrome™.
Android is a trademark of Google LLC.

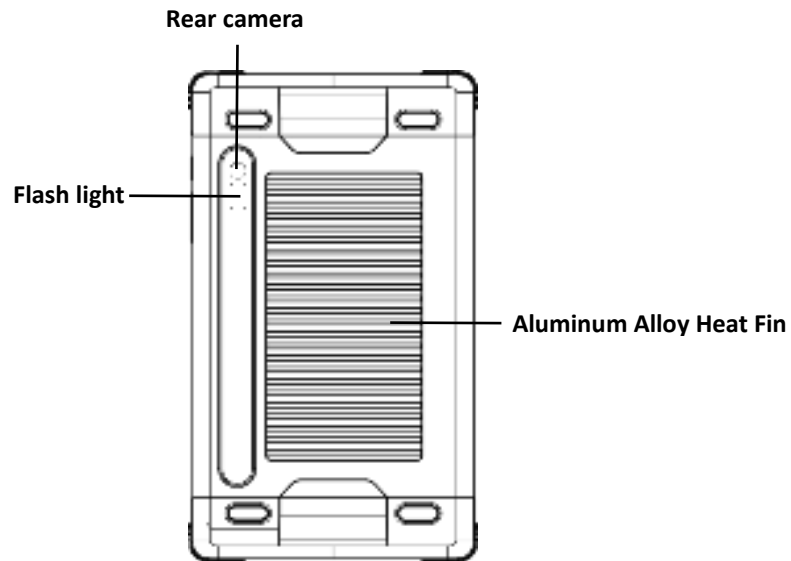

Battery

The device has a built-in battery. You can track your battery using the icon displayed at the top right of the screen.




Warning

- Use only safety-certified battery designed specifically for your device.
- Battery incompatibility can cause serious injury or damage to the device.
- Never place battery or device on heating equipment s such as microwave ovens, stoves or radiators. An overheated battery may cause an explosion.

Comes with the Google™ app and Google Chrome™.
Android is a trademark of Google LLC.

① How to insert the card

For more comprehensive protection of SIM card, the product uses a built-in SIM card slot design to prevent damage. The card slot should always be inserted or removed after the power is turned off. This machine uses Mini SIM card, please be sure to confirm before inserting the card. In particular, the expansion storage TF card must be installed in the shutdown state, otherwise it may cause system problems.

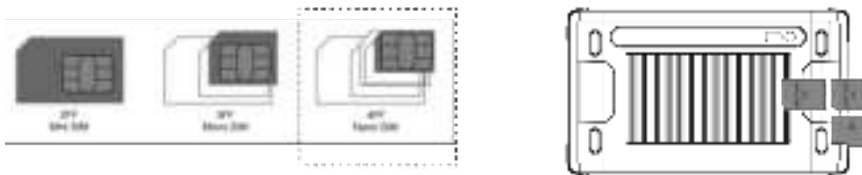

Turn off the power" Open the protective card cover" The screen is placed facing upwards" The SIM/TF card chip or contact is facing down, and the notch is inserted inward into the card slot" Proper insertion will have a clear rebound touch" Push back the card slot.

② How to boot

- A non-removable battery is installed inside the device.
- Long press the power button for 3-5 seconds to start.

③ How to send SMS, MMS

- SMS**
- Open the SMS app
 - Select new information
 - Enter your phone number or browse your contacts
 - Select edit information and enter your text
 - Send ➡

MMS

- When writing text messages, choose to add images, videos or other files you want to add, or even take new photos or videos right away.
- Select or send ➡

Comes with the Google™ app and Google Chrome™.

Android is a trademark of Google LLC.

4 Language switching settings

- Main menu --settings-system setting--language and input method
- Language and input method--language--adding language
- Select the language you need, the system will automatically
- Jump back to the language interface
- Select the icon after the language bar and drag it to the first one.

5 Safety

- The maximum electromagnetic radiation absorption ratio (SAR) of this product is $< 2.0\text{W/kg}$
- In line with the requirements of the national standard
EN 50360:2017; EN 50566:2017; EN62209-1:2016;
EN 62209-2:2010; EN 62479:2010;

6 SAR

**To ensure safe use of the product,
you must strictly abide by the following rules.**

- The device should be at least 15 cm away from any medical implant or adjuster and should never be carried in your coat pocket.
- Don't expose this device and other batteries to high-temperature or heating devices such as sunlight, heaters, microwaves, ovens or water heaters. An overheated battery may cause an explosion.
- When charging is complete or not, the charger should be disconnected from the device and removed from the power outlet. Don't charge the device in an explosive environment.
- The device is equipped with a non-removable battery. Don't replace the battery by yourself to avoid damaging the battery or the device.
- Use of unapproved or incompatible power supplies, chargers or batteries may cause fire, explosion or other hazards. We are not responsible for any accident caused by non-standard charging equipment.
- Don't drop, crush, scratch, or pierce the battery. Otherwise, it may be subjected to excessive external pressure, resulting in internal short circuit and overheating.
- Don't remove or reset the battery, insert other objects and soak in water or other liquids.

Comes with the Google™ app and Google Chrome™.

Android is a trademark of Google LLC.

7 Precautions for battery Maintenance

- When the device is not in use for a long time, the battery capacity shall not be lower than 80%, especially when it is stored in low temperature in winter, and a complete charge and discharge shall be carried out once a month.
- When the battery is lower than 30%, charge it in time. The charging time is generally 4-8 hours. When the charger is not in use, remove it from the power socket.
- Don't connect a permanently charged battery to a charger, as overcharging can shorten battery life. Please handle the device gently when charging and wiring data transmission. Don't operate the device at this time except under special circumstances to avoid short circuit of the socket and damage to the control chip.
- Don't charge the device in a damp, flammable or explosive environment. Reasonable charge and discharge can prolong battery life.

8 Additional notes

- Fully understand the maintenance of the device to use it more safely and efficiently, and extend the service life of the device as far as possible.
- Please follow the instructions in the manual to open the device, remove the accessories, and don't try other methods.
- Please avoid falling, knocking or shaking the device. Rough handling of the device can cause the screen to crack, damaging internal circuit boards and fine construction.
- Don't use chemical solvents or detergents to clean your device.
Wipe the phone case with a soft cotton cloth with water or mild soap.
- Clean lenses (e.g. camera lenses and screens) with a clean, dry and soft cloth.
- If an abnormal fault such as a collision occurs during the use of the device, the solution is as follows: press the power button for more than 12 seconds. The device forcibly restarts (unlocking the device upon restart).
- The touch screen of the device can be used normally in air and fog environment, but the sensitivity will be reduced in rain and snow environment.
- Don't use the device in heavy rain or snow except under special circumstances.
- After using the device in rainy or snowy weather, remove water on the surface and dry it in a cool place.
- In a strong light working environment, change the automatic brightness adjustment to manual brightness adjustment and maximum brightness adjustment. After the maximum brightness adjustment, there will be obvious heating and the working life will be significantly shortened. Please adjust the brightness of the display properly.
- The standard package includes (host, Type-C Data Cable, light Controller Data Cable, Hex Wrench, Introduction manual, Screen protector).

Comes with the Google™ app and Google Chrome™.

Android is a trademark of Google LLC.

⑨ Declaration of conformity

CE

·Use the Rugged tablet in the environment with the temperature between 0°C and 35°C, otherwise, it may damage your Rugged tablet. It can be operating under 2000m.

·Declaration of conformity

·Hereby, Shenzhen SOTEN Technology Co., Ltd equipment type Rugged tablet is compliance with Directive 2014/53/EU.



·The product shall only be connected to a USB interface of version USB2.0 or higher and that the connection to a power USB is prohibited.

·For this device, Body SAR was performed with the device configured in the positions according to EN IEC/IEEE 62209-1528:2021, and Body SAR was performed with the device 0mm from the phantom.

For EU:

Operating Frequency Range	The maximum RF Output Power
GSM 850 / 900 / 1800 / 1900	Max. 2W / Max.1W
UTRA FDD Band I / VIII	0.25W
E-UTRA FDD Band 1 / 3 / 7 / 20	0.2 W
BT 2402 - 2480 MHz	4.97 dBm EIRP
WiFi 2412 - 2472 MHz	17.20 dBm EIRP
GPS 1575.42 MHz	/
GLONASS 1602 MHz	/
BDS1561.098 MHz	/

Comes with the Google™ app and Google Chrome™.

Android is a trademark of Google LLC.

FCC

- NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.
- These limits are designed to provide reasonable protection against harmful interference in a residential installation.
- This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
- However, there is no guarantee that interference will not occur in a particular installation.
- If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- This device complies with Part 15 of the FCC Rules.
- Operation is subject to the following two conditions:
 - (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Comes with the Google™ app and Google Chrome™.

Android is a trademark of Google LLC.

- RF Exposure Information:
- FCC RF Exposure requirements: The highest SAR value reported under this standard during product certification for use next to the Body with the minimum separation distance of 0mm.
- This transmitter must not be collocated or operating in conjunction with any other antenna or transmitter.
- This product is compliance to FCC RF Exposure requirements and refers to FCC website <https://apps.fcc.gov/oetcf/eas/reports/GenericSearch.cfm> search for FCC ID: 2A162-X7.

Comes with the Google™ app and Google Chrome™.

Android is a trademark of Google LLC.



Shenzhen SOTEN Technology Co., LTD

ADD: 10th Floor, 2nd Building, BaiWang Research and development building,
No. 5308 Shahe west road, Xili, Nanshan district, ShenZhen, China

Phone: +86(0755)-61885156 61827963

Fax: +86(0755)-61827963

Web: www.soten.com.cn

FAE: fae@soten.com.cn

Skype: sales.soten

