

品名:	HW1说明书	材料 工艺:	成品尺寸: 100*140mm 双面彩色印刷, 骑马钉 105g哑粉纸
时间:	2020-05-12		
制作:	郜艳丽/王润婷		
料号:	SM-HP-EJ-HW1-V1		


U00000124-000002

Hspro

HW1

Digital Wireless TV Headphones

 User Manual

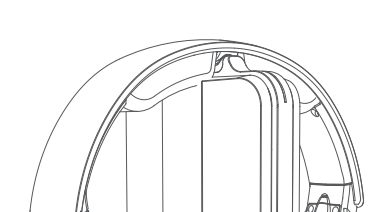

Product Overview

Overview of the Headphones

Volume + Buttons
Volume - Buttons
Signal Indicator
Charging Contacts
Power Button
Power Indicator

How to Turn on/off the Headphones

Power on/off: Press and hold the power button for 2 seconds.

How to Charge the Headphones

1. Connect the charging dock to a power source.

- Place the headphones on the charging dock. Make sure the charging contacts under the headband match all the charging pins on the charging dock.
- The charging indicator on the charging dock will flash green during normal charging status, and it stops flashing and stays green when the headphones are fully charged.

 
Notes:

- Before charging the headphones for the first time, please remove the insulating film under the headband.
- Fully charge the headphones before the first-time using.
- A complete charging cycle takes about 1 hour, and the headphones can play 10 hours on full charge.
- If the battery is almost drained, you will hear beeps in the headphones.


Connect the Transmitter to a TV with RCA Outputs



Connect the power adapter to the transmitter and plug the main charging cable into a power outlet.



 Plug the provided RCA adapter cable into the RCA outputs on the back of the transmitter and plug the 3.5mm audio cable into the 3.5mm audio output on the TV.



Fails

Q: No sound comes from the headphones, what should I do?

A: Check whether the signal light on the transmitter appears red. If not, please try the following:

- Make sure the charging cable is connected to a power source.
- Make sure the headphones have been turned on.
- **Do not plug into any ports labeled as "AV" yet.**
- If you have a 3.5mm audio output on the TV, plug the 3.5mm audio cable into the 3.5mm audio output on the TV. **Do not plug into any audio-ports labeled the "TV" yet.**
- If you have an RCA output on the TV, plug the RCA adapter cable into the RCA output on the TV and plug the 3.5mm audio cable into the 3.5mm audio output on the TV. **Do not plug into any audio-ports labeled the "TV" yet.**
- Please make sure that your audio device is turned on and in play mode, and that the headphones are connected to the TV and that you have not plugged the power adapter into the TV.
- If the signal light on the transmitter is still red, please contact our customer service.

Q: The signal indicator on the transmitter is red, what should I do?

A: The signal does not need enough power. Contact us for help.

Q: The volume is not loud enough, what should I do?

A: Turn up the TV's volume to the maximum level.

Q: Headphones H901 cannot get charged, what should I do?

A: Check whether the charging light on the charging cable is flashing green. If not, please try the following:

- Make sure the charging cable is connected to a power source.
- Make sure the headphones are turned on.
- If you have a 3.5mm audio output on the TV, plug the 3.5mm audio cable into the 3.5mm audio output on the TV. **Do not plug into any audio-ports labeled the "TV" yet.**
- If you have an RCA output on the TV, plug the RCA adapter cable into the RCA output on the TV and plug the 3.5mm audio cable into the 3.5mm audio output on the TV. **Do not plug into any audio-ports labeled the "TV" yet.**

Q: How can I turn on my new headphones H901 when using the transmitter?

A: When a set of the TV's headphones H901 has been successfully paired with the transmitter, the transmitter will automatically turn on the headphones. However, if you have not paired the headphones with the transmitter, you need to turn on the power indicator on the TV and the signal indicator on the transmitter. Then, plug the 3.5mm audio cable into the 3.5mm audio output on the TV. **Do not plug into any audio-ports labeled the "TV" yet.** Then, plug the power adapter into the TV and the main charging cable into the power outlet. The signal indicator on the transmitter will turn on the yellow (charging) when you plug the cable into the transmitter. The signal indicator will turn on the blue (paired) when the headphones are paired with the transmitter.


[illegible]

Hsp

HW1

Casque TV Numérique Sans Fil

 Manuel Utilisateur

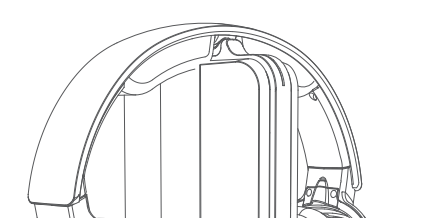

The diagram shows the HW1 wireless TV headset, which consists of a headband with two large, circular ear cups. The headband is adjustable and has a central support structure. The ear cups have a mesh grille. Below the headset, there is a charging station labeled 'Station de Charge (Pouvoir servir d'émetteur)'. To the right of the headset, there are three accessories: 1. 'Casque' (Headset) with a small icon of the headset. 2. 'Adaptateur Secteur' (Power Adapter) with a small icon of the power adapter. 3. 'Câble Adaptateur RCA' (RCA Adapter Cable) with a small icon of the RCA cable. 4. 'Câble Audio 3.5mm' (3.5mm Audio Cable) with a small icon of the 3.5mm audio cable. 5. 'Manuel Utilisateur' (User Manual) with a small icon of the manual.

[illegible][illegible]

Connectez l'émetteur à un téléviseur avec des sorties RCA

Connectez l'émetteur à un téléviseur avec des sorties RCA

Brancher le câble adaptateur RCA. L'adaptateur RCA est livré avec le câble adaptateur RCA. Le câble adaptateur RCA est livré avec le câble adaptateur RCA. Le câble adaptateur RCA est livré avec le câble adaptateur RCA.

FAQ

Q. Pourquoi ne voit-on pas les images, que dois-je faire ?

A. Assurez-vous que la station est chargée correctement et une source d'alimentation. Assurez-vous que la station est chargée.

Q. Les images sont floues, que dois-je faire ?

A. 1. Vérifiez la distance entre la station et le téléviseur. La distance doit être comprise entre 1,5 m et 3 m. 2. Vérifiez la position de la station. La station doit être placée à l'arrière du téléviseur. 3. Vérifiez la position du téléviseur. Le téléviseur doit être placé à l'arrière de la station. 4. Vérifiez la position du câble adaptateur RCA. Le câble adaptateur RCA doit être placé à l'arrière de la station. 5. Vérifiez la position du câble adaptateur RCA. Le câble adaptateur RCA doit être placé à l'arrière de la station.

Q. Pourquoi n'entends-je pas les sons ?

A. 1. Vérifiez la position de la station. La station doit être placée à l'arrière du téléviseur. 2. Vérifiez la position du téléviseur. Le téléviseur doit être placé à l'arrière de la station. 3. Vérifiez la position du câble adaptateur RCA. Le câble adaptateur RCA doit être placé à l'arrière de la station. 4. Vérifiez la position du câble adaptateur RCA. Le câble adaptateur RCA doit être placé à l'arrière de la station.


[illegible]

Hsp^{ro}

HW1

Auriculares inalámbricos para TV

 Manual de Usuario

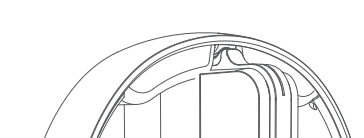

Contenido



Auriculares

➊

Adaptador de Corriente



➋

Cable adaptador HCA



➌

Cable de audio de 3.5 mm



➍

Manual de Usuario



Estación de Carga
(Puede servir como transmisor)

➎

~ 20 ~
~ 21 ~

Presentación del producto

Presentación del casco

Diagrama de un casco de protección auditiva con las siguientes etiquetas:

- Botón Volumen
- Botón Volumen
- Botón Volumen
- LED de Señal
- Botón de Encendido/Apagado
- LED de Encendido
- Conector de Carga

Presentación de la Estación de Carga / Transporter

Pinza de Carga

Diagrama de la estación de carga con tres pinzas de carga y sus componentes etiquetados:

- LED de Señal
- LED de Carga
- Entrada Audio 3.5mm
- Puerto de Carga

- 21 -

Guía de los LEDs

Encendido	LED de encendido en el altavoz derecho se ilumina en rojo.
Apagado	LED no encendido en el altavoz izquierdo se ilumina en naranja.
Señal Baja	El LED de señal en el altavoz izquierdo parpadeará en verde y producirá un pitido cada vez hasta que el altavoz se ponga nuevamente en silencio.
Carga	El LED de carga en la estación de carga parpadeará en verde continuamente.
Carga completa	El LED de carga en la estación de carga permanecerá verde.
Conectado	El LED de señal de la estación de carga permanecerá en rojo, lo que indica que se está recibiendo energía desde el altavoz / cargador de la estación de carga.

Cómo Encender / Apagar el Auricular

Encendido / Apagado: Mantenga presionado el botón de encendido durante 2 segundos.

Cómo Cargar el Auricular

1. Conecte la estación de carga a una fuente de corriente.

Diagrama de la estación de carga conectada a una fuente de corriente.

- 21 -

[illegible][illegible][illegible]

Profilbericht

Übersicht der Kopfhörer

Labels in diagram: Lautsprecher, Ein-/Aus-Taste, Lautsprecherhalter.

Handbuch für LED-Anzeige

Einschalten:	Die Leuchtdiode leuchtet an der rechten Ohrmuschel hell rot.
Ausstellen:	Die Leuchtdiode leuchtet an der rechten Ohrmuschel nicht.
Neuige Batterien einbauen:	Die Signalanlage an der linken Ohrmuschel ist grün und die Leuchte der Leuchtdiode leuchtet hell rot, bis die Leuchte hell rot leuchtet.
Aufladen:	Die Leuchtdiode an der Leuchtdiode leuchtet hell rot.
Vollständig aufgeladen:	Die Leuchtdiode an der Leuchtdiode leuchtet grün.
Verbinden:	Die Signalanlage an der Leuchtdiode und die Leuchtdiode an der Leuchtdiode leuchtet hell rot bis die Leuchte hell rot leuchtet.

Wie an ein Headset mit der Leuchtdiode

Ein-/Aus-Schalter: Drücken Sie den Schalter 2 Sekunden lang gedrückt.

Wie an aufladen die Leuchtdiode

1. Schließen Sie die Leuchtdiode an eine Stromquelle an.

2. Stecken Sie die Kopfhörer auf die Lautsprecher. Stellen Sie sicher, dass die Lautsprecher mit einem Kopfhörer gut und mit den Lautsprecherbuchsen an der Lautsprecherbox verbunden sind.
3. Die Lautsprecher der Lautsprecherbox sollten vollständig geladen sein, sobald die Lautsprecherbox beginnt, den Ton auf zu fassen und abzuspielen, wenn die Kopfhörer vollständig aufgeladen sind.

Hinweis:

1. Wenn der Ton aus den Kopfhörern entnommen wird, ist die Lautstärke von den Kopfhörern.
2. Stellen Sie die Lautstärke von der Lautsprecherbox vollständig auf 0.
3. Wenn die Lautsprecherbox vollständig aufgeladen ist, werden die Kopfhörer mit dem Lautsprecherbox verbunden und die Lautsprecherbox kann mit der Lautsprecherbox verbunden werden.
4. Wenn die Lautsprecherbox nicht geladen ist, stellen Sie die Lautsprecherbox.

[illegible][illegible]

Die Verwendung der Kopfhörer kann Befehre von anderen Fahrzeugen, Hörgeräten, Warnschallgeräten oder anderen Tönen gefährdend sein, die an anderen Stellen ertönen. Wenn Sie die Verwendung der Kopfhörer mit beiden Händen nicht beenden, können Sie die Aufmerksamkeit von der Straße ablenken und die Gefahr eines Unfalls erhöhen. Wenn Sie die Handbremse betätigen, kann dies zu einer weiteren Beschädigung der Handbremse führen. Wenn Sie die Handbremse betätigen, um das Fahrzeug zu stoppen, sollten Sie die Handbremse nicht zu stark betätigen, da dies zu einer Beschädigung der Handbremse führen kann. Wenn Sie die Handbremse betätigen, um das Fahrzeug zu stoppen, sollten Sie die Handbremse nicht zu stark betätigen, da dies zu einer Beschädigung der Handbremse führen kann.	FCC ID: 280545H1 Notes: This equipment has been tested and found to comply with the parts C, B and Digital codes, in accordance with section 15 of the FCC rules. Operation of this equipment may cause interference with other licensed equipment operating on the same frequency in a residential installation. This equipment may cause interference with other licensed equipment, but it is not intended to be used in conjunction with other licensed equipment. It is not intended to be used in conjunction with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: • Reorient or relocate the receiving antenna. • Increase the separation between the equipment and receiver. • Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. • Consult the dealer or an experienced radio/TV technician for help. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undue frequency energy.
--	--