


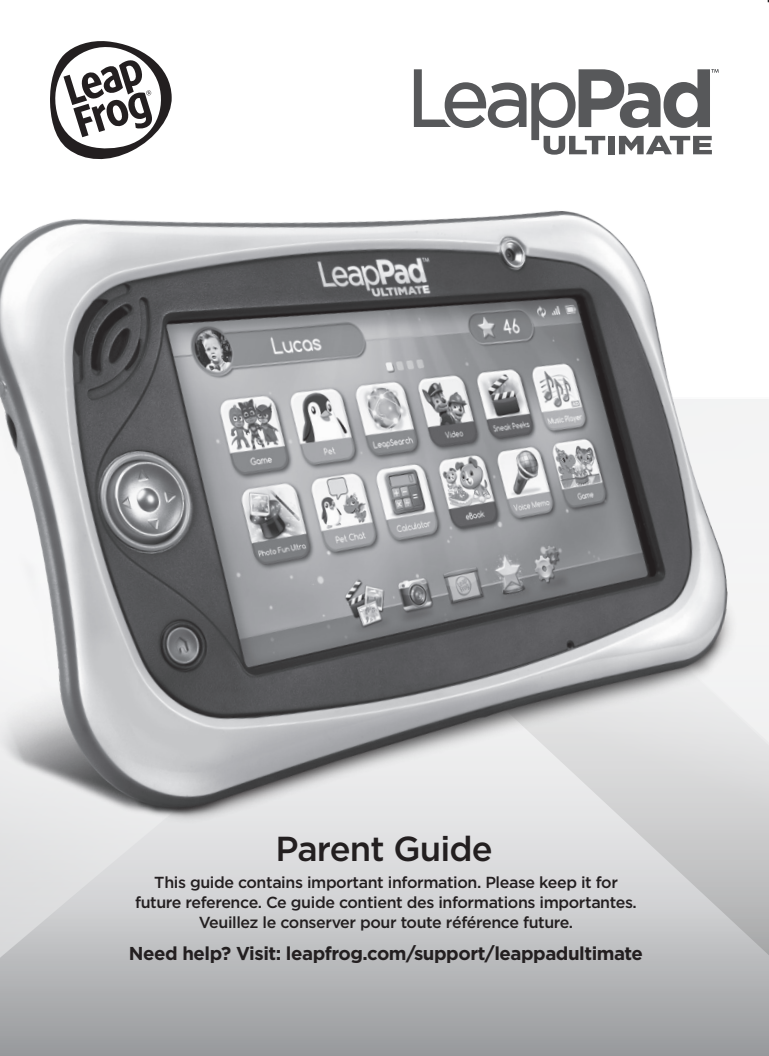


LEAPPAD™ Ultimate Quick Start Guide

Get started in 5 easy steps

- 1 **Power Up and turn on your LEAPPAD™ Ultimate tablet with the included AC adapter.***
- 2 **Set Up your device by following the on-screen prompts to connect to Wi-Fi.****
- 3 **Register your device by creating a LeapFrog Parent Account.**
- 4 **Download your included apps. (Only available via Wi-Fi set-up)**
- 5 **Play & Learn! Your LEAPPAD™ Ultimate tablet is now ready for play.†**

LEAPPAD™ Ultimate Features

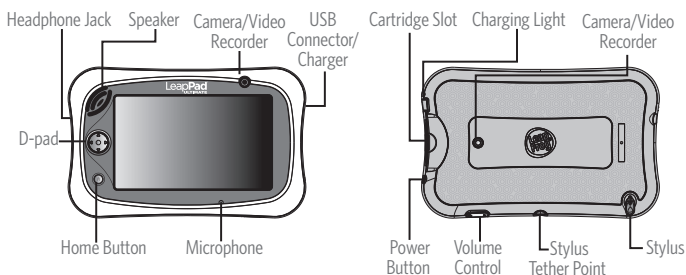

*Registration and setup can continue while charging—charging may take up to 5 hours. **For non-Wi-Fi USB setup, see end of Guide. †Full setup may take 20 minutes or longer depending on Wi-Fi speed.

- The power adapter enclosure has become damaged.
- You suspect the power adapter needs service or repair.
- The external flexible cord of this transformer cannot be replaced; if the cord is damaged, the transformer should be scrapped.
- The toy is only to be connected to Class II equipment bearing the following symbol .
- **To clean AC Adapter**, disconnect it from the wall and clean with a cloth dampened with water. Do not immerse in water or use soap or other chemicals. Allow to dry before reusing. Do not connect to the AC outlet if wet or damaged.
- This AC adapter can be used to recharge the single cell Li-Poly battery of the LEAPFROG® LEAPPAD™ Ultimate device (3.7Vdc, 3500mAh).

WARNING: DO NOT recharge non-rechargeable batteries.

For Europe - The toy must be used with a transformer for toys.

AC Adapter Electrical Ratings: Input: ~ 120VAC, 60Hz (for US); ~ 230VAC, 50Hz (for UK or EU); ~ 240VAC, 50Hz (for AS/NZL) Output:  DC5V, 1.5A, 7.5VA

Informations importantes de sécurité :

ATTENTION : Veuillez lire toutes les informations importantes de sécurité avant d'utiliser le LEAPPAD™ Ultimate. Ne pas appliquer ces consignes peut engendrer des risques d'incendie, d'électrocutions, autres blessures ou dommages au LeapPad Ultimate ou autres.

ACCESSOIRES : Lisez les instructions pour les accessoires ou tout autre produit avant de les utiliser avec le LeapPad Ultimate. LeapFrog n'est pas responsable pour les accessoires vendus par d'autres fabricants et leurs standards de sécurité.

ATTENTION : Vérifiez régulièrement que ce jouet est en bon état et qu'il ne présente pas de danger. Dans le cas contraire (par exemple, s'il est cassé à certains endroits), tenez ce jouet hors de portée des enfants.

ATTENTION : L'adaptateur ou le câble USB peuvent provoquer un risque d'étranglement. Ne convient pas aux enfants de moins de 3 ans.

Parent Settings

Control your child's play with these interactive LEAPPAD™ Ultimate tablet features:

- Wireless settings — Control connection setup and access to LeapFrog-defined online experiences.
- Child profile — Easily manage permissions and profile information or add a new profile.
- Peer-to-peer settings — Control how your child plays with other children when two wireless LEAPPAD™ tablets are in close proximity to one another via local ad hoc Wi-Fi network. (See Local Communications below for more information.)
- App Center/Centre — Parents can purchase digital content directly from the device with a Parent Account password. Control your child's access to the App Center/Centre, where they can watch trailers and create a wish list. Parents can choose whether children may view pricing and buy buttons.
- Time Management — Control the amount of time your child spends on the device.
- Device Settings — Manage settings like language, time, date and more.

Access to Parent Settings is protected by a 4-digit parent lock code that must be established during initial setup. Parent Settings can be accessed from the Sign-In screen by pressing the Parent Settings icon to log in with your parent lock. Alternatively, you can log in via the Settings icon on the Home Bar of the child's Home Screen.

Forgetting or resetting your Parent Lock

If you have forgotten your 4-digit parent lock code you can look it up in the leapfrog.com Parent Account you created during device setup and registration. If you need to reset your parent lock, you can do it from the device or reference the FAQ section at leapfrog.com/support/leappadultimate for more information.

ATTENTION : Si pour quelque raison que ce soit, l'écran (d'affichage) est brisé ou fendu, mettez immédiatement ce produit hors de portée des enfants.

PROTÉGEZ VOTRE OÛIE : Une exposition durable à des sonorités trop fortes peut entraîner une perte définitive de l'ouïe. Lorsque vous utilisez le casque ou les écouteurs bouton, il est conseillé de baisser le volume et réduire le temps d'écoute. Réglez le son lorsque vous êtes dans un endroit calme et baissez-le si vous n'entendez pas les personnes qui parlent autour de vous. Limitez le temps d'écoute à 90 minutes, puis accordez-vous un moment de tranquillité. Plus le volume est élevé, plus il y a de chances que votre ouïe soit rapidement touchée. En cas de bourdonnement dans les oreilles ou si vous entendez des voix sourdes, arrêtez immédiatement d'écouter ce produit et faites contrôler votre ouïe dans les plus brefs délais.

PROTÉGEZ LE CORPS : CONSIDÉRATIONS ERGONOMIQUES : Lorsque vous utilisez une tablette, il est possible que la répétition de certains gestes ou le fait de maintenir une certaine position pendant une longue période de temps peut entraîner une sensation d'inconfort dans les mains, le cou, les épaules ou d'autres parties du corps. Vous pouvez réduire cette sensation d'inconfort et les lésions causées par les gestes répétitifs en utilisant la tablette dans une position confortable et en faisant des pauses de 10 à 15 minutes toutes les heures. Si vous éprouvez une sensation d'inconfort prolongée, cessez l'utilisation et consultez un médecin.

ATTENTION : Maintenez l'appareil à une distance d'au moins 15 cm d'un stimulateur cardiaque et autres appareils médicaux similaires qui peuvent être sensibles aux consoles qui contiennent des aimants et émettent des champs électromagnétiques

ATTENTION : N'utilisez jamais la tablette en faisant du vélo ou en étant sur une machine ou un jeu mécanique.

ATTENTION : Il est rare mais possible que les lumières clignotantes ou les formes provoquent des crises d'épilepsies. Jouez/regardez dans une pièce bien éclairée et prenez des poses de 10 à 15 minutes toutes les heures.

Remplacement des piles

Local Communications

Peer-to-peer gameplay uses limited communication features to permit direct connections between two wireless LEAPPAD™ tablets that are in close proximity to one another, using a local Wi-Fi ad hoc network. Your child is not playing on the Internet. Instead, peer-to-peer enabled LEAPPAD tablets use local Wi-Fi connections like an antenna – allowing play between LEAPPAD tablets that are near each other (for example, within 100 feet/approx. 30 metres unobstructed or less, depending on the strength of the local network – obstructions such as walls can significantly reduce the operating range). Both users must own copies of the same game in order to play together. Some peer-to-peer games allow users to share information with and receive information from the other player. The peer-to-peer feature can be activated or disabled using the Parent Settings screen on the tablet.

Operating Instructions

Wi-Fi connection support. If you experience any difficulty with Wi-Fi connectivity, troubleshooting suggestions are available at leapfrog.com/support

For indoor, dry-location use only. Do not use the product near a sink or other wet locations. Take care not to spill food or any kind of liquid on this product as it may render it inoperable and not serviceable. In case the unit does get wet, unplug all cables and turn it OFF. Allow to dry thoroughly before reusing. Do not attempt to dry with a hair dryer or other heat source. Do not re-connect to the AC outlet if wet or damaged.

Avoid prolonged exposure to extreme temperatures and direct sunlight. Operate in places with temperatures ranging from 5°C (40°F) and 38°C (100°F). Do not leave the product in your car as the temperatures in parked cars can exceed the acceptable storage temperature. Exposure to extreme temperatures can result in shortened battery life or cause the product to temporarily stop working.

Handle with care. To avoid injury, damage to this product or other property, avoid dropping and never disassemble, crush, puncture, microwave, incinerate, insert foreign objects or paint the product. Clean your hands before handling the product if they have been exposed to suntan lotions or other chemicals.

Cleaning. Disconnect all cords before cleaning. Clean the product with a slightly damp cloth (cold water). Do not use soap, detergent or other chemicals. Never submerge the unit in water. Allow to dry thoroughly before re-use.

Do not connect to the AC wall outlet if wet or damaged.

ATTENTION : La pile rechargeable lithium ne peut être retirée de ce produit. Pour votre sécurité, n'essayez jamais de retirer la pile. Si vous avez des problèmes concernant la pile ou la batterie de votre produit, veuillez contacter le service client LeapFrog. Les coordonnées sont disponibles à leapfrog.com/support

Recharger les piles

LEAPPAD™ Ultimate est équipé d'une pile lithium-polymère. Branchez-le avec l'adaptateur pendant 4 heures avant de l'utiliser. Le recharger avec un ordinateur prendra plus de temps.

ATTENTION : L'adaptateur et le cordon USB peuvent constituer un risque d'étranglement. Ils ne doivent pas être utilisés par les enfants de moins de 3 ans

ATTENTION : Ne convient pas aux enfants de moins de 36 mois. L'utilisation inadaptée de l'adaptateur peut causer une électrocution.

ATTENTION : La pile ne doit être chargée que par un adulte ou enfants de plus de 8 ans sous la supervision d'un parent exclusivement. Vous pouvez recharger la pile en utilisant l'adaptateur ou en connectant le produit à votre ordinateur avec le câble USB fournis. Nous recommandons l'utilisation de ceux inclus.

Instructions opérationnelles

Connexion Wi-Fi. Si vous avez des difficultés à vous connecter à votre connexion Wi-Fi, des aides sont disponibles en ligne à LeapFrog.com/support

A utiliser uniquement en intérieur, dans un endroit sec. Ne pas utiliser le produit près d'un lavabo ou autres sources d'eau. Faites attention à ne pas renverser de nourriture ou tout autre sorte de liquide sur ce produit car cela pourrait le rendre inopérational et inutilisable. Si vous renversez du liquide sur le produit, débranchez tous les câbles et éteignez-le. Laissez le produit sécher complètement avant de le réutiliser. N'essayez pas de le sécher avec un sèche-cheveux ou tout autre source de chaleur. Ne pas rebrancher le produit à l'adaptateur si celui-ci est humide ou abimé.

Important Safety Instructions:

ATTENTION : Please read all the Important Safety Instructions prior to using LEAPPAD™ Ultimate. Failure to follow these safety instructions could result in fire, electric shock, or other injury or damage to LeapPad Ultimate tablet or other property.

CAUTION: Never use the tablet while riding a bicycle or operating mechanical games or machinery.

CAUTION: PROTECT YOUR BODY. ERGONOMIC CONSIDERATIONS: When using a tablet device, it is possible that repetition of certain motions or remaining in certain positions over for long periods of time may cause discomfort in the hands, neck, shoulders, or other parts of the body. Reduce risk of discomfort and repetitive motion injuries by using the tablet in a comfortable position and taking a 10 to 15 minute break every hour. If you experience any injury or ongoing discomfort, stop use and see a physician.

CAUTION: Keep the device at least 6" (15cm) away from pacemakers and other similar medical devices that may be sensitive to devices that contain magnets and emit electromagnetic fields.

ACCESSORIES: Please read all safety instructions for any accessories or other products before using with the LEAPPAD™ Ultimate tablet. LeapFrog is not responsible for the operation of third-party accessories or their compliance with safety and regulatory standards.

CAUTION: Routinely check this toy for proper and safe condition. If there is any damage or broken parts, remove toy from use.

WARNING: The AC Adapter or USB cords could be a strangulation hazard. Not for children under 3 years.

CAUTION: If for any reason the screen (display) is fractured or cracked, immediately remove this product from use.

PROTECT YOUR HEARING: Long-term exposure to loud sounds, at high volume, may result in permanent hearing loss. When using headphones or ear buds, it is recommended that the product is listened to at lower volumes for shorter periods of time. Set the volume while in a quiet environment; turn the volume down if you cannot hear people speaking near you. Limit the listening time to 90 minutes, followed by a quiet period. The louder the volume, the less

Évitez d'exposer le produit à des températures extrêmes ou aux rayons du soleil. Utilisez le produit quand la temp rature se trouve entre 5°C (40°F) et 38°C (100°F). Ne pas laisser le produit dans votre voiture car les voitures garées peuvent excéder les températures pour assurer le bon fonctionnement de votre produit. Exposer ce produit à des températures extrêmes peut diminuer la durée de vie des piles ou peut entraîner l'arrêt de votre produit.

A utiliser soigneusement. Pour éviter toutes blessures, dommages ou autres, évitez de le faire tomber et ne jamais le démonter, casser, trouer, mettre aux micro-ondes, bruler, incérer un objet ou peindre le produit. Lavez vos mains avant de manipuler le produit si celles-ci ont été en contact avec de la crème solaire ou autres produits chimiques.

Pour nettoyer. Débranchez le produit de tous ces câbles. Nettoyez le produit avec un chiffon légèrement humide (eau froide). N'utilisez pas de savon, de lessive ou autres produits chimiques. Ne jamais immerger le produit dans l'eau.

Ne pas brancher à une prise si le produit est humide ou endommagé.

Indication de chargement de la pile

Quand la pile se recharge, l'indicateur LED est jaune. Quand la pile est totalement chargée, l'indicateur devient vert. L'indicateur ne fonctionnera pas si le produit n'est pas connecté au câble USB ou s'il ne charge pas.

Chargez l'appareil dans un endroit bien aéré seulement. Pendant le chargement de l'appareil ne le couvrez pas avec quelque chose comme une couverture, un oreiller ou même le corps de votre enfant). Ne laissez jamais votre enfant dormir avec l'appareil en cours de chargement.

Réparer ou modifier LEAPPAD™ Ultimate

N'essayez jamais de réparer ou modifier le LeapPad Ultimate – car celui-ci ne contient aucune pièce qui peut être réparée individuellement. Toute aide doit être faite par LeapFrog Enterprises, Inc.

Si le produit a été en contact avec du liquide, troué, ou victime d'un impact fort ou est tombé, arrêter son utilisation immédiatement et contactez le service client LeapFrog.

time required before your hearing may be affected. If you experience ringing in your ears or hear muffled speech, stop listening and have your hearing checked.

Note : Maximum output voltage ≤ 150mV

WARNING: It is rare but possible for seizures to be triggered by light flashes or patterns. Play/watch in a well-lit room and take 10- to 15-minute breaks every hour.

Battery Replacement

WARNING: The lithium rechargeable battery cannot be removed from the product. For your safety, never try to remove the battery. For power or battery issues, please contact LeapFrog customer support. Contact information for your local support is available at leapfrog.com/support

Battery Charging

The LeapPad Ultimate tablet is equipped with a rechargeable lithium-polymer battery. It will require about 5 hours of charging using the included AC power adapter prior to first use. Attempting to charge via connection to the computer will take much longer.

CAUTION: The battery is only to be charged by adults or children 8+ years of age under the full supervision of parents. You can charge the battery by using either the included AC power adapter or connecting the provided USB cord to your computer. We recommend using the provided AC power adapter.

Battery Charging in Progress Indication

When the battery is charging, the charge indicator LED will be yellow. When fully charged, it will turn green. It will be OFF if not connected via USB or if not charging.

Charge the device in a well-ventilated area only. While charging the device do not cover it with anything such as a blanket, pillow or your child's body. Never allow your child to sleep with or on the device while it is charging.

Repairing or Modifying LEAPPAD™ Ultimate

Never attempt to repair or modify the LEAPPAD™ Ultimate tablet. Contains no user-serviceable parts. Service should only be provided by LeapFrog Enterprises, Inc.

Informations de sécurité pour l'adaptateur

ATTENTION : Utilisez uniquement l'adaptateur recommandé (transformateur) pour recharger la pile. (Note : le mot transformateur est, des fois, remplacé par le mot adaptateur.) Utilisez uniquement l'adaptateur fourni.

ATTENTION : Ne convient pas aux enfants de moins de 3 ans. Une utilisation inappropriée du transformateur (adaptateur) peut causer un risque d'électrocution.

• L'adaptateur doit être branché à la prise murale par un adulte ou un enfant de plus de 8 ans uniquement.

• Ce transformateur n'est pas un jouet, et son utilisation doit être faite uniquement sous la présence d'un adulte.

• Comme avec tous produits électriques, des précautions doivent être utilisées pour éviter des électrocutions.

• Le transformateur peut chauffer pendant son utilisation normale. Vérifiez que la ventilation est adaptée et faites attention quand vous utilisez ce produit.

• Ne branchez ou débranchez pas le produit avec des mains mouillées.

• Le transformateur doit être vérifié régulièrement (les lames, la prise, la prise murale et tout autre pièce) car si celui-ci est endommagé, il peut être un risque d'incendie, d'électrocution ou autres blessures. Si celui-ci est abimé, arrêtez de l'utiliser immédiatement et attendez que celui-ci soit réparé avant de le réutiliser. Le câble de cet adaptateur ne peut pas être remplacé, si le câble est abimé, jetez le transformateur en suivant les règles de recyclage de votre région.

Débranchez l'adaptateur (transformateur) si l'une de ces conditions existe :

- Le câble, la prise ou le câble USB est abimé ou cassé.
- Le câble, la prise ou le câble USB sont exposés à la pluie, à du liquide ou une humidité excessive.
- La boîte de protection de l'adaptateur est abimée.
- Si vous pensez que l'adaptateur a besoin d'être réparé.

Débranchez le LEAPPAD™ Ultimate de l'adaptateur avant de le nettoyer.

- Pour nettoyer l'adaptateur, débranchez-le de la prise murale et nettoyez-le avec un chiffon légèrement humide. Ne l'immergez pas dans l'eau, n'utilisez pas de savon ou autres produits chimiques. Laissez le produit sécher avant de le réutiliser. Ne pas brancher l'adaptateur si celui-ci est mouillé ou abîmé.

- Ce jouet doit être utilisé avec un adaptateur pour jouets. Cet adaptateur doit exclusivement être utilisé pour recharger la pile Li-Poly de la tablette LeapPad Ultimate LeapFrog (3.7Vdc, 4000mAh).

ATTENTION : NE PAS RECHARGER des piles non rechargeables.

Pour l'Europe, ce jouet doit être utilisé avec un adaptateur pour jouets. Caractéristiques électriques de l'adaptateur secteur : Voltage d'entrée 120 VAC, 60 Hz (pour les États-Unis et Canada); 230 VAC, 50 Hz (Pour le Royaume-Uni et l'Europe); 240 VAC, 50Hz (pour l'Australie et la Nouvelle Zélande). Voltage de sortie : DC5V, 1.5A, 7.5VA.

Exposure to Radio Frequency Energy

LeapPad Ultimate contains a radio transmitter and receiver. When powered ON, the LeapPad Ultimate tablet sends and receives radio frequency (RF) energy through its internal antenna. The exposure requirements use units of measurement termed SAR (specific absorption rate). The LEAPPAD™ Ultimate tablet has been tested and found to meet the SAR exposure requirements for Wi-Fi operation as established by FCC, IC, and European Union guidelines. The LeapPad Ultimate tablet has been tested when positioned at 0 mm from the body, without any metal parts in the vicinity of the LeapPad Ultimate tablet and when properly used with an appropriate LEAPFROG™ Accessory.

FCC Compliance Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Declaration of Conformity	
Trade Name	: LeapFrog
Model	: 6020
Responsible party	: Leapfrog Enterprises, Inc.
Address	: 6401 Hollis Street, Suite 100, Emeryville, CA 94608
Telephone Number	: 510-420-5000

Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Program. In addition, mere aggregation of another work not based on the Program with the Program (or with a work based on the Program) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

3. You may copy and distribute the Program (or a work based on it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you also do one of the following:

- Accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
- Accompany it with a written offer, valid for at least three years, to give any third party, for a charge no more than your cost of physically performing source distribution, a complete machine-readable copy of the corresponding source code, to be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
- Accompany it with the information you received as to the offer to distribute corresponding source code. (This alternative is allowed only for noncommercial distribution and only if you received the program in object code or executable form with such an offer, in accord with Subsection b above.)

The source code for a work means the preferred form of the work for making modifications to it. For an executable work, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the executable. However, as a special exception, the source code distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

If distribution of executable or object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place counts as distribution of the source code, even though third parties are not compelled to copy the source along with the object code.

4. You may not copy, modify, sublicense, or distribute the Program except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense or distribute the Program is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications to this unit not expressly approved by LeapFrog could void the EMC and wireless compliance and void the user's authority to operate the equipment. This product demonstrated EMC compliance using compliant peripheral devices and shielded cables between system components. It is important that you use compliant peripheral devices and shielded cables to reduce the possibility of causing interference to radios, televisions, and other electronic devices.

USB Cable

The USB cable provided with this product complies with FCC and other regulatory Emission limits. If using other than the provided USB cable, please note that in order not to exceed FCC and other regulatory emissions limits, a shielded cable must be used.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- this device may not cause interference, and
- this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- l'appareil ne doit pas produire de brouillage, et
- l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Canadian Compliance

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement. CAN ICES-3 (B)/NMB-3(B)

Certification and Compliance	
U.S. Model: 6020	 FCC ID: G2R-6020
Canada Model: 6020	IC: 1135D-6020
E.U.	  

EU Declaration of Conformity

Hereby, LeapFrog Enterprises, Inc. declares that the radio equipment type 6020 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address : www.leapfrog.com/en-gb/legal/eudoc

Environmental Phenomena

The unit may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power OFF and then back ON.

incorporates the limitation as if written in the body of this License. 9. The Free Software Foundation may publish revised and/or new versions of the General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns. Each version is given a distinguishing version number. If the Program specifies a version number of this License which applies to it and "any later version", you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Program does not specify a version number of this License, you may choose any version ever published by the Free Software Foundation. 10. If you wish to incorporate parts of the Program into other free programs whose distribution conditions are different, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally. 11. BECAUSE THE PROGRAM IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION. 12. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by turning the power OFF by holding the Power Button for 10 seconds until the unit turns off, then press and hold the Power Button for 3 seconds to turn on the unit again.

Recycling

For information on how this product might be recycled, visit leapfrog.com/recycle or call (800) 701-5327. UK Consumer Support: +44 (0)1702 200244. <http://www.leapfrog.com/en-gb/support/ewaste>

Copyrighted Software

Certain software included in this product contains copyrighted software that is licensed under the General Public License (GPL). A copy of that license is included at <http://www.leapfrog.com/en-us/legal/open-source.html>

Anyone may obtain from us the complete corresponding source code for the software covered by the GPL for a period of three years after our last shipment of this product by contact our Customer Service team at leapfrog.com/support Please write "GPL source code for LeapPad Ultimate" in the subject line of your email. We reserve the right to charge a reasonable fee to cover the costs of shipping and the physical media on which the source code is loaded.

**For non-Wi-Fi setup, use the included USB cable and install the LeapFrog Connect Application onto your computer. Go to leapfrog.com/connect to download.

 To prevent possible hearing damage, do not listen at high volume levels for long periods.

Pour éviter des problèmes d'ouïe possible, n'utilisez pas les niveaux sonores élevés pendant une période prolongée.

GNU GENERAL PUBLIC LICENSE

Version 2, June 1991
Copyright (C) 1989, 1991 Free Software Foundation, Inc., 51 Franklin Street, Fifth Floor, Boston, MA 02110-1301 USA Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

Preamble

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public License is intended to guarantee your freedom to share and change free software--to make sure

the software is free for all its users. This General Public License applies to most of the Free Software Foundation's software and to any other program whose authors commit to using it. (Some other Free Software Foundation software is covered by the GNU Lesser General Public License instead.) You can apply it to your programs, too.

When we speak of free software, we are referring to freedom, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish), that you receive source code or can get it if you want it, that you can change the software or use pieces of it in new free programs; and that you know you can do these things.

To protect your rights, we need to make restrictions that forbid anyone to deny you these rights or to ask you to surrender the rights. These restrictions translate to certain responsibilities for you if you distribute copies of the software, or if you modify it.

For example, if you distribute copies of such a program, whether gratis or for a fee, you must give the recipients all the rights that you have. You must make sure that they, too, receive or can get the source code. And you must show them these terms so they know their rights.

We protect your rights with two steps: (1) copyright the software, and (2) offer you this license which gives you legal permission to copy, distribute and/or modify the software.

Also, for each author's protection and ours, we want to make certain that everyone understands that there is no warranty for this free software. If the software is modified by someone else and passed on, we want its recipients to know that what they have is not the original, so that any problems introduced by others will not reflect on the original authors' reputations. Finally, any free program is threatened constantly by software patents. We wish to avoid the danger that redistributors of a free program will individually obtain patent licenses, in effect making the program proprietary. To prevent this, we have made it clear that any patent must be licensed for everyone's free use or not licensed at all.

The precise terms and conditions for copying, distribution and modification follow.

GNU GENERAL PUBLIC LICENSE

TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION 0. This License applies to any program or other work which contains a notice placed by the copyright holder saying it may be distributed under the terms of this General Public License. The "Program", below, refers to any such program or work, and a "work based on the Program" means either the Program or

any derivative work under copyright law: that is to say, a work containing the Program or a portion of it, either verbatim or with modifications and/or translated into another language. (Hereinafter, translation is included without limitation in the term "modification".) Each licensee is addressed as "you". Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running the Program is not restricted, and the output from the Program is covered only if its contents constitute a work based on the Program (independent of having been made by running the Program). Whether that is true depends on what the Program does. 1. You may copy and distribute verbatim copies of the Program's source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and give any other recipients of the Program a copy of this License along with the Program. You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee. 2. You may modify your copy or copies of the Program or any portion of it, thus forming a work based on the Program, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:

- You must cause the modified files to carry prominent notices stating that you changed the files and the date of any change.
 - You must cause any work that you distribute or publish, that in whole or in part contains or is derived from the Program or any part thereof, to be licensed as a whole at no charge to all third parties under the terms of this License.
 - If the modified program normally reads commands interactively when run, you must cause it, when started running for such interactive use in the most ordinary way, to print or display an announcement including an appropriate copyright notice and a notice that there is no warranty (or else, saying that you provide a warranty) and that users may redistribute the program under these conditions, and telling the user how to view a copy of this License. (Exception: if the Program itself is interactive but does not normally print such an announcement, your work based on the Program is not required to print an announcement.)
- These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Program, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Program, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it.

TM & © 2017 LeapFrog Enterprises, Inc. All rights reserved. leapfrog.com/leappad

Recommended for children ages 3-9 years.
Convient aux enfants de 3 à 9 ans.

LEAPPAD™ Ultimate
Model: 6020

LeapFrog Enterprises, Inc.

6401 Hollis Street, Suite 100
Emeryville, CA 94608
(800) 701-LEAP (5327)

