 


High Definition Action Cam




User Guide EVC600

In the Box

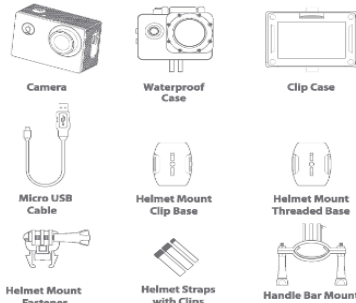

Location of Controls

- (Top)
1. [OK] Button
2. LED Indicator
(Front)
3. [O / Mode] Button
(Left Side)
4. Microphone
5. Micro SD Card Slot
6. Micro USB Port
- (Right Side)
7. [A /] Button
8. Speaker
9. [W /] Button
(Back)
10. LCD Screen
- (Bottom)
11. Battery Cover
12. Battery Cover Lock

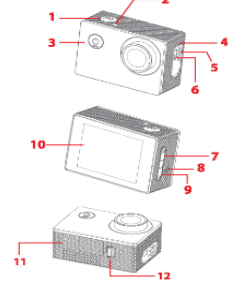


Installing the Micro SD Card

NOTE: For normal operation, use at least a class 4 micro SD card.

Turn the camera OFF if it is not, already. Insert the micro SD card into the micro SD slot on the left side of the camera with the metal contacts facing out. The micro SD card will ONLY FIT IN ONE WAY. If it does not slide in smoothly, remove and flip the card around. Press firmly until the card clicks into place.


NOTE: If you install the card and a message appears stating "NO CARD", you may need to format the micro SD card. Please see the "Format" option in the "Settings" menu later in this manual.

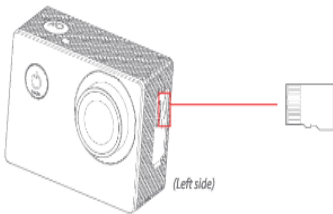

i When installing/using for the first time, you may need to format the card. Formatting WILL ERASE ANY EXISTING STORED PHOTOS/VIDEOS ON THE CARD. Please consult the Settings Menu section of this user guide before formatting a micro SD card.


Charging the Camera

To charge the camera, attach the small end of the supplied micro USB cable to the micro USB port and attach the larger end to the USB port on your computer or USB adaptor. The LED indicator will turn RED while charging and turn OFF when charged.

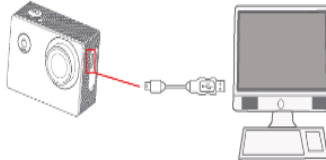

Removing The Battery

To remove the battery, slide the battery pack switch and remove the lid on the bottom of the camera. Slide the battery out.

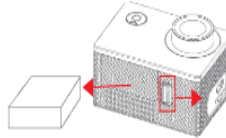


i If a new battery is needed, please contact customer service:
1-877-768-6481
Monday-Friday 8AM-10PM(EST)

Connecting to a Computer

You may connect your camera to a computer using the supplied micro USB cable to retrieve your recorded videos and photos.

To do so, attach the micro USB cable to the micro USB port and attach the larger end to the USB port on your computer.

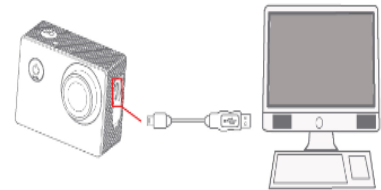

i When connecting to a computer for the first time, the camera may need to install some drivers to allow the computer read the micro SD card. If prompted, allow your computer to install drivers for the camera.


When the camera is ready, it can be accessed through the computer's Connected Devices window or under external drives (please consult your computer or operating system's user guide for further information on using devices and external drives).

The file system of the micro SD card will differ based on the micro SD card's manufacturer. For help navigating the file system of your micro SD card, please consult the manufacturer's manual for further assistance.

Installing the Mounts

Waterproof Case

Open the waterproof case by holding the switch and pulling the clasp to undo the back of the case. Insert the camera into the case, lens first, so that the camera sits securely. Close the back of the case and make sure the clasp locks and that the waterproof case is completely sealed around the edges.

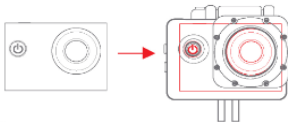

Clip Case

Insert the camera into the clip case by slightly depressing the clip and sliding the camera into place. Make sure the clip is on the top side of the camera so that the shutter button can still be pressed.




Installing the Mounts (cont'd)

Handle Bar Mount

The handle bar mount can be used on bicycle handle bars or other similarly-sized poles.

1. Unscrew the two knobs on the mount and remove the bottom piece.
2. Wrap the rubber grip around the handle bar.
3. Place the top piece on top of the handle bar, then place the bottom piece on the under side.
4. Screw the two knobs back into place so that the mount is secure and doesn't shift.

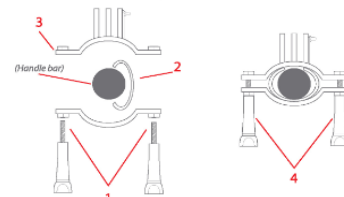

Once securely placed on the handle bar, the camera can be mounted using the waterproof case or clip case to the handle bar mount.

Installing the Mounts (cont'd)


Helmet Mount

The helmet mount can be used on a standard bicycle helmet by securing with straps and using the adhesive pads on the underside of the mount.

OPTIONAL: Remove the protective seal on the adhesive strip and place on your bike helmet so that it sticks in place.

1. Take one of the large straps and thread it down through the slot on the helmet mount base.
2. Take the end of that strap and thread it through one of the ports on a bicycle helmet and then out through another port.
3. Slide the end of the strap through the strap's clip and adjust until the strap feels properly secure and in place, then press the clip until it clicks into place.
4. Using the velcro strips, fasten the loose ends of the large strap to other parts on a bicycle helmet.
5. Repeat steps 1 - 4 with the other strap.

Slide the fastener into the base and attach the camera to either the clip mount or waterproof mount. If using the threaded base, attach the preferred case and secure.

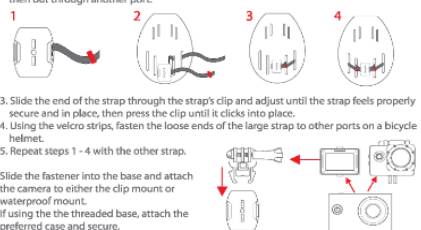

FRONT

Using the Camera

Powering ON/OFF

- To turn the camera ON, quick press the [MODE] button.
- To turn the camera OFF, long press the [MODE] button.

Changing Modes

- To change modes, quick press the [MODE] button. This will cycle through Video mode, Photo mode, Gallery mode, and the Settings pages for each mode.

Video Mode


Video mode allows you to record video.

- To start recording, quick press the [OK] button. Once recording, a red REC icon will flash along with a time stamp indicating how long you have been recording for.
- To stop recording, press the [OK] button.

- Press the [A] button to quickly enable/disable sound while recording.
- Press the [V] button to put the display to sleep.

Video Mode UI

1. Current mode icon
2. Sound enabled/disabled
3. Amount of time that can be video can be recorded to the micro SD card
4. Current video quality
5. Current battery life

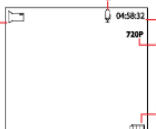

Using the Camera (cont'd)

Photo Mode


- Video mode allows you to take photos.
- To take a photo, quick press the [OK] button.
- Press the [V] button to put the display to sleep.

Photo Mode UI

1. Photo Mode icon
2. Number of photos that can still be stored on installed micro SD card
3. Current photo quality
4. Battery Life

Gallery Mode

- Gallery mode allows you to review your recorded videos and pictures that are on your installed micro SD card.
- Navigate through your recorded items with the [A] and [V] buttons.
- Review photos or watch videos by selecting with the [OK] button.

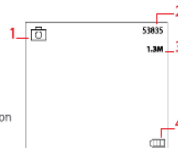

Using the Camera - Settings (cont'd)

Settings Pages

- The settings page allows you to change the settings of the camera. These pages can be accessed via the [MODE] button.
- Navigate through submenus with the [UP] and [DOWN] buttons.
- Confirm selections using the [OK] button.

Submenu	Function
Resolution	Change the quality of recorded video in Video mode. • HQ: 720P - 1280x720 • LQ: VGA - 640x480 NOTE: HQ video will take more space on the installed micro SD card.
Time Stamp	Enable/disable a time stamp on recorded videos in Video mode.
Loop Recording	Allows you to set the camera for cyclic recording. This will replace older footage ever X minutes, where X is the number set, below: • Off/1 Min/2 Min/3 Min/5 Min/10 Min This allows you to replace unimportant recordings to preserve space on your micro SD card.
Voice Record	Enable/disable audio in video recording.

Using the Camera - Settings (cont'd)

Using the Camera - Settings (cont'd)

Using the Camera - Settings (cont'd)

Submenu	Function
EV	Set exposure value for video/photo mode. • +2.0, +5/3, +4/3, +1.0, +1/3, +0.0, -1.0, -4/3, -5/3, -2.0
Size	Change the quality of photos taken in photo mode. • 2560x1920 • 2048x1536 • 1600x1200 • 1280x960 • 640x480 NOTE: HQ photo will take more space on the installed micro SD card.
Delete	Delete selected/all items in gallery mode.
Lock	Lock/unlock selected item. A locked item will not be deleted using the delete function (described above) from the installed micro SD card. NOTE: Locked items can still be deleted through a computer.
Volume	Adjust volume on gallery playback.
Format	Formats the installed micro SD card to work with the camera. NOTE: THIS WILL ERASE ANY EXISTING DATA ON THE CARD. BACKUP ANY IMPORTANT FILES TO YOUR COMPUTER FIRST. • Cancel • Execute

Submenu	Function
Language	Set system language for camera UI and menus. • English/Traditional Chinese/Simplified Chinese/Japanese/French/Dutch/Korean/Italian/Portuguese/Russian/Spanish/Turkish
Auto Power-Off	Set the camera to turn off automatically. • Off/1 Min/3 Min/5 Min.
LCD Off	Set the display to turn off after a set amount of time. • Off/1 Min/3 Min/5 Min.
Sys. Reset	Reset all settings to factory default. • Cancel • Execute
Light Frequency	Adjust the light frequency setting on the camera to your country's default. • 50Hz • 60Hz
Date Input	Set the date for the camera. This date will be reflected when the time stamp is enabled. To set the date use the [A] and [V] buttons to adjust and use the [OK] button to confirm your selections.
Version	Displays camera information.

Legal Information

READ CAREFULLY AND KEEP THIS MANUAL

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Limited Warranty

90 Days Limited Warranty

In the unlikely event that this product is defective, or does not perform properly, you may within ninety (90) days from your original date of purchase return it to the authorized service center for repair or exchange.

TO OBTAIN WARRANTY SERVICE:

- Call the Customer Support number located below, or go to our website portal to receive an SRO number.
- Provide proof of the date of purchase within the package (dated bill of sale).
- Prepay all shipping costs to the authorized service center, and remember to insure your return.
- Include a return shipping address (no P.O. Boxes), a telephone contact number, and the defective unit within the package.
- Describe the defect or reason you are returning the product.

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier.

The shipping address of the authorized service center is:

©2019 Southern Telecom, Inc.
Attention: Customer Service (2nd Floor)
14-C 33rd Street
Brooklyn, NY 11232

Should you have any questions or problems concerning this product, please contact our customer service department at:

Customer Support:
Phone: 1-877-768-8481
Monday-Friday 8AM-10PM(EST)
www.southern telecom.com
Click on "Product Support"

Limited Warranty (cont'd)

Warranty service not provided

This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, and unauthorized modification. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.

Limitation of Warranties

THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT. ALL OTHER WARRANTIES, EXPRESS OR IMPLIED (INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE) ARE HEREBY DISCLAIMED. NO VERBAL OR WRITTEN INFORMATION GIVEN BY A.T.I., INC. ITS AGENTS, OR EMPLOYEES SHALL CREATE A WARRANTY OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. A.T.I., INC. SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. THIS DISCLAIMER OF WARRANTIES AND LIMITED WARRANTY ARE GOVERNED BY THE LAWS OF THE STATE OF NEW YORK. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE.

Some states do not allow the exclusion nor limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts so the above limitations on exclusions may not apply to you. This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.

Emerson and Emerson and the G-Chief Logo are trademarks and/or registered trademarks of Emerson Radio Corp., used under license.
Distributed by: A.T.I., Inc., Brooklyn, NY 11232 (C) 2016 A.T.I. Rights Reserved.

Emerson



BACK