


Wireless Handset User Manual

1. Performance parameter

Model	KDH231B
Voltage	4.5VDC (3AAA 1.5V battery)
Current	MAX 50mA
Keys	9
Protection class	IP 42
Main material	HIPS-2230
RF	2420Mhz

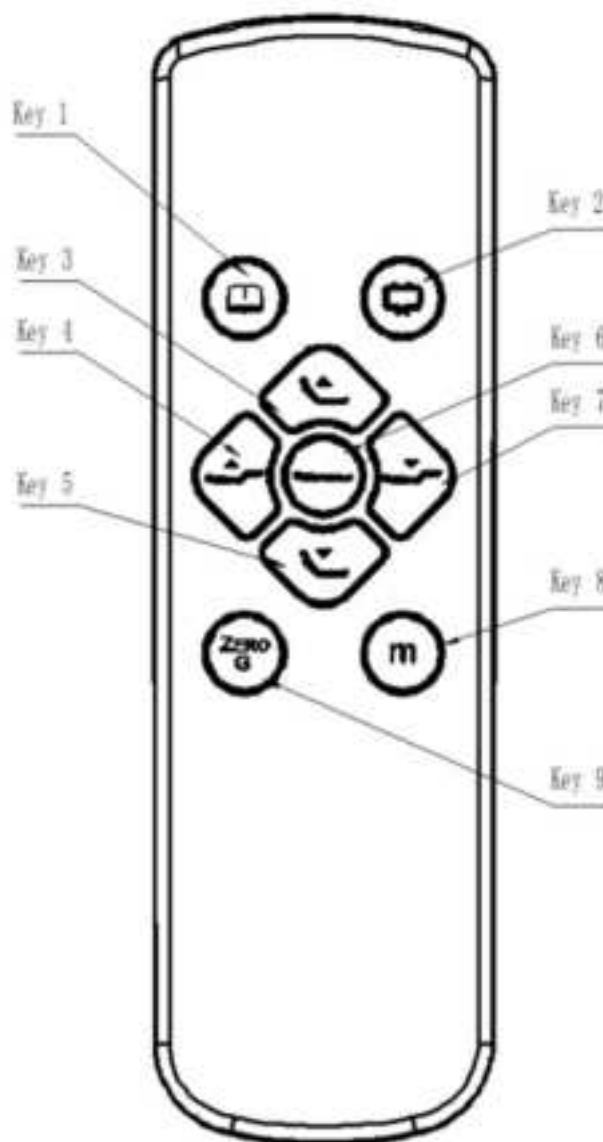

Key 1: Short press button 1, and the fader will run to a fixed position (Book mode) to stop; long press button 1, after 3 seconds, the current position will be memorized (overwrite the previous memory), the backlight will flash 3 times quickly, and the control box will beep

1 time;

After the position is memorized, short press button 3, and the fader will switch to the current memorized position;

Key 2: Short press button 2, and the push rod will stop running to a fixed position (TV mode); long press button 2, after 3 seconds, the current position will be memorized (overwrite the previous memory), the backlight will flash 3 times quickly, and the control box will beep 1 time;

After memorizing the position, short press button 2 to switch the fader to the current memorized position;

Key 3: Long press button 3, push rod 1 extends, release it to stop;

Key 4: Long press button 4, push rod 2 extends, release it to stop;

Key 5: Long press button 5, push rod 1 retracts, release it to stop;

Key 6: Short press button 6, the push rod 1 and push rod 2 retract at the same time; press any key to stop the push rod during the operation of the push rod;

Key 7: Long press button 7, the push rod 2 retracts, release it to stop;

Key 8: long press button 8 for about 3 seconds, the backlight flashes for 3 seconds and then stays on, the control box will memorize the current push rod position (overwrite the previous memory); at the same time the buzzer buzzes once, the backlight is off; short press again Press the 8 key, the push rod moves to the memory position;

Key 9: Short press button 9 to stop the push rod running to a fixed position (zero gravity mode); long press button 9 for 3 seconds, the current position is memorized (overwrite the previous memory), and the backlight flashes 3 times quickly, the control box bee Beep once; after the position is memorized, short press button 9 to switch the fader to the current memorized position.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC warning:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference

will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.