






## Portable Bluetooth® Boombox with Digital FM Radio Quick Start Guide


100070575

### What's in the Box?

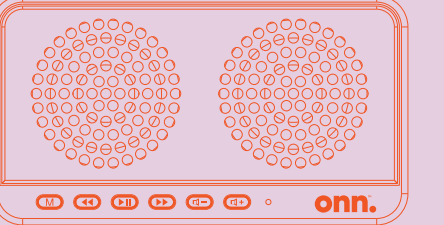Check to make sure you have everything below.


**A** 

**B**  **D** 

**C** 

A. 1 Portable Bluetooth® Boombox  
B. 1 AUX Cable 19.6 in (50 cm)  
C. 1 Micro-USB charging cable 11.8 in (30 cm)  
D. 1 Quick Start Guide

### Product Overview



### Product Overview (Continued)

**M MODE**  
Press to switch modes (AUX/FM/Bluetooth®).  
Press and hold to turn device on/off.

**<< PREVIOUS**  
Press to go to the previous track/channel.  
Press and hold to scan backward for a channel in FM mode.


**>> PLAY/PAUSE/SCAN**  
Press to play/pause a track when in AUX/Bluetooth® mode.  
Press and hold to disconnect connected devices and/or start pairing when in Bluetooth® mode.  
Press and hold to automatically search and save a radio station when in FM mode.


### Product Overview (Continued)

**>>> NEXT**  
In Bluetooth® mode:  
- Press to go to the next track.  
- Press and hold to begin TWS pairing.  
In FM mode:  
- Press to go to the next channel.  
- Press and hold to scan forward for a channel


**<<< VOLUME-**  
Decrease the volume.

**>>> VOLUME+**  
Increase the volume.

 **DC 5V:** Charging Port

 **AUX:** Auxiliary Input

### Product Overview (Continued)

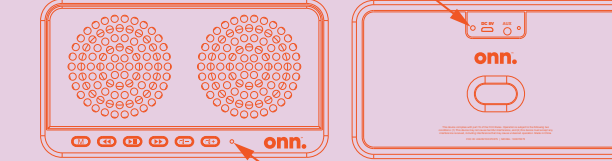

Back Indicator Light

Front Indicator Light

**FRONT INDICATOR LIGHT**

- Blue Light:** Indicates that the device is in Bluetooth® mode. Light will flash when pairing.
- Red Light:** Indicates that the device is in AUX/FM mode.
- Blinking Red Light:** Indicates low battery. Please charge your device.
- Purple Light:** Indicates that the device is in TWS mode.
- Flashing Purple Light:** Indicates that the device is in TWS Pairing mode.

**BACK INDICATOR LIGHT**

- Red Light:** Indicates that the device is charging.
- Green Light:** Indicates that the device is fully charged.

We'd love to hear from you. Scan with your Walmart app and let us know what you think.



## Safety Precautions

1. Do not expose to dripping or splashing.
2. Do not place any objects filled with water on the device.
3. Do not block the ventilation holes.
4. When using high output signals, do not turn the volume to maximum to avoid distortion.
5. Do not leave objects generating magnetism near the speakers.

## Charging your Device

Use the included micro USB charging cable and insert it into the DC 5V charging port located at the back of your boombox. Connect the other end of the cable to a power source to charge your device. Allow up to four hours to fully charge the battery.

Full charge = 6 hours of playback



## Bluetooth® Mode




1. Press the **(M)** button to switch to Bluetooth® mode. The front indicator light will turn blue in Bluetooth® mode.
2. On your smartphone, search for the Bluetooth® device named "onn bmbox" and connect to it.
3. If prompted to input a password, enter "0000".
4. Your device is now connected via Bluetooth®.

## AUX Mode

1. Connect your external device to the AUX input at the back of the boombox via the AUX cable.
2. Press the **(M)** button to switch to AUX mode. The front indicator light will turn red.
3. You may now start streaming audio to your boombox using your external device.

## TWS Mode

**TWS (True Wireless Stereo)** technology allows you to play music on two onn. Bluetooth® boomboxes simultaneously, creating a surround sound experience.

1. Press and hold the  button on both boomboxes to turn them on and enter Bluetooth® Pairing Mode.
2. Open Bluetooth® settings on your mobile device and search for "onn. bmbox".
3. Once connection is successful, press and hold the  button to enter TWS pairing. The indicator light will flash purple. At this time the second speaker will automatically begin TWS pairing.
4. Once both speakers are connected, the purple indicator light will remain on.
5. To disconnect from TWS mode, press and hold the  button on either boombox.

Note: When playing music in TWS mode, one speaker will act as the left channel and the other as the right channel.

## Resetting Your Device

If your boombox is not operating properly, you may reset it. To do so, use a small object – such as a paper clip – to press the button inside the AUX jack. Press and hold the button for approximately 2 seconds until the boombox powers off, and then power it on again as usual.

## The Specs

- Digital FM Radio
- Model: 100070575
- Bluetooth® 5.1
- 3.5 mm AUX In
- RMS: 5W (2.5W x2) output
- Range: 33 ft (10 m)
- Battery: 3.7V / 2000mAh Rechargeable Battery

## CC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

**Caution:** Changes or modifications to this product not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures (see next page):

## FCC Warning (Continued)

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF exposure guidelines, this equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body.

**Need help**

We're here for you every day  
from 7 a.m. – 9 p.m. CST.  
Give us a call at 1-888-516-2630