

封面

封底



US UK Dear user Thank you for choosing our REDRAGON product. To protect your rights and for better customer service, we ask that you note our warranty rules. 1. Within guaranty period, repair is guaranteed for failure due to electrical circuit problems. Other damages, such as disassembly, hard impacts, submersion into water, plugging into improper current or voltage, and damage caused by natural disasters such as fire, flood, or earthquake are not included. 2. Consumable parts (such as foot pad) and spare parts replacement are not included in our warranty.	OS Support Windows XP/Vista/Win7/Win8/Win10/Win11 Packaging List: A. Headset1 unit B. Detachable microphone1 unit C. 2.4GHz USB/TYPE-C receiver1 unit D. TYPE-C to USB charging cable1 unit E. TYPE-C to 3.5mm cable1 unit F. Battery : Lithium battery inside1 unit	Headset button instructions: ① LED indicator ② Volume + ③ Power switch (Gaming mode/ Music mode switch) ④ Volume - ⑤ 2.4G/ BT switch ⑥ MIC mute	Power save mode & How to charge Power save mode When the headset is un-connected over 5 minutes, the headset will turn off automatically. When the headset is stop play over 10 minutes, the headset will turn off automatically. How to charge When the battery is low, the headset notification sound: "battery low", and the LED indicator will flashing RED per minute. Use TYPE-C to USB cable to connect headset to PC USB port or DC 5V charger. When charging, the LED indicator steady on RED. Equipment name description 1) USB receiver device name: H888 Wireless headset 2) BT mode device name: H888	<table><tr><th colspan="4">2.4GHz mode</th></tr><tr><th>Buttons/functions /lights</th><th>Function description</th><th>Operation</th><th>Notification sound</th></tr><tr><td>2.4G/ BT switch</td><td>Switch 2.4G/ BT connection</td><td>switching</td><td>2.4G mode: Adapter mode BT mode: BT mode</td></tr><tr><td>Power button</td><td>Gaming mode and music mode switching</td><td>Press power button twice</td><td>Gaming mode/ music mode</td></tr><tr><td></td><td>Play / Pause</td><td>Press once</td><td></td></tr><tr><td>Vol+ button</td><td>Turn up volume</td><td>Press/Press & hold</td><td>Max volume: max volume</td></tr><tr><td></td><td>Next track</td><td>Press twice</td><td></td></tr><tr><td>Vol- button</td><td>Turn down volume</td><td>Press/Press & hold</td><td></td></tr><tr><td></td><td>Previous track</td><td>Press twice</td><td></td></tr><tr><td></td><td>Microphone on/mute</td><td>Press once</td><td>Mic on/ MIC mute</td></tr><tr><td></td><td>BT mode disconnect/pairing</td><td>Press twice</td><td>Disconnect/Pairing</td></tr><tr><td></td><td>Power on/off</td><td>Power on/off: Press & hold for 3 seconds</td><td>Power on/ off</td></tr><tr><td></td><td>Play / Pause music</td><td>Press once</td><td></td></tr><tr><td></td><td>Answer/end the call</td><td>Press once</td><td></td></tr><tr><td></td><td>Reject the call</td><td>Press and hold for 1.5 seconds</td><td>Luminous LED default: On</td></tr><tr><td></td><td>Gaming mode and music mode switching</td><td>Press twice</td><td>Gaming mode/ music mode</td></tr><tr><td></td><td>SIR</td><td>Press triple times</td><td></td></tr><tr><td>LED indicator</td><td>White</td><td>Flashing in Red/Blue when pairing. Blue steady on after connected</td><td></td></tr></table>	2.4GHz mode				Buttons/functions /lights	Function description	Operation	Notification sound	2.4G/ BT switch	Switch 2.4G/ BT connection	switching	2.4G mode: Adapter mode BT mode: BT mode	Power button	Gaming mode and music mode switching	Press power button twice	Gaming mode/ music mode		Play / Pause	Press once		Vol+ button	Turn up volume	Press/Press & hold	Max volume: max volume		Next track	Press twice		Vol- button	Turn down volume	Press/Press & hold			Previous track	Press twice			Microphone on/mute	Press once	Mic on/ MIC mute		BT mode disconnect/pairing	Press twice	Disconnect/Pairing		Power on/off	Power on/off: Press & hold for 3 seconds	Power on/ off		Play / Pause music	Press once			Answer/end the call	Press once			Reject the call	Press and hold for 1.5 seconds	Luminous LED default: On		Gaming mode and music mode switching	Press twice	Gaming mode/ music mode		SIR	Press triple times		LED indicator	White	Flashing in Red/Blue when pairing. Blue steady on after connected		<table><tr><th colspan="4">BT mode</th></tr><tr><th>Buttons/functions /lights</th><th>Function description</th><th>Operation</th><th>Notification sound</th></tr><tr><td>2.4G/ BT switch</td><td>Switch 2.4G/ BT connection</td><td>switching</td><td>2.4G mode: Adapter mode BT mode: BT mode</td></tr><tr><td>Vol+ button</td><td>Turn up volume</td><td>Press Press and hold</td><td>Max volume: max volume</td></tr><tr><td></td><td>Next track</td><td>Press twice</td><td></td></tr><tr><td>Vol- button</td><td>Turn down volume</td><td>Press Press and hold</td><td></td></tr><tr><td></td><td>Previous track</td><td>Press twice</td><td></td></tr><tr><td></td><td>Microphone on/ mute</td><td>Press once</td><td>MIC on/ MIC mute</td></tr><tr><td></td><td>BT mode disconnect / pairing</td><td>Press twice</td><td>Disconnect/ pairing</td></tr><tr><td></td><td>Power on/off</td><td>Power on/off: Press & hold for 3 seconds</td><td>Power on/ off</td></tr><tr><td></td><td>Play / Pause music</td><td>Press once</td><td></td></tr><tr><td></td><td>Answer/end the call</td><td>Press once</td><td></td></tr><tr><td></td><td>Reject the call</td><td>Press and hold for 1.5 seconds</td><td>Luminous LED default: On</td></tr><tr><td></td><td>Gaming mode and music mode switching</td><td>Press twice</td><td>Gaming mode/ music mode</td></tr><tr><td></td><td>SIR</td><td>Press triple times</td><td></td></tr><tr><td>LED indicator</td><td>Blue</td><td>Flashing in Red/Blue when pairing. Blue steady on after connected</td><td></td></tr></table>	BT mode				Buttons/functions /lights	Function description	Operation	Notification sound	2.4G/ BT switch	Switch 2.4G/ BT connection	switching	2.4G mode: Adapter mode BT mode: BT mode	Vol+ button	Turn up volume	Press Press and hold	Max volume: max volume		Next track	Press twice		Vol- button	Turn down volume	Press Press and hold			Previous track	Press twice			Microphone on/ mute	Press once	MIC on/ MIC mute		BT mode disconnect / pairing	Press twice	Disconnect/ pairing		Power on/off	Power on/off: Press & hold for 3 seconds	Power on/ off		Play / Pause music	Press once			Answer/end the call	Press once			Reject the call	Press and hold for 1.5 seconds	Luminous LED default: On		Gaming mode and music mode switching	Press twice	Gaming mode/ music mode		SIR	Press triple times		LED indicator	Blue	Flashing in Red/Blue when pairing. Blue steady on after connected		List of applicable devices and connection methods are as follows: <table><tr><th colspan="4">List of H888 applicable hosts</th></tr><tr><th>Applicable device</th><th>BT mode</th><th>2.4GHz mode</th><th>Wired mode</th></tr><tr><td>Android phone</td><td>Y</td><td>Y</td><td>3.5mm port</td></tr><tr><td>Windows laptop</td><td>Y</td><td>Y</td><td>3.5mm port</td></tr><tr><td>Windows desktop</td><td>Y</td><td>Y</td><td>3.5mm port</td></tr><tr><td>Apple laptop</td><td>Y</td><td>Y</td><td>3.5mm port</td></tr><tr><td>Switch</td><td>Y</td><td>Y, TYPE-C support audio output</td><td>3.5mm port</td></tr><tr><td>PS/3</td><td>NA</td><td>Y</td><td>3.5mm port</td></tr><tr><td>PS/4</td><td>NA</td><td>Y</td><td>3.5mm port</td></tr><tr><td>PS/5</td><td>NA</td><td>Y</td><td>3.5mm port</td></tr><tr><td>XBOX one</td><td>NA</td><td>NA</td><td>3.5mm port</td></tr></table> Storage Headset should be stored in a clean, dry and ventilated room with an ambient temperature of -5~35°C. Contact with corrosive substances should be avoided, and they should be kept away from fire and heat sources. The headset battery should be charged every six months during storage.	List of H888 applicable hosts				Applicable device	BT mode	2.4GHz mode	Wired mode	Android phone	Y	Y	3.5mm port	Windows laptop	Y	Y	3.5mm port	Windows desktop	Y	Y	3.5mm port	Apple laptop	Y	Y	3.5mm port	Switch	Y	Y, TYPE-C support audio output	3.5mm port	PS/3	NA	Y	3.5mm port	PS/4	NA	Y	3.5mm port	PS/5	NA	Y	3.5mm port	XBOX one	NA	NA	3.5mm port	Remark 1. Do not put the headset in humid and wet place. 2. High volume for long period may damage your hearing. 3. Do not put self's strength to pull the cable.	FCC Statement Change or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications; however, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: – Reorient or relocate the receiving antenna. – Increase the separation between the equipment and receiver. – Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This device contains license-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: (1) This device may not cause interference. (2) This device must accept any interference, including interference that may cause undesired operation of the device.	BATTERY SAFETY GUIDELINES DO NOT replace the battery with a different model. DO NOT use this product if the battery shows signs of damage including, but not limited to: swelling, deformation, leakage, or the smell of electrolytic material. DO NOT touch the battery if material is leaking and seek immediate medical attention if any material comes into contact with your skin or eyes. DO NOT expose the battery to liquid, heat sources, electricity (outside of the product itself), or other non-standard operating condition. DO NOT remove the battery except for proper disposal and recycling as required by local laws and regulations. DO NOT impact, bend, alter, disassemble, or otherwise damage the battery as the contents are volatile, hazardous, and can be harmful. CAUTION Failing to follow all safety guidelines may result product damage, explosion, fire, and/or electric shock. Cet appareil contient des émetteurs / récepteurs exempts de licence conformes aux RSS (RSS) d'Innovation, Sciences et Développement économique Canada. Le fonctionnement est soumis aux deux conditions suivantes: (1) Cet appareil ne doit pas causer d'interférences. (2) Cet appareil doit accepter toutes les interférences, y compris celles susceptibles de provoquer un fonctionnement indésirable de l'appareil.
2.4GHz mode																																																																																																																																																																																													
Buttons/functions /lights	Function description	Operation	Notification sound																																																																																																																																																																																										
2.4G/ BT switch	Switch 2.4G/ BT connection	switching	2.4G mode: Adapter mode BT mode: BT mode																																																																																																																																																																																										
Power button	Gaming mode and music mode switching	Press power button twice	Gaming mode/ music mode																																																																																																																																																																																										
	Play / Pause	Press once																																																																																																																																																																																											
Vol+ button	Turn up volume	Press/Press & hold	Max volume: max volume																																																																																																																																																																																										
	Next track	Press twice																																																																																																																																																																																											
Vol- button	Turn down volume	Press/Press & hold																																																																																																																																																																																											
	Previous track	Press twice																																																																																																																																																																																											
	Microphone on/mute	Press once	Mic on/ MIC mute																																																																																																																																																																																										
	BT mode disconnect/pairing	Press twice	Disconnect/Pairing																																																																																																																																																																																										
	Power on/off	Power on/off: Press & hold for 3 seconds	Power on/ off																																																																																																																																																																																										
	Play / Pause music	Press once																																																																																																																																																																																											
	Answer/end the call	Press once																																																																																																																																																																																											
	Reject the call	Press and hold for 1.5 seconds	Luminous LED default: On																																																																																																																																																																																										
	Gaming mode and music mode switching	Press twice	Gaming mode/ music mode																																																																																																																																																																																										
	SIR	Press triple times																																																																																																																																																																																											
LED indicator	White	Flashing in Red/Blue when pairing. Blue steady on after connected																																																																																																																																																																																											
BT mode																																																																																																																																																																																													
Buttons/functions /lights	Function description	Operation	Notification sound																																																																																																																																																																																										
2.4G/ BT switch	Switch 2.4G/ BT connection	switching	2.4G mode: Adapter mode BT mode: BT mode																																																																																																																																																																																										
Vol+ button	Turn up volume	Press Press and hold	Max volume: max volume																																																																																																																																																																																										
	Next track	Press twice																																																																																																																																																																																											
Vol- button	Turn down volume	Press Press and hold																																																																																																																																																																																											
	Previous track	Press twice																																																																																																																																																																																											
	Microphone on/ mute	Press once	MIC on/ MIC mute																																																																																																																																																																																										
	BT mode disconnect / pairing	Press twice	Disconnect/ pairing																																																																																																																																																																																										
	Power on/off	Power on/off: Press & hold for 3 seconds	Power on/ off																																																																																																																																																																																										
	Play / Pause music	Press once																																																																																																																																																																																											
	Answer/end the call	Press once																																																																																																																																																																																											
	Reject the call	Press and hold for 1.5 seconds	Luminous LED default: On																																																																																																																																																																																										
	Gaming mode and music mode switching	Press twice	Gaming mode/ music mode																																																																																																																																																																																										
	SIR	Press triple times																																																																																																																																																																																											
LED indicator	Blue	Flashing in Red/Blue when pairing. Blue steady on after connected																																																																																																																																																																																											
List of H888 applicable hosts																																																																																																																																																																																													
Applicable device	BT mode	2.4GHz mode	Wired mode																																																																																																																																																																																										
Android phone	Y	Y	3.5mm port																																																																																																																																																																																										
Windows laptop	Y	Y	3.5mm port																																																																																																																																																																																										
Windows desktop	Y	Y	3.5mm port																																																																																																																																																																																										
Apple laptop	Y	Y	3.5mm port																																																																																																																																																																																										
Switch	Y	Y, TYPE-C support audio output	3.5mm port																																																																																																																																																																																										
PS/3	NA	Y	3.5mm port																																																																																																																																																																																										
PS/4	NA	Y	3.5mm port																																																																																																																																																																																										
PS/5	NA	Y	3.5mm port																																																																																																																																																																																										
XBOX one	NA	NA	3.5mm port																																																																																																																																																																																										
PT Prezado usuário, Obrigado por escolher a marca REDRAGON. Para proteger seus direitos e oferecer um melhor atendimento ao cliente, pedimos que você observe as regras da nossa garantia. 1. Dentro do período da garantia, o reparo são garantidos nos casos de falha devido a problemas no circuito eletrônico. Danos causados pela desmontagem, por impactos violentos, imersão em água, ligação em correntes ou voltagens incorretas e danos causados por desastres naturais, como incêndios, inundações ou terremotos, não estão incluídos. 2. Peças que sofrem desgaste (como pé) e a substituição de peças avulsas não estão incluídas em nossa garantia.	Compatibilidade com OS Windows XP/Vista/Win7/Win8/Win10/Win11 Conteúdo da embalagem: A. Headset1 B. Microfone destacável1 C. Receptor de 2.4GHz USB/TIPO-C1 D. Cabo de carregamento USB1 E. Cabo TIPO-C para 3.5 mm1 F. Bateria interna de lítio1	Instruções dos botões do headset: ① Led/índice por LED ② Aumentar o volume ③ Botão de energia (Chave de modo de jogo/música) ④ Reduzir o volume ⑤ Chave 2.4G/ BT ⑥ MIC mudo	Modo de economia de energia e como carregar Modo de economia de energia Se o fone de ouvido ficar desconectado por mais de 3 minutos, vai se desligar automaticamente. Se o fone de ouvido ficar sem uso por mais de 10 minutos, vai se desligar automaticamente. Como carregar Se a bateria estiver fraca, o som de notificação do fone de ouvido será "battery low" (bateria fraca) e LED indicador piscará em VERMELHO a cada minuto. Use o cabo TIPO-C para USB para conectar o headset à porta USB do PC ou ao carregador 5V CC. Durante o carregamento, o LED indicador permanecerá aceso em VERMELHO. Descrição e nome do equipamento 1) Nome do dispositivo receptor USB: Headset sem fio H888 2) Nome do dispositivo no modo BT H888	<table><tr><th colspan="4">Modo 2.4GHz</th></tr><tr><th>Botões/funções/ luzes</th><th>Descrição das funções</th><th>Operação</th><th>Som de notificação</th></tr><tr><td>Chave 2.4G/ BT</td><td>Chave de conexão 2.4G/ BT</td><td>comutando</td><td>Modo 2.4G Modo adaptador Modo BT BT mode</td></tr><tr><td>Botão de energia</td><td>Ligar/desligar</td><td>Ligar/desligar: Pressione e segure por 3 segundos</td><td>Ligar/desligar</td></tr><tr><td></td><td>Alternância entre modo de jogo e modo de música</td><td>Pressione o botão de energia duas vezes</td><td>Modo de jogo/ modo de música</td></tr><tr><td></td><td>Tocar/Pausa</td><td>Pressione uma vez</td><td></td></tr><tr><td>Botão Vol+</td><td>Aumenta o volume</td><td>Pressione/Pressione e segure</td><td>Volume máximo: volume máximo</td></tr><tr><td></td><td>Próxima faixa</td><td>Pressione duas vezes</td><td></td></tr><tr><td>Botão Vol-</td><td>Diminui o volume</td><td>Pressione/Pressione e segure</td><td></td></tr><tr><td></td><td>Faixa anterior</td><td>Pressione duas vezes</td><td></td></tr><tr><td></td><td>Microfone ligado/ mudo</td><td>Pressione uma vez</td><td>Mic ligado/ Mic Mudo</td></tr><tr><td></td><td>Modo BT desconectado/ reparando</td><td>Pressione duas vezes</td><td>Desconectar/pareando</td></tr><tr><td>Botão MIC</td><td>Modo 2.4GHz desconectado/ reparando</td><td>Pressione duas vezes</td><td>Desconectar/pareando</td></tr><tr><td>Indicador por LED</td><td>Branco</td><td>Piscando em vermelho e branco durante o pareamento, branco fixo uma vez conectado</td><td></td></tr></table>	Modo 2.4GHz				Botões/funções/ luzes	Descrição das funções	Operação	Som de notificação	Chave 2.4G/ BT	Chave de conexão 2.4G/ BT	comutando	Modo 2.4G Modo adaptador Modo BT BT mode	Botão de energia	Ligar/desligar	Ligar/desligar: Pressione e segure por 3 segundos	Ligar/desligar		Alternância entre modo de jogo e modo de música	Pressione o botão de energia duas vezes	Modo de jogo/ modo de música		Tocar/Pausa	Pressione uma vez		Botão Vol+	Aumenta o volume	Pressione/Pressione e segure	Volume máximo: volume máximo		Próxima faixa	Pressione duas vezes		Botão Vol-	Diminui o volume	Pressione/Pressione e segure			Faixa anterior	Pressione duas vezes			Microfone ligado/ mudo	Pressione uma vez	Mic ligado/ Mic Mudo		Modo BT desconectado/ reparando	Pressione duas vezes	Desconectar/pareando	Botão MIC	Modo 2.4GHz desconectado/ reparando	Pressione duas vezes	Desconectar/pareando	Indicador por LED	Branco	Piscando em vermelho e branco durante o pareamento, branco fixo uma vez conectado		<table><tr><th colspan="4">Modo BT</th></tr><tr><th>Botões/funções/ luzes</th><th>Descrição das funções</th><th>Operação</th><th>Som de notificação</th></tr><tr><td>Chave 2.4G/ BT</td><td>Chave de conexão 2.4G/ BT</td><td>comutando</td><td>Modo 2.4G Modo adaptador Modo BT BT mode</td></tr><tr><td>Botão Vol+</td><td>Aumenta o volume</td><td>Pressione Pressione e segure</td><td>Volume máximo: volume máximo</td></tr><tr><td></td><td>Próxima faixa</td><td>Pressione duas vezes</td><td></td></tr><tr><td>Botão Vol-</td><td>Diminui o volume</td><td>Pressione Pressione e segure</td><td></td></tr><tr><td></td><td>Faixa anterior</td><td>Pressione duas vezes</td><td></td></tr><tr><td></td><td>Microfone ligado/ mudo</td><td>Pressione uma vez</td><td>Mic ligado/ MIC Mudo</td></tr><tr><td></td><td>Modo BT desconectado/ reparando</td><td>Pressione duas vezes</td><td>Desconectar/pareando</td></tr><tr><td></td><td>Ligar/desligar</td><td>Ligar/desligar: Pressione e segure por 3 segundos</td><td>Ligar/desligar</td></tr><tr><td></td><td>Tocar/pausa música</td><td>Pressione uma vez</td><td></td></tr><tr><td></td><td>Atender/encerrar a ligação</td><td>Pressione uma vez</td><td></td></tr><tr><td></td><td>Registrar a ligação</td><td>Pressione e segure por 1.5 segundos</td><td>Luminous LED default: On</td></tr><tr><td></td><td>Alternância entre modo de jogo e modo de música</td><td>Pressione duas vezes</td><td>Modo de jogo/ modo de música</td></tr><tr><td></td><td>SIR</td><td>Pressione três vezes</td><td></td></tr><tr><td>Indicador por LED</td><td>Azul</td><td>Piscando em vermelho e azul durante o pareamento, azul fixo uma vez conectado</td><td></td></tr></table>	Modo BT				Botões/funções/ luzes	Descrição das funções	Operação	Som de notificação	Chave 2.4G/ BT	Chave de conexão 2.4G/ BT	comutando	Modo 2.4G Modo adaptador Modo BT BT mode	Botão Vol+	Aumenta o volume	Pressione Pressione e segure	Volume máximo: volume máximo		Próxima faixa	Pressione duas vezes		Botão Vol-	Diminui o volume	Pressione Pressione e segure			Faixa anterior	Pressione duas vezes			Microfone ligado/ mudo	Pressione uma vez	Mic ligado/ MIC Mudo		Modo BT desconectado/ reparando	Pressione duas vezes	Desconectar/pareando		Ligar/desligar	Ligar/desligar: Pressione e segure por 3 segundos	Ligar/desligar		Tocar/pausa música	Pressione uma vez			Atender/encerrar a ligação	Pressione uma vez			Registrar a ligação	Pressione e segure por 1.5 segundos	Luminous LED default: On		Alternância entre modo de jogo e modo de música	Pressione duas vezes	Modo de jogo/ modo de música		SIR	Pressione três vezes		Indicador por LED	Azul	Piscando em vermelho e azul durante o pareamento, azul fixo uma vez conectado		Lista de dispositivos compatíveis e métodos de conexão a seguir: <table><tr><th colspan="4">Lista de dispositivos compatíveis com o H888</th></tr><tr><th>Dispositivo aplicável</th><th>BT mode</th><th>Modo 2.4GHz</th><th>Modo com fio</th></tr><tr><td>Celular Android</td><td>Y</td><td>Y</td><td>Entrada de 3.5 mm</td></tr><tr><td>Notebook com Windows</td><td>Y</td><td>Y</td><td>Entrada de 3.5 mm</td></tr><tr><td>Computador Windows</td><td>Y</td><td>Y</td><td>Entrada de 3.5 mm</td></tr><tr><td>Notebook Apple</td><td>Y</td><td>Y</td><td>Entrada de 3.5 mm</td></tr><tr><td>Chave:</td><td>Y</td><td>Sim, o TIPO-C é compatível com saída de áudio</td><td>Entrada de 3.5 mm</td></tr><tr><td>PS/3</td><td>NA</td><td>Y</td><td>Entrada de 3.5 mm</td></tr><tr><td>PS/4</td><td>NA</td><td>Y</td><td>Entrada de 3.5 mm</td></tr><tr><td>PS/5</td><td>NA</td><td>Y</td><td>Entrada de 3.5 mm</td></tr><tr><td>Xbox one</td><td>NA</td><td>NA</td><td>Entrada de 3.5 mm</td></tr></table> Armazenamento O headset deve ser armazenado em ambiente limpo, seco e ventilado, com temperatura ambiente de -5 a 35 °C. Deve-se evitar o contato com substâncias corrosivas e mantê-lo longe de fontes de fogo e calor. A bateria do headset deve ser carregada uma vez a cada seis meses durante o armazenamento.	Lista de dispositivos compatíveis com o H888				Dispositivo aplicável	BT mode	Modo 2.4GHz	Modo com fio	Celular Android	Y	Y	Entrada de 3.5 mm	Notebook com Windows	Y	Y	Entrada de 3.5 mm	Computador Windows	Y	Y	Entrada de 3.5 mm	Notebook Apple	Y	Y	Entrada de 3.5 mm	Chave:	Y	Sim, o TIPO-C é compatível com saída de áudio	Entrada de 3.5 mm	PS/3	NA	Y	Entrada de 3.5 mm	PS/4	NA	Y	Entrada de 3.5 mm	PS/5	NA	Y	Entrada de 3.5 mm	Xbox one	NA	NA	Entrada de 3.5 mm	Aviso 1) Não deixe o headset em local molhado ou úmido. 2) Som em alto volume por períodos prolongados pode afetar sua audição. 3) Não force ao puxar o cabo.	FCC Statement Change or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications; however, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: – Reorient or relocate the receiving antenna. – Increase the separation between the equipment and receiver. – Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause interference. (2) This device must accept any interference received, including interference that may cause undesired operation of the device.	BATTERY SAFETY GUIDELINES DO NOT replace the battery with a different model. DO NOT use this product if the battery shows signs of damage including, but not limited to: swelling, deformation, leakage, or the smell of electrolytic material. DO NOT touch the battery if material is leaking and seek immediate medical attention if any material comes into contact with your skin or eyes. DO NOT expose the battery to liquid, heat sources, electricity (outside of the product itself), or other non-standard operating condition. DO NOT remove the battery except for proper disposal and recycling as required by local laws and regulations. DO NOT impact, bend, alter, disassemble, or otherwise damage the battery as the contents are volatile, hazardous, and can be harmful. CAUTION Failing to follow all safety guidelines may result product damage, explosion, fire, and/or electric shock. Cet appareil contient des émetteurs / récepteurs exempts de licence conformes aux RSS (RSS) d'Innovation, Sciences et Développement économique Canada. Le fonctionnement est soumis aux deux conditions suivantes: (1) Cet appareil ne doit pas causer d'interférences. (2) Cet appareil doit accepter toutes les interférences, y compris celles susceptibles de provoquer un fonctionnement indésirable de l'appareil.																
Modo 2.4GHz																																																																																																																																																																																													
Botões/funções/ luzes	Descrição das funções	Operação	Som de notificação																																																																																																																																																																																										
Chave 2.4G/ BT	Chave de conexão 2.4G/ BT	comutando	Modo 2.4G Modo adaptador Modo BT BT mode																																																																																																																																																																																										
Botão de energia	Ligar/desligar	Ligar/desligar: Pressione e segure por 3 segundos	Ligar/desligar																																																																																																																																																																																										
	Alternância entre modo de jogo e modo de música	Pressione o botão de energia duas vezes	Modo de jogo/ modo de música																																																																																																																																																																																										
	Tocar/Pausa	Pressione uma vez																																																																																																																																																																																											
Botão Vol+	Aumenta o volume	Pressione/Pressione e segure	Volume máximo: volume máximo																																																																																																																																																																																										
	Próxima faixa	Pressione duas vezes																																																																																																																																																																																											
Botão Vol-	Diminui o volume	Pressione/Pressione e segure																																																																																																																																																																																											
	Faixa anterior	Pressione duas vezes																																																																																																																																																																																											
	Microfone ligado/ mudo	Pressione uma vez	Mic ligado/ Mic Mudo																																																																																																																																																																																										
	Modo BT desconectado/ reparando	Pressione duas vezes	Desconectar/pareando																																																																																																																																																																																										
Botão MIC	Modo 2.4GHz desconectado/ reparando	Pressione duas vezes	Desconectar/pareando																																																																																																																																																																																										
Indicador por LED	Branco	Piscando em vermelho e branco durante o pareamento, branco fixo uma vez conectado																																																																																																																																																																																											
Modo BT																																																																																																																																																																																													
Botões/funções/ luzes	Descrição das funções	Operação	Som de notificação																																																																																																																																																																																										
Chave 2.4G/ BT	Chave de conexão 2.4G/ BT	comutando	Modo 2.4G Modo adaptador Modo BT BT mode																																																																																																																																																																																										
Botão Vol+	Aumenta o volume	Pressione Pressione e segure	Volume máximo: volume máximo																																																																																																																																																																																										
	Próxima faixa	Pressione duas vezes																																																																																																																																																																																											
Botão Vol-	Diminui o volume	Pressione Pressione e segure																																																																																																																																																																																											
	Faixa anterior	Pressione duas vezes																																																																																																																																																																																											
	Microfone ligado/ mudo	Pressione uma vez	Mic ligado/ MIC Mudo																																																																																																																																																																																										
	Modo BT desconectado/ reparando	Pressione duas vezes	Desconectar/pareando																																																																																																																																																																																										
	Ligar/desligar	Ligar/desligar: Pressione e segure por 3 segundos	Ligar/desligar																																																																																																																																																																																										
	Tocar/pausa música	Pressione uma vez																																																																																																																																																																																											
	Atender/encerrar a ligação	Pressione uma vez																																																																																																																																																																																											
	Registrar a ligação	Pressione e segure por 1.5 segundos	Luminous LED default: On																																																																																																																																																																																										
	Alternância entre modo de jogo e modo de música	Pressione duas vezes	Modo de jogo/ modo de música																																																																																																																																																																																										
	SIR	Pressione três vezes																																																																																																																																																																																											
Indicador por LED	Azul	Piscando em vermelho e azul durante o pareamento, azul fixo uma vez conectado																																																																																																																																																																																											
Lista de dispositivos compatíveis com o H888																																																																																																																																																																																													
Dispositivo aplicável	BT mode	Modo 2.4GHz	Modo com fio																																																																																																																																																																																										
Celular Android	Y	Y	Entrada de 3.5 mm																																																																																																																																																																																										
Notebook com Windows	Y	Y	Entrada de 3.5 mm																																																																																																																																																																																										
Computador Windows	Y	Y	Entrada de 3.5 mm																																																																																																																																																																																										
Notebook Apple	Y	Y	Entrada de 3.5 mm																																																																																																																																																																																										
Chave:	Y	Sim, o TIPO-C é compatível com saída de áudio	Entrada de 3.5 mm																																																																																																																																																																																										
PS/3	NA	Y	Entrada de 3.5 mm																																																																																																																																																																																										
PS/4	NA	Y	Entrada de 3.5 mm																																																																																																																																																																																										
PS/5	NA	Y	Entrada de 3.5 mm																																																																																																																																																																																										
Xbox one	NA	NA	Entrada de 3.5 mm																																																																																																																																																																																										
11	12	13	14	15	16	17	18	9	10																																																																																																																																																																																				

型号	ET-G915-H888	备注: 尺寸: 100*100MM (装订)	Easton 16cm
名称	英+巴西说明书	材质: 80g书写纸	
日期	2024-8 -09	印刷: 单黑双面印刷	
页码	1 OF 1	文件编号	
绘图	杨园园	审核	
		核准	版本 A.0