

成品尺寸：60*80mm

 
80g书纸

单色印刷

风琴折


OPEN WEARABLE STEREO

sanag G30S

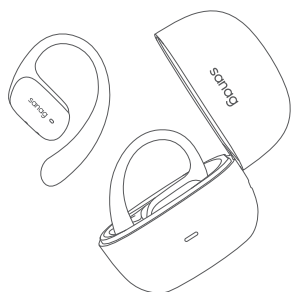

使用指南
User Guide

 ●产品概述

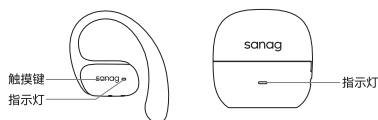


●按键功能操作

- 开机：1. 打开充电仓耳机自动开机，冰蓝灯快闪，连接后副耳熄灭，主耳灯慢闪；2. 长按MFB键3S手动开机。
- 关机：1. 耳机放入充电仓并合上盖自动关机；2. 长按MFB触摸键约7秒，冰蓝灯闪3下后熄灭。
- 配对：耳机开机后自动进入配对状态（与手机待连状态），主耳冰蓝灯慢闪。
- 接听：来电时，任意单击左右耳MFB触摸键。
- 挂断：通话中，任意双击左右耳MFB触摸键。
- 拒接：来电时，任意长按左右耳2秒MFB触摸键。
- 播放/暂停：任意单击左右耳MFB触摸键。
- 上一曲：双击左耳MFB触摸键。
- 下一曲：双击右耳MFB触摸键。
- 音量加：三击左耳MFB触摸键。
- 音量减：三击右耳MFB触摸键。
- 语音助手：任意长按3秒左右耳MFB触摸键松开进入语音助手，单击退出。
- 复位耳机：开机未连接手机时任意5击左右耳MFB键复位耳机出厂设置，复位成功冰蓝灯亮2秒后自动关机。
- 游戏模式/音乐模式：任意4击左右耳MFB键，进入低延迟模式，再次4击切换到音乐模式。

- 低电报警：耳机电量不足时 每隔3分钟提示一次低电报警音。
- 充电：耳机放入充电仓，仓对耳机充电，冰蓝灯常亮4秒灭掉。耳机充电中冰蓝灯常亮，充满灯灭，充电仓灯灭。给充电仓充电，充电仓冰蓝灯闪烁，充满冰蓝灯常亮。

●蓝牙操作

 - 蓝牙连接成功：
 1. 耳机进入蓝牙模式，手机搜索蓝牙配对名“sanag G30S”，点击连接即可。
 2. 耳机默认回连上一次设备。
- 蓝牙断开：
 1. 手动关闭手机蓝牙端，耳机进入蓝牙配对模式。
 2. 耳机与手机超距后断开，5分钟内回到有效距离范围，能正常回连手机，超过5分钟会自动关机。

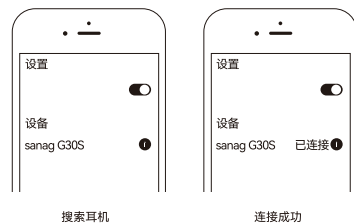


●规格参数

- 名称：OWS蓝牙耳机
- 型号：sanag G30S
- 蓝牙版本：V5.3
- 连接范围：≥10m
- 耳机电池容量：35mAh
- 充电仓电池容量：400mAh
- 输入：5V = 1A

●注意事项

- 切勿使用具有腐蚀性的清洁剂清理本产品。
- 切勿让本产品加热或靠近火源，如煮食炉。
- 切勿让本产品长时间受阳光直接照射。
- 切勿将本产品弃置于火中，避免发生爆炸。
- 切勿尝试拆开本产品作出任何修改，因为它并不包含任何维修组件。
- 切勿在雨中使用本产品。
- 如果长时期内不打算使用本产品，请您将它储存在干燥的环境中，并每月至少为耳机充电一次以延长寿命，避免极端的温度和灰尘。

 ●Product Overview

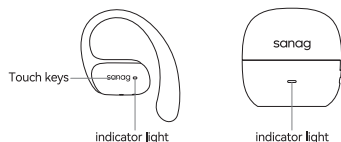


●Button function operation

- Power on: 1. Turn on the charging case and the earphones will automatically turn on. The ice blue light will flash quickly. After connecting, the secondary ear will turn off and the main ear light will flash slowly; 2. Press and hold the MFB button for 3 seconds to manually turn on the device.
- Shutdown: 1. Put the earphones into the charging compartment and close the cover to automatically shut off. 2. Press and hold the MFB touch button for about 7 seconds, and the ice blue light will flash 3 times before turning off.
- Pairing: After the headphones are turned on, they automatically enter pairing mode (waiting to be connected to the phone), and the ice blue light on the main ear flashes slowly.
- Answer: When receiving an incoming call, simply click the MFB touch keys on either ear.
- Hang up: During a call, double-click the MFB touch keys on both left and right ears.
- Reject: When receiving an incoming call, press and hold the MFB

- touch button on both left and right ears for 2 seconds.
- Play/Pause: Click the MFB touch keys on the left and right ears at will.
 - Previous song: Double click the MFB touch button on the left ear.
 - Next track: Double click the MFB touch button on the right ear.
 - Volume increase: Three clicks on the MFB touch button on the left ear.
 - Volume reduction: Three clicks on the MFB touch button on the right ear.
 - Voice Assistant: Press and hold the MFB touch button for about 3 seconds to enter the voice assistant, then click to exit.
 - Reset the earphones: When the phone is not connected and turned on, press any 5 MFB buttons on the left and right ears to reset the earphones to their factory settings. After a successful reset, the ice blue light will automatically turn off after 2 seconds.
 - Game mode/Music mode: Press any four MFB buttons on the left and right ears to enter low latency mode, and then switch to Music mode with four more clicks.
 - Low battery alarm: When the earphone battery is low, a low telegram alarm sound is prompted every 3 minutes.
 - Charging: Put the earphones into the charging compartment and charge them. The ice blue light will stay on for 4 seconds and turn off. During headphone charging, the ice blue light is constantly on, the fully charged light is off, and the charging compartment light is off. Charging the charging case, the ice blue light in the charging case flashes, and the ice blue light remains on when fully charged.

●Bluetooth operation

 - Bluetooth connection successful:
 1. When the earphones enter Bluetooth mode, search for the Bluetooth pairing name "sanag G30S" on the phone, and click to connect.
 2. The earphones default to being connected back to the previous device.
- Bluetooth disconnection:
 1. Manually turn off the Bluetooth end of the phone, and the headphones enter Bluetooth pairing mode.
 2. If the earphones are disconnected from the phone after exceeding the distance, they will return to the effective distance range within 5 minutes and be able to connect to the phone normally. If they exceed 5 minutes, they will automatically shut down.

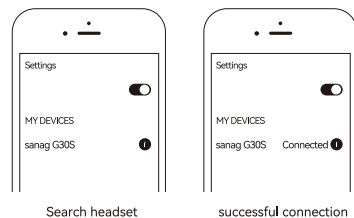

●Specification parameter

- Name: OWS Bluetooth headset
- Model: sanag G30S
- Bluetooth version: V5.3
- Connection range: ≥10m
- Headphone battery capacity: 35mAh
- Battery capacity: 400mAh
- Input: 5V = 1A

●Matters needing attention

- Do not use abrasive cleaning agents to clean this product.
- Do not allow this product to be heated or near fire sources, such as cooking stoves.
- Do not allow this product to be exposed to direct sunlight for a long time.
- Do not dispose of this product in the fire to avoid explosion.
- Do not attempt to disassemble this product for any modification, as it does not contain any repair components.
- Do not use this product in the rain.
- If you do not intend to use this product for a long time, please store it in a dry environment and arrive every month. Charge your headphones less than once to extend life and avoid extreme temperatures and dust.

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.