
 
C Settings

Wi-Fi

Move to [Settings] icon, press [ok] button to enter into system settings. You will see the menu on the right



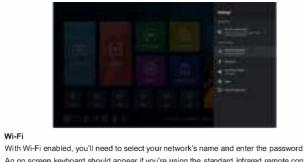



Etherne If you will use a network cable instead of Wi-Fi, please select this option [DHCP] instead



Troubleshooting Warning Under any circumstances, Never try to repair the device by pourself. It will void the warranty if any issue occur, read the following instructions on how to trouble should the device. If you are unable to reactive the issue, please consult your dealer for help.

Problem	Belution.
s alignation the TV	1: Check if the HDMI or AV same is securely connected. 2) Check If you have selected the correct input source on your TV.
wintol farm on year nart TV Rea	Other it the power commander is completely phaged into the DC socket of your Sinart TV Box. Other it the power supply is stable.
n na connectra dwort	 Make sure that the network cable is securely connected and the Ethernet works wol. Make sure that WP1 network is connected and the security key for the encrupted network is correct. Make sure that you select the correct IP address settings
enuta Control dives transporti	1) Make sure that the batteries are good. 2) Make sure that the distance between the senote control and your Smart TV Biol is so longer than 2 meters.
ome TV can rist splay ordina scream	Setup the screen display position of your Smart TV Box. Settings SoplayOraplay position





成品110x154mm,正反印刷,对折再对折。折页,切成品。