

封面

A10

 
Welcome Guide  
USER'S MANUAL

Customer Service

12-month limited warranty  
Lifetime technical support

Contact Email: loyfun.service@gmail.com

What's included

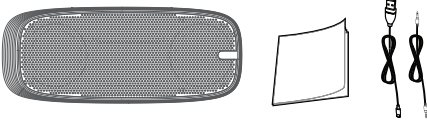


► The above pictures are just for reference only.

Attention


1, Use original or certified cables  
2, Don't expose to liquids  
3, Don't disassemble  
4, Avoid dropping  
5, Avoid extreme temperatures  
6, Don't listen to music for long time in high volume enviroment.

 At a Glance

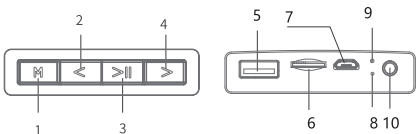


1	Power on / off / Multi-function button	6	SD card slot
2	Volume down / Previous track	7	Micro USB charging port
3	Play / pause & Answer / end call	8	Light
4	Volume up / Next track	9	Reset
5	USB	10	AUX in 3.5 Jack to jack

 Quick Start Guide

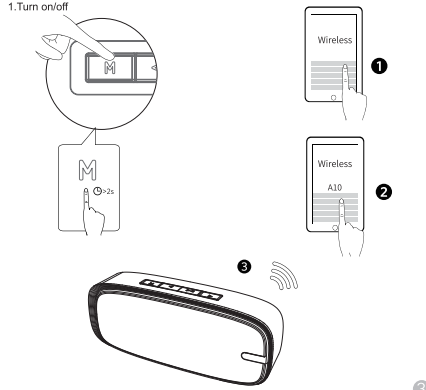

TWS Connect

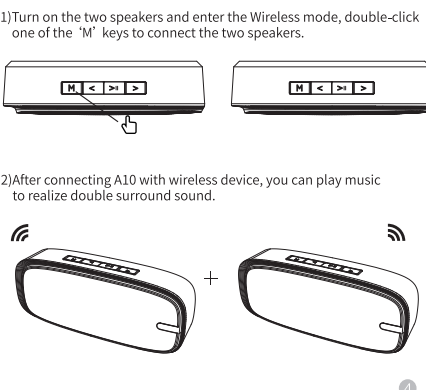 

Using Your Speaker

1. Turn on/off


Press and hold Power on / off button for 2 seconds, when LED ring around buttons rapidly flashing bule, speaker is in pairing mode. Press Power on / off button again to turn on / off the LED ring. Press and hold again to turn off speaker.

2. Select mode


Press M (Multi-function button) to select mode between Bluetooth Mode / AUX Mode / SD Card Mode.  
  
\*Inserting an SD card will automatically switch to SD card mode.


A. Wireless mode

1. Turn on speaker.  
2. Turn on Wireless on Smartphone or other devices.  
3. Find Wireless name in wait list and tap it for contection




Rapidly flashing blue	Pairing mode
Steady blue	Connected to a device


 Play / pause

 Answer / end call


Press Play / pause for a answering a coming call, double press to end the call

 Force disconnect Wireless


Press and hold play / pause to disconnect Wireless , speaker enters to pairing mode

 Volume up / down

Press to volume up/down

 Next track/Previous track

Press and hold for next/previous track

 When turned on, speaker will automatically connect to the last connected device if available. If not, speaker will enter pairing mode.  
  
To pair a different device, press and hoild play / pause button for 3 seconds to re-enter pairing mode. Then repeat the pairing steps.  
  
Having connection problems?  
Remove speaker from your device's Bluetooth history, ensure it is less than 3 feet away then try pairing again.  
  
B, AUX-In mode  
Connect speaker with provided 2 in 1 cable with Micro USB end, 3.5mm audio jack plugging other deice.  
Press M(Multi-function button) to enter AUX mode.  
When using AUX mode, control audio playback via the connected device.  
  
C. SD card mode  
In SD card mode, control audio playtrack as same as Bluetooth mode  
\* Support a class 4 or above micro SD card, up to 32GB  
\* support audio formats: MP3,WMA,WAV etc.

3. Charge your Speaker

Please charge your speaker when speaker gives tones .

Steady red	Charging
OFF	Fully Charged

Using the included USB cable to charge your speaker and make sure it is fully charged before first use.

Specifications

Input	5V/1A
Charging Time	2-3hours
Audio Output	5Wx2
Battery Capacity	1500mAh
Play Time (variesby volume leveland content)	≥10hours
Size	175x47x70mm
Range	33ft

FCC Caution

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.  
- Increase the separation between the equipment and receiver.  
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) this device may not cause harmful interference.  
(2) this device must accept any interference received, including interference that may cause undesired operation.

封底

蓝悦A10（六人行）说明书（第二版）

材质：128G双铜 双面印刷

展开后尺寸：325X65mm

折后尺寸：65x65mm

料号：Y.047.0846

-----

折线

—————

刀线