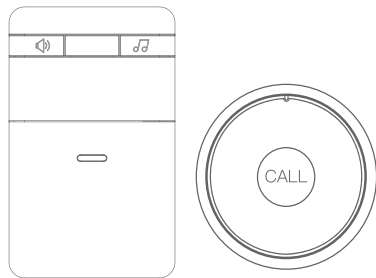 
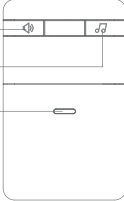 
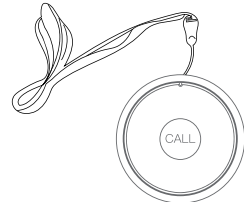 
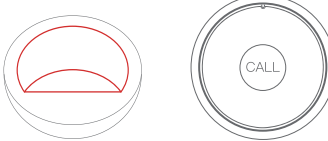 



版 本 号:\_\_\_\_\_

存档编码:\_\_\_\_\_

<div>User Manual For Caregiver Pager</div> <div></div>	<div>Product Introduction</div> <p>Wireless Caregiver Pager, integrating with 58 songs, adopts advanced wireless transceiver technology, strong microcomputer control system and high - quality voice processing technology with stable and reliable performance. Receivers and transmitters are paired wirelessly by codes. Easy to use (plug and play) plug the receiver into a power outlet. The call light reminds people with hearing impairments, especially the elderly, to take care of each other.</p>	<div><div>VOLUME CONTROL</div><div>MUSIC SELECT</div><div>LED INDICATOR</div><div></div></div> <div>Features</div> <div><div>1. 58 available tones</div><div>2. 5 adjustable volume levels (Including Mute Mode)</div><div>3. Memory function to retain settings when receiver is unplugged or off</div><div>4. Different tones can be set to different transmitters</div></div>	<div>Method 1: Hang on neck as Pendant</div> <div></div> <div>Method 2: Fixed with double-sided tape</div> <div></div>	<div>Operating Instructions</div> <div>GETTING STARTED</div> <p>Plug the receiver into the AC outlet . The receiver will beep once and LED light will flash in each color circularly to indicate ready to use.</p> <div>A. Select the receiver ring tone:</div> <div><div>1. Cycle FORWARD through the tones-short press [F] button repeatlly to choose desired ringtone</div><div>2. Cycle REVERSE through the tones-long press [R] button for 3 seconds ,until you hear a shortbeep sound and the tones will now cycle in reverseorder Press [F] button repeatlly to choose desired ringtone</div></div> <div>B. Setting the Volume:</div> <p>Press [V] button repeatlly to cycle through 5 volume settings ( Note: The volume changes to the largest automatically every time the receiver power on).</p>	<div>C. Pairing Additional Transmitters/ Accessories</div> <div>1. There are two options in pairing your receivers at transmitters/accessories.VARIABLE mode and FIXED mode.(Note: Caregiver Pager have been paired and set to default chime (Ding Dong) before leaving factory)</div> <div>FIXED MODE: Adding a transmitter/ accessory With a FIXED receiver ringtone:</div> <div>1. First, select the desired tone by following above operating instruction A . Select the receiver ring tone. Next, press and hold [F] and [R] buttons simultaneously on the plugged in receiver. The receiver will beep once and the LED light will light up- this indicates the receiver is in pairing mode and ready to pair with a transmitter or accessory</div>
<div><div>2. Next, short press the button to pair and trigger a transmitter to send a signal to the receiver. And you will hear and see:</div><div><div>① The receiver beeps twice and the LED light flashes twice , showing the transmitter is added successfully</div><div>② The receiver beeps once and the LED light flashes once, showing the transmitter has been added before</div><div>③ The receiver beeps three times and the LED light flashes three times , indicating no transmitters can be added any more. <b>Note:</b> There is a limit of up to 30 transmitters/ accessories that can be paired to a receiver</div></div><div>3. Next, press the receiver button [P] to exit out of pairing mode.(Note: The receiver will automatically exit the pairing status of adding transmitters if no action is taken in 20s.)</div></div>	<div>4. The ringtone is now FIXED. Now even if you change the receiver ring-tones- you will always have the desired ringtone with the transmitter.</div> <div>Clear All Settings- Unpair all transmitters/accessories from receiver</div> <div><div>1. First unplug the receiver.</div><div>2. Next, press and hold [F] buttons then plug in the outlet</div><div>3. Keep on pressing and holding the [F] button while the receiver is plugged in- you will start to hear continuous beeping and the LED light will flash ten times. Keep on pressing and holding the [F] button until the receiver gives a series of fast beeps and the LED light will give fast flashes as well.</div></div>	<div>When there is no more sound and light, the receiver and transmitters are now all reset. All transmitters and accessories are now unpaired</div> <div>Technical Parameters</div> <div><div>Power: 100 240V 50~60HZ AC</div><div>Standby current: &lt; 3MA( 220V AC)</div><div>Working current: &lt; 11MA( 220V AC)</div><div>Radio Frequency: 433MHz</div><div>Transmitter button battery: 3V CR2450</div><div>Operation range: ≦500 feet( in open area)</div><div>Working temperature : -20° + 60°</div><div>Working Humidity: ≦85 %</div></div>	<div>Contents</div> <div><div>Receivers(s)</div><div>Transmitter(s)</div><div>Double Sided Adhesive Tapes</div><div>User Manual</div><div>Silicone Protective Shell</div><div>Lanyard, CR2450 battery inside transmitter</div></div>	<div>Precautions</div> <div><div>1. Do not operate product with damaged cord or plug</div><div>2. Do not operate product if it has been damaged in any way</div><div>3. Do not throw or shake the product</div><div>4. Keep the product away from fire or explosion may occur</div><div>5. Before using the product, read all instructions and caution markings on the product, accessories and device using our product</div><div>6. Operating range will become shorter and the indicator quick flashes several times if battery in transmitter is at low power. Please try to change the transmitter battery . Battery type is CR2450 battery.</div></div>	<div>Warranty</div> <div><div>1.Our company provides 18 months of free warranty and lifetime maintenance services for the products, and guarantees 24-hour online service. Within 18 months from the date of purchase, damages caused by poor material or design defects of the product can be replaced or repaired free of charge. Repairs and replacements performed after 18 months will be charged the product cost</div><div>2. Information to be provided when contacting the seller for warranty:</div><div><div>(1) Product name</div><div>(2) Order number</div><div>(3) Fault description</div></div></div> <div><div>Made in China</div><div></div></div>

展开尺寸：390x85  
单页尺寸：65x85  
材质：128g铜版纸  
颜色：单色  
折成风琴折页样

品牌		彩盒物料编码		绘制日期				文件要求	
图纸名称	M529+F21说明书	内卡物料编码		公差说明	长	宽	高	打样 <div></div>	做货 <div></div>
尺寸	65*85mm	适用产品			0-2mm	0-2mm	0-2mm		
材质	128G铜版纸	印刷要求		部门审核		需求部门签字		总经理签字	
内卡 (内托) 尺寸		类型							
		软件版本	AI						
内卡 (内托) 材质		比列	AI原文档 1:1做						
		绘制人							

# FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ▶ -Reorient or relocate the receiving antenna.
- ▶ -Increase the separation between the equipment and receiver.
- ▶ -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ▶ -Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.