Color: Black

Mat'l: 85gsm WF paper

Oct. 29, 2020.

* FRONT

 



Model TW300

TIMEX DUAL ALARM CLOCK WITH WIRELESS CHARGING



For additional information, online registration, and exclusive special offers visit our website:



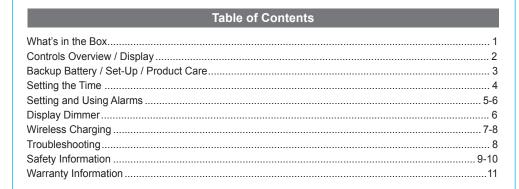

What's in the Box

This product ships with the following items. Make sure all are present.











3. Power adapter

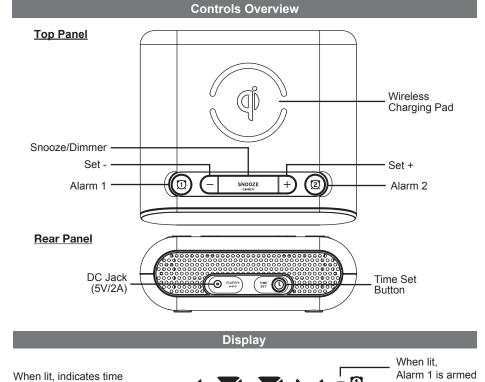

Alarm 1 is armed **-** ① Low Backup Battery Alarm 2 is armed

Backup Battery

Your new Timex Clock includes a built-in battery backup system that will maintain the time and alarm settings during a temporary power interruption. To install batteries:

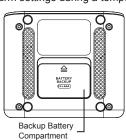


- 1. Open the backup battery compartment door on the bottom of the
- 2. Insert 2 AAA batteries (not included) into the battery compartment, making sure to match up with the +/- polarity marked on the unit.
- 3. Close the compartment door.

When the Low Backup Battery icon x appears on the clock display, it is time to replace the batteries.

Set Up

Connecting to Power Source

 Connect the included AC adapter to the DC jack located on the back of the unit and connect the other end to a working wall outlet.



Product Care

- · Place the unit on a level surface away from sources of direct sunlight or excessive heat.
- · Remove the plastic protective film from the clock display.
- · Protect your furniture when placing your unit on a natural wood and lacquered finish. A cloth or other protective material should be placed between it and the furniture.

Setting the Time

Press and hold the Time Set Button. The hour will flash on the display.



Press and release the +/- Buttons to adjust the hour.

The PM indicator will light to indicate PM time. There is no AM indicator.



Press and release the Time Set Button to confirm the hour. The minute will flash on the display.



Press and release the +/- Buttons to adjust the minute. (Press & hold for rapid adjustment.)

Press and release the Time Set Button to complete time setting.

Setting and Using Alarms



displayed is PM

Wireless Charging

Status Indicator

Press and hold either the Alarm 1 or Alarm 2. The hour will flash on the display.



Press and release the +/- Buttons to adjust the hour.

The PM indicator will light to indicate PM time. There is no AM indicator.



Press and release Alarm 1 or Alarm 2 to confirm the hour. The minute will flash on the display.

 


Press and release the +/- Buttons to adjust the minute. (Press & hold for rapid adjustment.)

Press and release the Alarm 1 or Alarm 2 Button to complete alarm setting. The Alarm 1 or Alarm 2 display icon will appear, indicating an alarm is armed.


Setting and Using Alarms (Continued)

RESETTING AN ALARM TO COME ON THE NEXT DAY



To silence a sounding alarm and reset it come on the next day at the same time, press and release the corresponding alarm button (Alarm 1 or Alarm 2).

 SNOOZING THE ALARM




Press and release the Snooze/Dimmer Button when the alarm sounds to silence it for 9 minutes. The alarm icon on the display will blink while the unit is in Snooze mode. Snooze can be used several times during alarm.

Display Dimmer

You can adjust the display brightness by pressing the Snooze/Dimmer Button during normal operation (when the alarm is not sounding)

 Press repeatedly to cycle through High, 3, 2, 1, or OFF.



IMPORTANT SAFETY INSTRUCTIONS

Please heed all warnings, read and follow all instructions and keep these instructions handy for future reference.

- 1. Do not use this product near water, and clean only with dry cloth. Stronger cleaning agents, such as Benzene, thinner or similar materials can damage the surface of the unit.
- 2. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions
- 3. Heat This product should be situated away from heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) that produce heat.
- 4. Only use attachments/accessories specified by the manufacturer.
- 5. Unplug this product during lightning storms or when unused for long periods of time.
- 6. Damage Requiring Service This product should be serviced by qualified service personnel when:
- Plug has been damaged.
- Objects have fallen into or liquid has been spilled into the enclosure.
- The unit has been exposed to rain. The unit has been dropped or the enclosure damaged.
- The unit exhibits a marked change in performance or does not operate normally
- . No naked flame sources, such as lighted candles, should be placed on this product.
- 8. Attention should be drawn to the environmental aspects of battery disposal.
- 9. This product is suitable for use in tropical and/or moderate climates
- 10. WARNING: To reduce the risk of fire or electric shock, do not expose this product to rain or moisture.
- 11. Do not dispose of batteries in a fire.
- 12. The mains plug of power adaptor is used as the disconnect device, it shall remain readily operable.

Battery Cautions and Tips

- Caution Risk of explosion if the battery is replaced by an incorrect type.
- · Only use the recommended/supplied batteries or equivalent.
- · Use alkaline batteries for longer life.
- Do not mix old and new batteries, and do not mix alkaline, carbon-zinc or rechargeable nickel-cadmium batteries.
- Insert batteries with proper polarity (+/-) as indicated.
- Remove exhausted batteries from product.
- Do not attempt to recharge non-rechargeable batteries.
- Do not open batteries or heat them beyond normal ambient temperatures.
- To prevent battery leakage or damage, remove batteries from a product if it will not be used for a month or longer. · Use extreme caution handling leaking batteries (avoid direct contact with eyes and skin). If battery leakage comes in
- contact with eyes, IMMEDIATELY flush the eye with lukewarm and gently flowing water for at least 30 minutes. If skin contact occurs, wash skin with clean water for at least 15 minutes. Seek medical attention if any symptoms occur
- Store in cool, dry, ventilated area away from hazardous or combustible material.
- Do not dispose of batteries in a fire.
- Follow applicable laws and local regulations for the disposal and transportation of batteries.

Wireless Charging


Supports:

- Qi certified phones (also works with plastic cases up to 3mm thick)
- · AirPods with wireless charging case

Place Qi certified device face up on the wireless charging pad as pictured below:





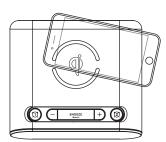



Remove metal protective or magnetic case from phone before charging. When charging phone, do not place magnetic-striped or other metal objects on the charger. Doing so could damage the object or this unit. Qi certified phones with metallic looking finishes will charge normally.

FCC Information

This equipment complies with ECC RF radiation exposure limits set forth for an uncontrolled environment

This device complies with Part 15 of the FCC Rules, operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including

interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void

the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no quarantee that interference will not occur in a particular installation. If this equipment does cause

harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Regrient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

 Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help
- This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

ISED Information

This equipment complies with IC RSS-102 radiation exposure limits set forth for an uncontrolled environment. This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

This device may not cause interference.

(2) This device must accept any interference, including interference that may cause undesired operation of the device. The device comply with ISED RF exposure requirement, users can obtain Canadian information on RF exposure and

This equipment should be installed and operated with a minimum distance of 20 cm between the radiator and your body. Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Cet équipement est conforme aux limites d'exposition aux radiations IC CNR-102 établies pour un environnement non contrôlé. L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

(1) L'appareil ne doit pas produire de brouillage;
(2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le L'appareil est conforme aux exigences d'exposition RF ISED, les utilisateurs peuvent obtenir des informations canadiennes sur l'exposition aux RF et la conformité.

Cet équipement doit être installé et utilisé avec une distance minimale de 20 cm entre le radiateur et votre corps. Tout changement ou modification non expressément approuvé par la partie responsable de la conformité peut l'autorité de l'utilisateur à utiliser l'équipement.

10

CAN ICES-3 (B) / NMB-3(B), CAN RSS-216 / CNR-216

Wireless Charging (Continued)

Check the wireless charging status indicator (located on the clock display) to monitor charging status:



Green Slow Blinking LED: Device is charging properly.

Green Solid LED: Device is charged

Amber Rapid blinking LED: Device is not charging properly. Reposition device.

Note: The LED indicator may continue to blink when iOS devices are fully charged.

Troubleshooting

1. The unit does not power ON.

The unit is not connected to AC outlet, the AC outlet has no power, or is controlled by a wall switch that is "OFF". Check AC outlet and wall switch.

2 Alarm does not come on

The alarm time AM or PM incorrectly set, Alarm was OFF, etc. Check alarm settings.

3. Unit shuts "Off" unexpectedly.

- a. A power surge has occurred, or the AC outlet has been disconnected.
- b. The AC outlet may be controlled by a wall switch that is turned OFF. Check AC outlet or wall

Limited 90 Day Warranty Information

Timex Audio Products, a division of SDI Technologies Inc. (hereafter referred to as SDI), warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of ninety (90) days from the date of original purchase.

Should this product fail to function in a satisfactory manner, it is best to first return it to the store where it was originally purchased. Should this fail to resolve the matter and service still be required by reason of any defect or malfunction during the warranty period, SDI will repair or, at its discretion, replace this product without charge. This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center authorized by Customer Service.

If service is required, please visit timexaudio.com/support for more information. A copy of the sales receipt is required to validate in-warranty coverage.

Disclaimer of Warranty

NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence or willful actions, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to digital media players, CD's or tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner.

This warranty is valid only in the United States of America and does not extend to owners of the product other than to the original purchaser. In no event will SDI or any of its affiliates, contractors, resellers, their officers, directors, shareholders, members or agents be liable to you or any third party for any consequential or incidental damages, any lost profits, actual, exemplary or punitive damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Your acknowledgment and agreement to fully and completely abide by the above mentioned disclaimer of warranty is contractually binding to you upon your transfer of currency (money order, cashier's check, or credit card) for purchase of your SDI product

> © 2020 SDI Technologies, Inc. All rights reserved Questions? Visit www.timexaudio.com

TIMEX is a registered trademark of Timex Corporation in the United States and other countries

TW300IB-102920-A