


## Front panel function

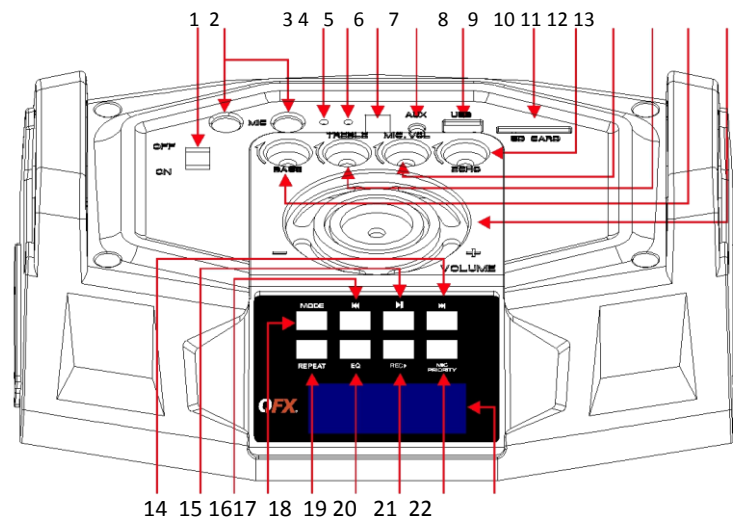

1. Power switch.
2. Wired microphone input .
3. The battery is full when the light turn green.
4. The battery is charging when this light turn red.
5. DC 9V IN : Power Adapter Charger Input
6. Auxiliary Audio Input (3.5mm socket)
7. USB Storage Input Port
8. SD Card Socket
9. Microphone Echo Effect Knob
10. Microphone Volume Knob
11. TREBLE knob.
12. BASS knob.
13. Main volume control knob.
14. Next track button.
15. Play/pause button.
16. Prev track button.
17. Mode select button.
18. Repeat button.
19. Equalizer button.
20. Recording and playback function keys.
21. Microphone Sound Priority Button (over music)
22. LED display, the current status.



## PBX-885 PORTABLE SPEAKER

FM RADIO RECEIVER  
AUDIO LINE (AUX) INPUT  
BASS AND TREBLE CONTROL  
  
WIRED MICROPHONE INPUT  
DIGITAL ECHO  
LED DISCO LIGHTS  
RECHARGEABLE BATTERY

## INSTRUCTION MANUAL

Before connecting, operating or adjusting the unit, please read instructions carefully and completely.

## SPECIFICATIONS

Power Output: 8W \* 2  
Frequency Response: 20Hz-20kHz  
Power input: DC9V  
P.M.P.O: 2000W

## ACCESSORIES

1. Manual x 1
2. Adapter x 1
3. AUX cable x 1
4. Speaker PBX-885 x 1

### CHARGING INDICATOR

During charging, the charging indicator light will turn RED.  
When charging is complete, the charging indicator light will turn BLUE.

### CONNECTING THE WALL CHARGER

1. Connect the wall charger to your speaker
2. When the battery is fully charged, disconnect the charger from the speaker first, then the wall charger from the wall.

*Note: The speaker can be used normally during charging*

### ON / OFF SWITCH

Press and hold the ON / OFF Switch to turn the speaker ON and again to turn the speaker off.

### VOLUME

Turn the volume knob anti-clockwise to decrease the volume and clockwise to increase the volume.

### PREVIOUS / NEXT BUTTON

To search for a specific song to playback, press the PREVIOUS / NEXT button to either go forward or backwards through track keys.

### LINE IN JACK

1. Connect a 3.5mm Audio Cable to the LINE IN JACK of the unit and to your external audio devices eg. MP3 player or Discman etc
2. Then select the LINE feature by pressing the MODE button.
3. Begin playback via your external devices.

### FM RADIO

1. Select FM (mode) feature by pressing the MODE / SELECT button.
2. Press the PLAY / PAUSE button to begin automatically searching and saving available radio stations.
3. Press PREVIOUS / NEXT button to select a specific radio station.

NOTE: PLEASE MOVE YOUR SPEAKER, TO ENSURE BEST RECEPTION

### USB / SD JACK

1. Insert USB drive or SD card for playback
2. Playback will begin automatically
3. Press the PLAY / PAUSE button to pause and play
4. Press PREVIOUS / NEXT button to select a specific track for playback.

### BLUETOOTH

1. Select the BT (Bluetooth) feature by pressing the MODE button
2. Turn the Bluetooth feature on, on your portable device
3. Find and pair with your "QFX PBX-885" speaker
4. Press the PLAY / PAUSE button to begin playback

### MIC IN JACK

Plug in the wired microphone.(not included) The microphone is then ready to use.

### RECORDER FUNCTION

1. Insert a USB Drive (Thumb Drive) and plug in your microphone
2. Press the REC/REPLAY button to begin recording.
3. To stop recording, press the REC/REPLAY button again
4. To playback a recorded file, Long press the REC/REPLAY button (while your thumb drive is inserted) then press the PREVIOUS and NEXT buttons to select a track for playback.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.