TM-7 (Plus) 使用说明书

使用前须知

- •请勿在易爆环境(如煤气、尘埃、蒸汽等)下使用车台

- 它放在不平稳的表面上

的了解和认识是很重要的。

本指南仅供参考,不构成任何形式的承若,产品请以实物为准,

- 在加油或停车于加油站时,请关闭车台
- 不论有任何理由都不可改装或调整本机
- 热器具附近; •请勿将车台放在极度多尘、潮湿及水溅之处,也不要将
- 维修仅可由专业技术人员进行,请勿自行拆装。

请仔细阅读上面内容,使用者对使用车台的一般危险性

- 或对电池充电
- 请勿让车台受到长时间的阳光直射, 也不要将它放在加

SIM卡切换键 2/3G网络切换键 GPS天线接口

熟悉本机


DC电源接口

P3客户自定义键


P4客户自定义键

配件安装

◆ 插入SIM卡,盖上SIM卡盖并锁紧螺丝

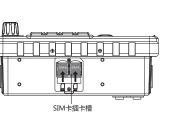

② 顺时针旋转,直到旋紧为止,注意对应天线

 


5 插入SIM卡,盖上SIM卡盖并锁紧螺丝

GPS天线接口 外置主天线接口(保留按键:客户要求外置天线时使用)

4 插入GPS天线/外置主天线

 3 插入DC电源



基本功能

首次开机

一般为1234。

确保电源按接插好。开机:按住开机键按钮,直至显示 屏出现开机的画面。某些SIM卡会有PIN码保护。如果 有输入PIN码提示,输入你的PIN码。PIN码的初始密码

网络制式 GSM/GPRS/Edge: B2/B3/B5/B8 WCDMA/HSPA: B1/B2/B5/B8 FDD-LTE: B1/B3/B7/B8/B20 TDD-ITF: B38/B40/B41

屏幕解锁

短按挂机键锁定屏幕,再次短按开机键唤醒屏幕。

系统提示栏

打开提示栏的方法:用手指按住屏幕顶端的状态栏,拽 住弹出的下拉框向下拖动,即可打开提示栏。系统提示 栏显示当前开启的应用程序,点击正在运行的列表 栏,可快速切换到相对应的应用程序。 友情提示:开 启飞行模式后,无法拨打电话。此外,系统提示栏还会 显示系统当前的通知 (如未读短信等), 以及正在运行 的应用程序。点击 图标,可查看图标列表,点击可 快速开启相应功能。

个性化设置 在主屏幕的空白地方长按可进入个性化设置界面。在个

性化设置界面,可以设置壁纸,添加小部件,以及进行 系统设置。 图标的移动删除

长按屏幕中的菜单或小部件图标,可进行相应图标的移 动或删除操作。

恢复出厂设置

在设置菜单中选择"备份和重置"可进行恢复出厂设

警告:恢复出厂设置会将手机重设为其初始出厂状态,即清除系

功能介绍

点击进入信息界面,将显示接收到的信息列表,可以进 行编辑、发送、删除信息等操作。

可让您随时访问您的日历和事件。您可以分别查看日 历 ,也可以同时查看若干个日历。 进入顶部选项是按 日、周、月方式查看,开启以周(月)查看,显示的 日历将以周(月)的方式呈现,更方便您查 看日程表 和新增事项

进入菜单根据需要对对讲机进行个性化设置。包括无线 和网络、情景模式、显示、存储、电池、应用、位置信 息、安全、语言和输入法、备份和重置、添加账户、日 期和时间、辅助功能、打印、开发者选项、关于手机

平台对讲使用简介 1.输入平台帐号和密码



①进入对讲平台,选择联系人或群组,按住手咪PTT键

开始对讲



②松开PTT键结束通话

.用户根据平台配置平台服务器IP地址,点击登录进入

对讲平台



①可通过音量键调节声音大小

②可通过滑动音量条调节声音大小

@Release PTT to finish the talk

③Receive message

3. Volume Adjustment



4.当遇到紧急情况按SOS键2秒自动报警

6.退出对讲平台按返回键回到主界面

联系人或群组

5.P1/P2/P3/P4为客户自定义按键,用户可定义快速

安全信息

保设备性能最佳,并避免出现危险或非法情况.

在使用操作设备前,请阅读并遵守下面的注意事项,以确

电子设备

有文明规定禁止使用无线设备的场所,请勿使用设备,否

则会干扰其他电子设备或导致其他危险. 易燃易爆区域 在加油站(维修站)或靠近易燃易爆物品,化学剂等任何易

燃易爆区域,请勿使用并设备,设备可能引起爆炸或起火. 操作环境

- 请勿在多灰、潮湿、肮脏或靠近磁场的地方使用设 备,以免引起设备内部电路故障。 ● 请勿在雷雨天气使用本设备,雷雨天气可能导致设备故
- 障或电击危险。 请勿将设备放置在阳光直射的地方过久。
- 请避免设备及其配件雨淋或受潮,否则可能导致火灾或
- 请勿将设备靠近热源或裸露的火源,如电暖器、微波 炉、烤箱、热水器、炉火、蜡烛或者其他可能产生高温
- 配件要求 • 勿使用未经认可或不兼容的电源、充电器或电池,可能
- 只能使用设备制造商认可且与此型号设备配套的配件

引发火灾、爆炸或其他危险。

如果使用其他类型的配件,及引发意外损坏设备,违反 本设备的保修条款.

维护和保养

- 清洁和维护本设备之前,先停止使用本设备,关闭电 源,并断开于其他设备的所有连接。 ● 当车台不使用时请将附件插孔盖盖上。
- 清洁车台外观的灰尘时,请使用中性洗涤剂(不能使用 强腐蚀性化学药剂)进行擦拭。
- 请保持设备及其配件干燥。请勿使用微波炉或吹风机等 外部加热设备对其进行干燥处理。

TM-7 (Plus) User manual

感谢您选购我们的机器

Instructionsbefore use: • Do not use the mobile radio or charge the

not disassemble by oneself.

- battery in the explosive environments (such as gas, dust, steam, etc.); • In the gas or parking on the gas stationplease
- be modified or adjusted for any reason; Please don't let the mobile radio stand in sunlight directly for a long time, or put it nearby the heating appliances;

turn off the mobile radio; The machine can not

moistureand water splashing places, and do not put in uneven surface. • Maintenance can only be carried out by professional and technical personnel, Please do

Do not place mobile radio in extremely dusty,

Security:


Please read this user manual carefully. It is very

important for users to understand and be familiar with the general danger of using.

Customized button


Machine Chart:

GPS antenna interface DC power interface External main antenna interface(To Reserve)

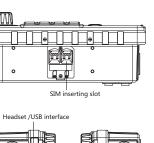


Installation:


Insert the SIM card, cover on the SIM holder and tighten

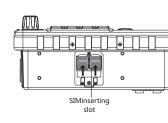

 
Rotate clockwise until the antenna is tightened. and pay attention to the antenna.




3 Connect with the power supply.

 

 Insert GPS antenna / external main antenna.



6 Plug in the microphone.

 

Basic functions: First boot:

Make sure the power is plugged in. Boot: press and hold the button until the screen appears on the screen. Some SIM cards will have pin code protection If there is an input pin code prompt, please input your PIN code. The initial password of PIN code

FDD-LTE: B1/B2/B3/B4/B5/B7/B8/B12/B13/B17

Network GSM/GPRS/Edge: B2/B3/B5/B8 WCDMA/HSPA: B1/B2/B4/B5/B8

Unlock the screen Press the hang button to lock the screen, and then

click the buttonagain to wake up the screen. System prompt bar

The way to open the prompt bar: press on the top of the screen, grabbedthe pop-up drop-down box drag down to open the prompt bar. The system prompt bar displays the currently opening applications.Click on the running list bar can quickly switch to the corresponding application

Friendly note: You can't dial the phone when you

column displays the current notifications of the

open the flight mode. In addition, the system prompt

system(the unread text messages,etc.),and running applications. Click this icon read can view icon list.Click it can quickly open the corresponding function. Personalization long pressin the blank space of the main screen can

access to personalized settings interface. you can set wallpaper, add widgets, and set the system.

Long press the menu in the screen or widget icon, the

Factory Reset

corresponding icon can be moved or deleted.

then the factory settings can be restored.

Functions:

list of message received, you can edit, send, and

any time. You can view the calendar respectively. You can also view several calendars at the same time. Go to the top of calendar to option that thecalendar viewed by day, week, or by month. Open the week (month) toview, the calendar will be displayed by week (month) way. It's more convenient for you to look at calendar and new

Settinas

according to the need. Including wireless and network, contextual model, display, storage, battery, application, location information, security, and language and typewriting, backup and reset, add account, date and time, the auxiliary function, print, developer options, about mobile phones, etc.

The user configure IP based on the platform server and

Move or delete Icon

Select "backup & reset" in the settings menu,and

Warning: restore the factory settings will reset the

Click into the message interface, it will display the

delete message. Calendar It allows you to access your calendar and eventsat

Enterthemenu to personalize the mobile radio

Operation guide 1.Input account and password.



①Access to intercom platform, choose the contact or group, press microphone PPT to talk.



②Adjust volume via sliding volume ba

(1) The radio volume can be adjusted by volume

4.It will alarm automatically after 2 seconds when emergence and pressing SOS button.



5.P1/P2/P3/P4 keys are customized, you can define quick contact or group.



6. Press return button to exit platform and back to the main interface.



security information:

Before using the equipment, please read and follow the precautions as below, to ensure the best performance of equipment, and avoid dangerous or illegal situations. Electronic equipment.

Where there are civilized regulations prohibiting the use of wireless devices, please do not use the equipment, otherwise it will interfere with other electronic devices or lead to other dangers.

The flammable and explosive area.

equipment, equipment may cause fire or explosion Operating environment • Please do not use equipment in dusty, humid, air dirty or near the magnetic field, so as to avoid internal circuit fault.

flammable and explosive materials, chemicals and

any other explosive areas, please do not use the

- Please do not use the equipment in thunderstorm weather, thunderstorm weather may cause equipment failure or electric shock risk • Do not place the equipment in sunlight directly for a
- Please avoid equipment and accessories rain ormoisture, otherwise it may lead to the risk of fire or electric shock • Don't put the equipment near the heat source or the
- exposed fire source, such as electric heater, microwave oven, oven, water heater, fire furnace, candle or other places where high temperature may occur. Accessories requirements • Do not use an unapproved or incompatible power
- explosion, or other hazards. Please only use the accessories approved by the equipment manufacturer and equipped with this equipment. if using other types of accessories, and it will occur accidental damage to the equipment, Also violate warranty clause of the equipment.

source, charger or battery, which may cause fire,

Maintenance Service:

- Firstly, stop using the equipment, turn off the power supply, and disconnect all the connections on other • When you do not use the mobile radio, please cover
- radio, please use neutral detergent (no strong corrosive chemicals) to wipe it. Please keep theequipment and accessories dry
- Please do not use the microwave oven or hair dryer and other heating equipments for drying on it.

• Before cleaning and maintaining the equipment,

the socket Jack interface. When cleaning the dust on the exterior of the truck

phone to its initial factory status, that means clean This guide is just for reference only and does not Thank you for purchasing our machine the system, application data and settings, including In the gas station (maintenancestation) or near constitute any form of commitments. downloaded applications.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.