
Product Colour, Material & Finishing Specfications					
Product Model 产品型号	TB20	Brand 品牌	中性	Job No. 图档编码	3-608TB200690A0001
Product Type 产品类	无线充电器说明书	Description 描述	/	Revision 版本号	
Dimension 尺寸	85*65mm	Original Designer 原设计师		Date 日期	2019.9.9
Scale 比例	1:1	Technology ⊤#	128g哑粉纸 双面四色印刷	Verifing 审核	/

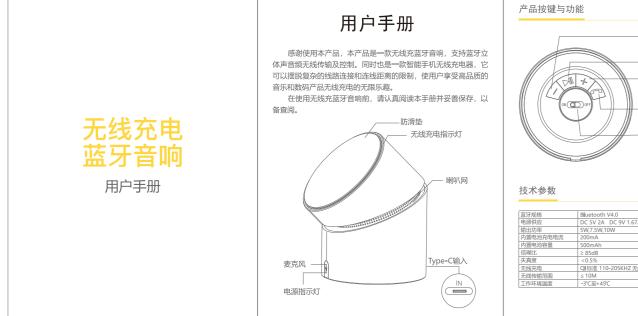



放音乐。









击" 🕜 "键或直接手机挂机。 ② 手机与音响蓝牙连接状态下,双击" 🏈 " 键一次即可回拨最新 * 无线充蓝牙音箱来电提示音为音响本身固有提示铃声,并非手机

• 注意防水, 防高温, 严寒地区使用也会导致产品性能下降。 • 请勿堵塞机体上的喇叭网。 • 如长时间不用,请在2-3个月时间给内置电池充一次电,防止电 池自闭或漏电引起不能正常使用本机。 • 不使用时,请把电源开到OFF关。 • 如出现故障请送修,请勿自行拆装。 • 请将本产品置于通风位置充电。




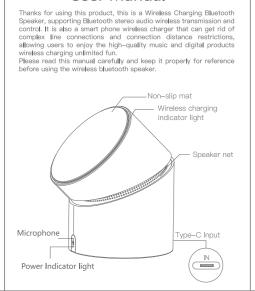

User Manual

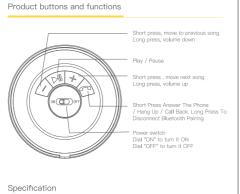



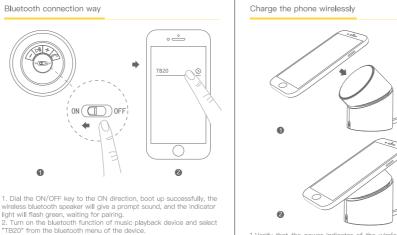

wrieless bluetooth speaker will give a prompt sound, and the indicator light will flash green, waiting for pairing.

2. Turn on the bluetooth function of music playback device and select "TB20" from the bluetooth menu of the device.


3. Click" ▶ 1 button once Or turn on music on a bluetooth device that plays music

4. Under bluetooth connection, long press" ♣ 7, the bluetooth speaker makes a "drip" sound, represent the bluetooth is disconnected and the green light flashes, waiting for the next pairing.

4. Click" − "button for the previous song, long press is reduce the volume.

4. Click" − "button for the next song, long press is increase volume. 1.Verify that the power indicator of the wireless charging bluetooth speaker is green and in the connected power state.

2.Place the phone with wireless charging function on the wireless charging bluetooth speaker anti-slip mat, the charging prompt light turns blue, find the correct charging position and start charging. When the charging light flashes alternately blue and green, it means that the mobile phone is not in the correct position. Please rearrange the mobile phone until the standby indicator lights only show blue, at this time, the wireless charging indicator will also turn on a circle of blue light.

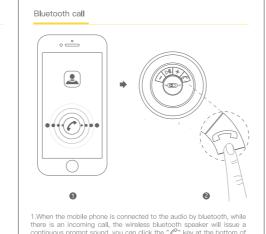

1. When the mobile phone is connected to the audio by puletooth, while there is an incoming call, the wireless bluetooth speaker will issue a continuous prompt sound, you can click the "p" key at the bottom of the stereo or directly answer the phone, the user needs to face the audio when making a hands—free call, it is better to keep within 30cm of the microphone. After the call click "p" button or hang up the phone directly.

of the micropnone. After the call click "" button or rang up the pnone directly.

2.When the mobile phone is connected to the audio by bluetooth, double-click "6" button once, then can call back the latest phone call.

* The call prompt tone of the wireless bluetooth speaker is the inherent prompt ring tone of the audio system, not the ring tone of the mobile phone.

- will also lead to product performance decline.

 Do not block the speaker net on the body.

 If it is not used for a long time, please charge the built-in battery once within 2-3 months to prevent the battery from self-closing or leakage, which may cause the normal use of the unit.

 Please turn OFF the power when not in use.

 If there is a fault, please send it for repair. Please do not disassemble it by yourself.

 Please charge the product in a ventilated position.

 Bluetooth Specification Power Supply Output Power Built-in Battery Charging Current Built-in Battery Capacity

FCC Warning:

to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition

without restriction.
FCC RF exposure statement:
The equipment complies with FCC Radiation exposure limit set forth
for uncontrolled environment. This equipment should be installed and
operated with minimum distance 20cm between the radiator and your