

USER MANUAL



Model: DE043NLB

Description: Digital Podium

Scan QR code to visit the product page:



FCC ID: 2ASCB-DE043NLB

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes/modifications to this equipment not approved by George Patton Associates could void the user's authority to operate the equipment.

Operating Instructions for Digital Signage

Note: Before using the product, please read the instructions carefully! Do not attempt to disassemble this product. If the product does not work properly, please call our Customer Service Department at 1-844-221-3393.



Contents

Features	3
Safety Warnings and Precautions	3
Assembly and Connection	6
Packing List	е
Description of Parts for Floor Standing Version	7
XLR Function	9
HDMI-input Function	10
Remote Control of the LCD Screen	12
Installing batteries for the remote control	12
Precautions for using the remote control	12
Description of remote control buttons	12
Description of Basic Operation	13
Power on/Standby	13
Interface and Home Screen	13
Description of Wallpaper Switch	14
File Manager	14
Local Settings	15
Status of Menu bar	16
DiViEx APP Introduction	16
System requirements	16
How to upload media files	16
Settings	18
Edit picture	18
Music	20
Factory Reset	20
Screen Rotation	21
Choose System Language	22
Technical Specifications	23
Troubleshooting the Digital Signage	26
Cleaning and Maintenance	28
Names and Contents of Toxic and Hazardous Substances or Floments in the Brodust	20



Features

- 1.Embedded with Android 11 smart operating system and unique UI design, bringing you a more convenient operation and better visual experience.
- Supports USB mouse and keyboard, allowing easy manipulation like a computer. Using a mouse for set up
 is recommended.
- 3.Built-in Wi-Fi module, high-capacity memory and high-capacity cache, making it smoother to watch 1080P HD movies and play big games.
- 4.High-quality LCD screen as the display, with no flicker, low radiation, greatly reducing eye fatigue, eye protection, high brightness, high contrast, and wide viewing angle; ultra-fast response time greatly reduces ghosting of fast moving images.
- 5.Progressive image processing and industry-leading motion compensation technology improve the flickering and blurring in the edges of motion picture.
- 6.Dynamic contrast technology can significantly improve the clarity and contrast of various screens.
- 7. Multi-channel USB interfaces, supporting HD media streaming.

Safety Warnings and Precautions

Thank you for purchasing the high-performance multi-functional LED backlight Digital Signage from Displays2Go. We have considered the factors to ensure personal safety in product design and have tested rigorously at the factory. However, improper installation and use may result in electric shock and fire. In order to safely use, maximize performance of the unit and extend the life of the product, please read and follow all instructions carefully before using the product.

Keep the instructions for future reference.

We strongly recommend using a surge protector, or a power strip with internal circuit breaker to prevent damages to the digital signage.

Symbol Legends:

- ⚠ Warning: May cause personal injury or death
- O The operation is prohibited
- The operation must be executed

If any of the following occurs:

- · Power outage or instable voltage.
- Abnormal sound or smell from the unit.
- · AC power cord is damaged.
- Digital Signage is damaged due to drop, knock or impact.
- Any liquid or foreign matters fall into the enclosure.

Turn off the Digital Signage immediately, pull out the plug from the power outlet, and ask the authorized personnel for maintenance timely.

O If coal gas or other flammable gas leaks, do not pull out the plug of the LCD Digital Signage or other electrical appliances; instead, turn off the gas valve immediately, and open the doors and windows quickly.



⚠ WARNING

- O Do not use power supply other than AC 110V, 60Hz.
 - Cut off the power supply before connecting or disconnecting any cables.
 - Do not place the Digital Signage on any instable positions, or else it may be damaged or cause fire.
 - Do not place the Digital Signage in the positions such as:
 - 1. The environment subject to direct strong sunlight, moisture, extreme temperature or too much dust;
 - 2. The environment with flammable or explosive materials;
 - 3. The environment with flammable or corrosive gases;
 - Do not use damaged or inappropriate power outlets, and ensure that the plugs and outlets contact properly.
 - Do not let dust or metal deposits adhere to the plugs and outlets.
 - Do not damage the power cords:
 - 1. Do not modify the power cords;
 - 2. Do not place heavy objects on the power cords;
 - 3. Keep the power cords away from heat source;
 - 4. Do not pull the cord to remove the plug.
 - Do not connect too many plugs to one outlet in parallel, or else it may cause fire due to
 excessive power consumption.
 - Do not approach the Digital Signage with open flame (e.g. a lighted candle), or else it may cause electric shock or fire.
 - Do not put any sharp objects, metal or liquid into the vents or let them touch the signal terminals to avoid short circuit, product damage, and electric shock.
 - The openings in the enclosure are designed for ventilation and cooling, to ensure long time reliable running of components inside the enclosure and prevent overheating. Do not block the openings when place the unit.
- On not touch the plugs with wet fingers, or else it will cause electric shock.

Do not use the Digital Signage in stormy weather, especially when there is lightning; instead, please disconnect the power and antenna plugs to avoid lightning strike.

O Do not disassemble the Digital Signage without permission, or else it may cause electric shock or fire. Please ask qualified technician for repair.



⚠ CAUTION

- Do not let children climb onto the Digital Signage.
- Keep the small parts away from children to prevent them from swallowing.
- If the Digital Signage won't be used for a long time, please turn it off and pull out the power plug.
- To adjust the position of the Digital Signage, please disconnect all power cords and move slowly to avoid tip over.
- Do not scratch or knock the LCD with hard object, or twist and squeeze the LCD.
- Do not turn on the unit immediately when it is moved from a place with low temperature to high temperature, or else it will cause condensation and malfunction.
- Before cleaning the Digital Signage, please pull out the power plug; wipe with soft cloth; do
 not use industrial chemicals; prevent foreign matters from entering the machine. Improper
 cleaning (such as cleaning solution, water) may damage the product, erase the printed
 information, and even cause damage of the components if fluid flows in, resulting in machine
 failure.
- If the unit displays the same screen for a long time or the moving picture has fixed text or
 icon, it will leave ghosting on the screen and won't disappear when the unit is turned off; it is
 normal and isn't covered by the warranty.
- The power of the Digital Signage can be cut off by pulling out the plug.
- If the LCD screen ruptures and the liquid splashes on the skin, please rinse for 15 minutes with clean water immediately, and consult your doctor.
- To carry the Digital Signage with hands, please grab and hold the edges; do not apply
 pressure on the panel.
- Use the Digital Signage properly: Use in proper lighting conditions; insufficient lighting or long time watching will impair your eyesight.
- When the plug or coupler is used as disconnection device, it should be easy to operate the
 device.
- Insert the plug into the outlet properly, or else it may cause sparks and fire.
- The technical specifications printed herein and on the packaging are subject to change without prior notice. The Manual may be slightly different from actual operation, and the latter is applicable.




Assembly and Connection

Parts List

Paits List		
Accessory	Picture	Qty
Remote control	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	1
Power Cord	*	1
User manual		1




Description of Parts for Floor Standing Version

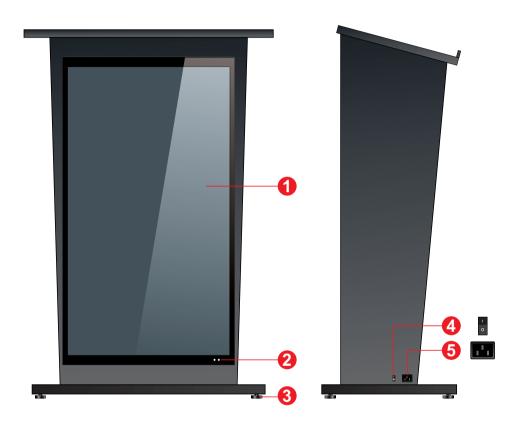

- 1 LCD Screen
- 2 IR Indicator
- Rubber pad
- 4 On/off switch
- **5** Power cord



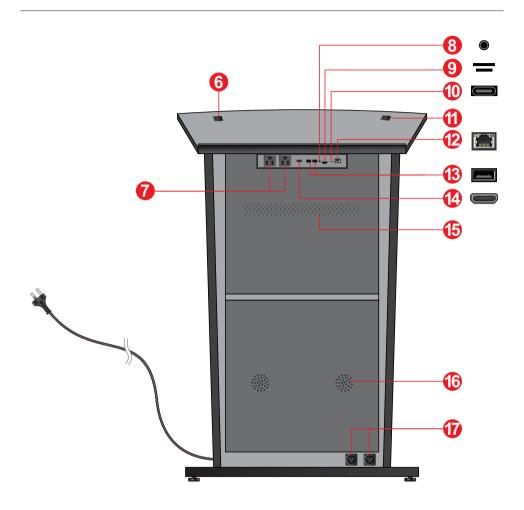

- 6 XLR Inputs
- Inputs ① Type-C port
- 4 HDMI Input Port

- **AC** outlet
- **11** XLR Inputs
- 15 Heat exhaust hole

- 8 Audio output port
 - RJ45 port
- 16 Speaker


- TF(Micro SD) port
- (B) USB port
- **1** Dual XLR Outputs

CAUTION: Disconnect the power plug before assembling or disassembling the unit!



XLR Function

- 1. Insert the microphone into the XLR input (L) or (R) socket;
- 2. Plug the XLR cable of PA system into the XLR output (L) /(R) port accordingly as the below diagram showing.

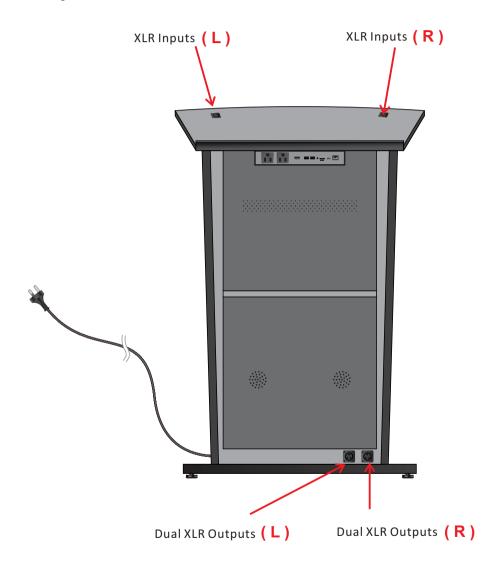



HDMI-input Function

A. How to enter

- 1. Connect another media player or PC via HDMI Port on the device.
- 2. Click the Main Apps button " in the Home page (Fig. 1)



Fig. 1

3. Click the MENU on the remote control, the Main Menu interface pops up, select the "Source" and

press $\ensuremath{\text{OK}}$. Click the "HDMI" and press $\ensuremath{\text{OK}}$. (Fig. 2 &3)





Fig. 2 Fig. 3



4. shows the display interface of connections PC.

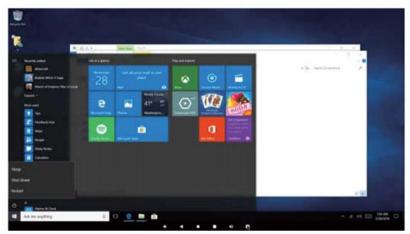


Fig. 4

B. How to quit

- 1. Click the MENU on the remote control the Main Menu interface pops up, select the "Digital signage" and press OK. (Fig. 1)
- 2. Back to the main interface (Fig. 2)



Fig. 1



Fig. 2



Remote Control of the LCD Screen

Installing batteries for the remote control:

Remove the battery cover and insert two AAA batteries (1.5V). Ensure that the battery polarity matches the "+"/"-" marks in the battery compartment of the remote control.

Precautions for using the remote control:

- Aim the remote control at the receiver window. Do not place any object between the remote control and the receiver window to avoid interference with the normal operation.
- Keep the remote control away from violent vibration. In addition, do not set or place the remote control in direct sunlight, or else the remote control may be deformed by heat.
- The remote control may be invalid when the receiver window of the unit is in direct sunlight or strong lighting; in this case, please adjust the angle of the lighting or the unit or approach the receiver window to use it.
- The distance of remote control will be shortened if the battery voltage is insufficient; in this case,
 please replace with new batteries; if the remote control won't be used for a long time or the
 batteries are run out, please take out the batteries to avoid corrosion due to battery leakage,
 which will damage the remote control.
- Do not use batteries of different types or mix new batteries with old ones. Always replace the batteries in pairs.
- Do not put the batteries in fire, or charge or disassemble them, or charge, short circuit, disassemble, heat or burn used batteries. Please dispose of waste batteries in accordance with local environmental regulations. Do not expose the batteries in overheated environments such as sunlight and fire.

Description of remote control buttons:

(b) Power switch

To show the Source menu

Mute

Turn down the volume

Turn up the volume

To move the cursor up

To move the cursor left

To move the cursor right

To move the cursor down

OK Play programs; confirm selection

Display indication

Home page

Back

MENU To show the main menu

SETUP To set up OSD menu

0-9 Input numbers





Description of Basic Operation

Power on/Standby

Insert the power plug into the outlet. If the Digital Signage has the switch button "I", turn it on. In power on state, press the " υ "button on the remote control, and the Digital Signage enters standby state.

Interface and Home Screen

After power on, the machine will launch home screen, as shown below:

Icon	Function	
	App Drawer	
٥	Back	
0	Home page	
	Background applications	
	Sound -	
	Sound +	





Description of Wallpaper Switch

We suggest using a mouse to change the wallpaper.

Connect a mouse with the digital panel through USB port, then follow the steps below:

- 1. Click "Setting"
- 2. At the setting menu, click "Display"
- 3. At the Display setting menu, click "Wallpaper", then choose a folder.
- 4. Then select an image you would like to set up as background.
- 5. Confirm the selection by clicking "Set wallpaper".

File Manager

- 1. Click the Main Apps button "(iii)" in the Home screen to enter the "APPS" menu interface (Fig. 1);
- 2. Click the "Explorer" icon in the "APPS" menu interface (Fig. 2) and enter "Explorer" menu (Fig. 3);
- 3. Choose storage in the "Explorer" menu to read the files from different devices.

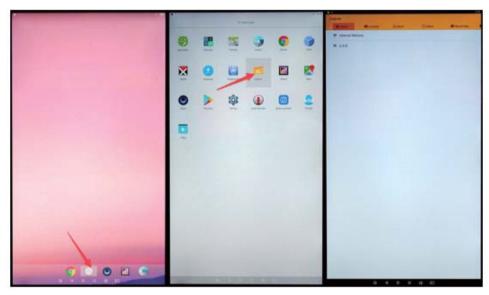


Fig. 1 Fig. 2 Fig. 3



Local Settings

- 1. Click the App Drawer icon " (iii) " in the Home page to enter the "APPS" menu interface (Fig. 1);
- 2. Click the "Settings" icon (Fig. 1) and enter "Settings" menu (Fig. 2);
- 3. Click "Wi-Fi" and choose options then set up the WIFI connection (Fig. 3).







Fig. 1

Fig. 2

Description of Settings Interface (shown on the right)

Icon	Function
~	WIFI switch
*	Bluetooth
0	Data usage
•	Display
	Notifications
4 D	Sound
=	Apps
97	Screenshot Setting
	Storage
8	Battery
2	Memory
-	Users
9	Location
a	Security
	Accounts
G	Google
(Languages & input
•	Backup & reset
0	Date & time





Status of Menu Bar

- 1. Click the setting (Fig. 1)
- 2. At the setting menu click the display menu (Fig. 2);
- 3. At the display setting menu unselect the display navigation check box. (Fig. 3)

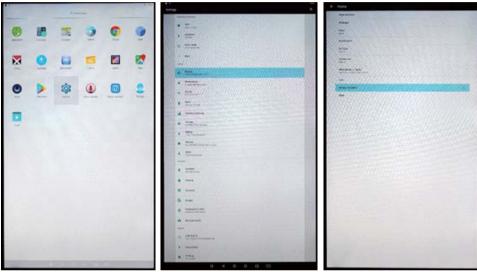


Fig. 1 Fig. 2 Fig. 3

DiViEx APP Introduction


System requirements:

Step 1: Before using the APP, make sure your device meets or exceeds the following system requirements:

CPU	RK3288
Operating system	Android 7.1

How to upload media files:

 Step 2: Plug in your USB drive to the computer. Open the drive in Windows Explorer and create a new folder, rename it "MediaFolder". As shown below:





Open "MediaFolder", create 3 subfolders, and change their names to "Images", "Videos", "Music". Copy the media file to be displayed, image to "Images", video to "Videos", Music to "Music"



Supported Media Format:

	* *	
	Image JPG/JPEG/BMP/PNG	
Video AVI, MPEG4, WMV, MKV, FLV, MP4, MOV		AVI, MPEG4, WMV, MKV, FLV, MP4, MOV
	Music	MP3

Step 3: Plug the USB drive into the device and click the DiViEx APP.



Step 4: When the screen shows "Copy finished" after "Usb Disk:", the media files are ready to be displayed.





Settings:

- 1. Set the time each picture is to be shown on the screen by dragging the bar to the desired time.
- 2. Select how you would like the images to display. Select the desired transition effect between pictures:
- Auto Boot

DiViEX APP will automatic open when the digital signage is turned on.

Auto Play

DiViEX APP will automatic play the slideshow when it is opened.

· Choose Picture display mode

Check a fit option how you want the pictures to be displayed.

· Set Picture switch mode

Choose an animation option to set the fade in and fade out effects.



Edit picture:

This function shows all pictures, you can edit all pictures, and remove it.

Crop

There are four corner handles and four border handles to crop the picture. Click and drag a handle to reshape the image to any size you need.

Filter

You can browse and try different filters in the filter gallery below the image. The APP support the following filter: AUTO_FIX, BLACK_WHITE, BRIGHTNESS, CONTRAST, CROSS_PROCESS, DOCUMENTARY, DUE_TONE, FILL_LIGHT, FISH_EYE, FLIP_HORIZONTAL, FILP_VERTICAL, GRAIN, GRAY_SCALE, LOMISH, NEGATIVE, PSTERIZE, ROTATE, SATURATE, SEPIA, SHARPEN, TEMPERATURE, TINT, VIGNETTE.

Reset

Click "Reset" to remove all the editing you applied to the image.

• Save " 🖺 "

Click the icon to save the edited image as a new image.





Image deletion
Click " To delete unwanted pictures

 




Music:

List all music files in the Playlist library

Add music to "Playing List Music" (Background music) from "Playlist Library".
 Click "right arrow", music title will show in the "Playlist Music" on the right.



• To remove the added music file from the playlist, click the "left arrow" in the playlist.



Factory Reset:

- 1. Go to Settings, then click "Backup & reset" (Fig. 1)
- 2. Click "Factory data reset" (Fig. 2)
- 3. Choose "Reset Tablet", then click "ERASE EVERYTHING" to get the unit to Factory Reset. (Fig. 3)

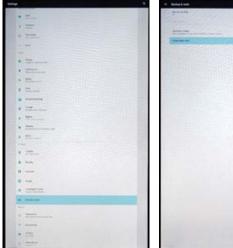






Fig. 1

Fig. 2

Fig. 3



Screen Rotation

- 1. Click the Main Apps button " (III)" in the Home page to enter the "APPS" menu interface (Fig. 1)
- 2. Click "System assistant" into Fig. 2
- 3. Choose the degree to Rotate screen, then click "Confirm", after the restart, the screen will be rotated (Fig. 3 &Fig.4)





Fig. 1



Fig. 2



Fig. 3

Fig. 4



Choose System Language:


- 1. Get into Settings, then click "Language & input" (Fig. 1)
- 2. Click "Languages", then click "Add a language" (Fig. 2)
- 3. You can add the required system language (Fig. 3)
- 4. Drag the system language you just added up to the front (Fig. 4)-Please use a mouse to operate.





Fig. 1

Fig. 2

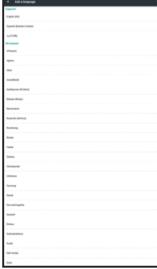

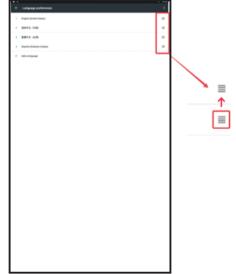


Fig. 3

Fig. 4



Technical Specifications

	ITEM	SPECIFICATION		
	Material	Steel+Plastic		
	Panel Type	43" BOE LCD		
	Display Area	940.896(H)*529.254(V)		
	Optimum Resolution	1920*1080		
	Contrast Ratio	1200:1		
	Viewing Angles	89/89		
	Response Time	8ms		
	Light Source	LED		
Product/LCD	Brightness	400nits		
	Pixel Pitch	163.35(H)*490.05(V)		
	Display Colors	16.7M		
	Color Temp	Cold White		
	Aspect Ratio	89/89		
	Refresh Rate	50/60HZ		
	Panel Surface Material	TFT		
	Touch	NO		
	Operating Time	7x18hrs		
	Panel Life (hours)	30000hrs		
	Operating System	Android 7.1		
	Software	DiViEX		
	Player	Integrated in software		
	Drive Type	Integrated in software		
Playback Software	External or Integrated	Integrated		
Joieware	Templates	yes		
	Maximum video decoding	1080P		
	HTML5	No		
	IP Streaming	yes, but subject to bandwitch ,support BT4.2		



		<u> </u>	
	Live Text & Media Feeds	USB; WIFI; Wire Network	
	Multi-Zone	YES	
	Transitions	YES	
	Day Parting	YES	
	Scheduling	YES	
	Drag & Drop Functionality	YES	
Playback	Loops	YES	
Software	Campaigns	YES	
	Remote Content Update	YES	
Video	Video playback	YES	
	Video Input	YES, by HDMI-In, VGA	
Audio	Audio format	MP3	
Image	Picture format	JPG, JPEG, BMP, PNG, GIF	
Storage	Internal Storage Capacity	32 GB	
Speaker	Amplifier	YES	
	CPU	Rockchip RK3288, Quad-core CPU	
		clocked at 1.6GHz	
	SD Slot	YES	
	Ethernet LAN	YES	
	Audio_IN	NO	
Connector	USB	YES	
	HDMI	YES	
	VGA	NO	
	USB/SD/Micro SC/HDMI: list all	2xUSB; 1xHDMl Input ;1xRJ45;1xVGA	
	Power	YES	
	XLR	2xXLR Input; 2xXLR Output	



	Voltage (in/out)	AC100-240V	
Power	Consumption (Watts)	About 77W	
Power	Cord Length	6ft	
	Compliance Listed (on power source)	Power supply with UL listed	
	Temperature	Operating temperature:0-40°C	
Operating Conditions		Storage temperature:-20-60°C	
Contactions	Humidity	10-80%	
	Screen	43"	
Dimensions (in)	Overall Unit	1143(H)x812.8mm(W)	
	N.W.(kgs)	47.8 kgs	
Weight	G.W.(kgs)	61.5 kgs	
Packaging	Packing Size (mm)	1340(L)*580(W)*960(H)mm	
	Regulations / Compliance	Will apply for FCC	
General	Package Contents	Product, Instruction Manual, Power cord,	
		Remote control	
	Warranty	2-year	

UPC Barcode



	Troubleshooting the Digital Sign			
	Issue	Probable Cause	Solutions	
•	No picture or sound	 Unit not plugged into wall outlet Power cord not properly connected to the terminal on the back of the unit. Unit not powered on Wall outlet not working 	 □ Check that the unit is plugged into wall outlet. □ Confirm that the power cord is connected to the terminal on the back of the unit. □ Turn the on/off toggle switch located on the back of the unit, lower center, to the "on" position. □ Unplug unit, wait 20 seconds, plug unit back into outlet and try again. □ Make sure that outlet is working by plugging in a different electrical device. ❖ If all of the above have been checked and the issue is not resolved, contact a customer service representative. 	
•	No sound (but picture is working)	 Volume not adjusted on the remote control. Content/Video does not have sound. Content format is not compatible. Speakers do not work. 	Adjust volume using the remote control Confirm content is one of the following compatible formats: AVI, MPEG4, WMV, MKV, flv, MP3, MP4, MOV. If unit is connected to Wi-Fi, go to YouTube and play video that has sound Unplug unit, wait 20 seconds, plug unit back into outlet and try again. Try playing the content on a different device (smart phone, computer or tablet) If all of the above have been checked and the issue is not resolved, contact a customer service representative.	
•	No picture (but sound is working)	 Content file damaged. Content format is not compatible. Screen damaged or defective. 	 Confirm content is one of the following compatible formats: AVI, MPEG4, WMV, MKV, flv, MP3, MP4, MOV. Try playing the content on a different device (smart phone, computer or tablet) Unplug unit, wait 20 seconds, plug unit back into outlet and try again. If all of the above have been checked and the issue is not resolved, contact a customer service representative. 	
•	Remote control not working	 Batteries not inserted properly. Batteries are dead. Standing too close or too far from the unit. 	□ Check that battery is inserted properly with positive and negative orientation. □ Insert new batteries. □ Stand within 1 foot of the front of the unit and point the remote directly at the sensor (green dot) ❖ If all of the above have been checked and the issue is not resolved, contact a customer service representative.	



No Wi-Fi signal Parts missing or Damaged	 Wi-Fi is not turned on in product settings. Wi-Fi is not connected to a network Low or no signal from the router Antenna is missing or not pointed upward. Damaged PC board 	Check that Wi-Fi is turned on in settings
	replacements) Parts lost or damaged by the customer. (There is charge for replacements)	
Having problems with installing software or getting content to play	 Did you purchase the DisplayIt!Xpress software from Displays2go? Did the customer purchase or downloaded another 3rd party software onto the product? 	□ If you purchased DisplayIt!Xpress software from Displays2go or from Best Wave directly, please contact Best Wave at support@bestwave.com or (480)368-8900 ext. 2 □ If you purchased or downloaded another 3 rd party software onto the product, please contact the 3 rd party software company's customer support for assistance.
Cannot upload content	 Content format is not compatible. Content files are too large. Port being used is defective App being used to play content is defective. Android board is defective. 	 □ Confirm content is one of the following compatible formats: AVI, MPEG4, WMV, MKV, flv, MP3, MP4, MOV. □ Confirm file size is less than available space. If all of the above have been checked and the issue is not resolved, contact a customer service representative.



 Issues using pre- 	Mistake in storing content to	SlideShow App steps Explorer > Select USB >
installed apps	NAND Flash (shown on pg. 11)	Select Multi > highlight files > Editor > Select
	App is defective	Copy > Home > NAND > MediaFolder >
	Android board is defective.	Images> Editor > Paste
		 Open SlideShow app and select
		desired trasitions, slide time and
		looping > Play
		MX Player steps > Follow same steps as
		SlideShow App > MediaFolder > Video >
		Editor > Paste.
		 Open MX Player and select video to
		play.
		 Loop video: While the video is
		playing, click on the video and there
		should be 3 dots in the top right
		corner. Click on the 3 dots > play >
		check desired Loop option
		If all of the above have been checked and
		the issue is not resolved, contact a customer
		service representative.
 If Keypad doesn't 	> Batteries need to be replaced	Replace batteries
work.	Batteries incorrectly inserted	Check if batteries are inserted correctly
		Need to replace the keypad locker
If battery booster	> Batteries need to be replaced	Contact customer service representative
doesn't work		·
 Locker not charging 	> Cable malfunction	Contact customer service for
		replacement cable

Cleaning and Maintenance

- 1. Avoid strong vibration or impact on the product.
- 2. Keep the product dry to avoid possible damage by moisture.
- 3. Don't place the product under direct sunlight which may shorten the service life of the screen.
- 4. Clean screen and product by using a glass cleaner.
- 5. If the product will not be used for a long time, pull out the power cord to prevent the internal short circuit or other potential dangers.



Names and Contents of Toxic and Hazardous Substances or Elements in the Product

Part name	Toxic and hazardous substances or elements					
	Pb	Hg	Cd	Cr ⁶⁺	PBB	PBDE
Display		0	0	0	0	0
Shell	0	0	0	0	×	×
Circuit board assembly *		0	0	0	0	0
Wires	0	0	0	0	0	0
Metal parts	0	0	0	0	0	0
Packaging materials*	0	0	0	0	0	0
Remote control		0	0	0	0	0
Speaker		0	0	0	0	0
Accessories*	0	0	0	0	0	0

 ^{*:} Circuit board assembly includes PCB and the electronic elements thereof;
 Packaging materials include packaging box, styrofoam, etc.;
 Other accessories include instruction manual.

0: the content of the toxic and hazardous substances or elements in the part is lower than the limit specified in GB/T 26572-2011 standard.

X: the content of the toxic and hazardous substances or elements in the part is higher than the limit specified in GB/T 26572-2011 standard.

The table shows that the machine contains harmful substances inside. The data is provided by material suppliers and verified by the company according to the material type. Some materials contain harmful substances that can't be replaced in present technology. We are dedicated to improving this.

The EFUP of the product is ten years. The pollution control label is shown on the right.

The EFUP is valid only when the user operates in the normal conditions specified in the manual herein.

Waste Electrical and Electronic Products Recycling and Disposal Regulations

To protect the earth, if you do not need this product or its service life expires, please abide by your local **Waste Electrical and Electronic Products Recycling and Disposal Regulations** or send it to qualified local manufacture for recycling.

This Manual is for reference only and is subject to change without prior notice.

Visit www.displays2go.com for the latest product information and manual updates.

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1)this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum 20cm distance between the radiator and your body: Use only the supplied antenna.