

尺寸：摊开尺寸495.59x90.337mm , 成品尺寸61.913x90.337mm

SHARPER IMAGE®  
WIRELESS SPEAKER

Bluetooth®  
SI-AU-BS-001



Notice:  
Please read user manual carefully and keep it for your records.


Package includes:

- 1 Speaker
- 1 Charging cable
- 1 User Manual


Safety instructions:

- Do not let small children play this product.
- Do not expose the speaker to liquid, moisture or humidity to avoid the product's internal circuit being affected
- Do not use abrasive cleaning solvents to clean the speaker.
- Store the speaker out of direct sunlight and extreme temperatures (above 45°C/113°F or below -10°C/14°F), as this may shorten the battery life, affect the operation or degrade the performance of your speaker
- Do not dispose of the speaker in a fire to sharp objects as this will cause scratches and damage.
- Do not drop the speaker, This is may cause damage to the internal circuitry.
- If the speaker is left for long period without use, charge once per month to avoid the overconsumption of the battery.
- This appliance is for indoor use only, Please do not use or store the unit in high temperature or hazardous locations, Please do not submerge the unit into water, as this will ruin the speaker.
- The unit comes with a rechargeable battery, so please do not throw or put it in a fire to avoid explosion.
- The warranty for this product is invalidated if the

products had been damaged, repaired or modified in any way.

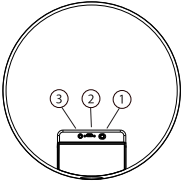

1. Power on / off
2. Charging
3. AUX-input

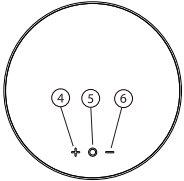

4. Next / volume up
5. Play / Pause
6. Previous / Volume Down

Power:

Fully charge the speaker before first use.

To charge the battery, use the Type-C USB cable. Insert the Type-C USB into the port located on the back of the device, then plug the USB-A end into a USB port on a computer or wall charger (not included).

A red light indicates charging. When the battery is full, the red light turns off automatically.

Play music via Bluetooth.

Turn the speaker on by sliding the switch on the back of the speaker to the "on" position.

The blue indicator light flashes quickly. This indicates the speaker is in pairing mode and is searching for Bluetooth devices.

Turn on the Bluetooth feature on your device and search for "SI-BS-001".

When the blue light stops blinking, pairing is completed. Start playing music on your device. The speaker has a range of up to 30 feet.

Adjust the volume of your device to a comfortable level.

Turn off the speaker when not in use.

Play music via AUX.

Use the included AUX cable to play music from other devices without Bluetooth. Connect the supplied AUX cable to port 3 on the back of the speaker. The speaker will automatically switch to AUX playback mode.

Button control:

- + Next Track hold to increase volume
- Previous Trackhold to decrease volume
- 0 play/pause

Note:

- (A) The Bluetooth speaker will only sync with one device at any time, the connection cannot be deleted when matching. It can only be deleted in disconnected mode.
- (B) A Bluetooth connection list cannot have two devices with the same name. This will cause one of the two devices to fail to connect via Bluetooth.
- (C) If Bluetooth pairing fails, delete other Bluetooth devices in the connection list, restart speaker and try again.
- (D) The disconnection of Bluetooth is not immediate and will take a new seconds delay to fully disconnect from the smart phone.

Troubleshooting

1. No power: Recharge your speaker using the included USB Type C charging cable. Try using a different cable.
2. Music is not playing over Bluetooth: Make sure your Bluetooth device has A2DP profile. Check if both devices are paired and connected over Bluetooth. Restart the speaker to reconnect our Bluetooth device.
3. Bluetooth device will not reconnect with the speaker: Navigate to your Bluetooth settings menu on your Bluetooth device, tap "SI-BS-001" and select "Forget". Now follow the steps to pair your device again.

Frequently Asked Questions

Questions	Solutions
Unsuccessful Pairing for Connection	1. Make sure the speaker is in Bluetooth mode, 2. Make sure the speaker has not been connected with another device, 3. Check if there are many Bluetooth devices working around, which may interfere with Bluetooth connection, 4. Try to restart the Bluetooth on your phone or tablet and reconnect the speaker again,
No voice or Distortion of sound	1. Check the volume of your phone or the speaker and adjust the volume, 2. Check if the battery is too low, please recharge it,
Music breaking play	1. Check if the device is beyond the effective connection distance, 2. Check if there is any obstacle between the speaker and your device,

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna,
- Increase the separation between the equipment and receiver,
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected,
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the equipment.

FCC information  
This device complies with Part 15 of the FCC Rules.

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) This device may not cause harmful interference, and  
(2) this device must accept any interference received, including interference that may cause undesired operation.

Radiation Exposure Information

This device has been evaluated to meet general RF exposure requirements.  
The device can be used in portable exposure conditions without restriction.

SHARPER IMAGE®

SHARPER IMAGE AND THE 77 LOGO AND RELATED ELEMENTS © & ™ THREESIXTY BRANDS GROUP, LLC OR ITS AFFILIATES.

DISTRIBUTED BY AND © 2024 BYTECH NY INC, BROOKLYN, NEW YORK 11223. ALL RIGHTS RESERVED.\*

All Trademarks and Registered Trademarks are property of their respective owners

WARRANTY- 12 MONTHS

Please visit our website [Bytechintl.com/warranty](http://Bytechintl.com/warranty)

Contact Info:  
2585 West 13th Street  
Brooklyn, NY 11223  
[www.bytechintl.com](http://www.bytechintl.com)  
(718) 449-3700