# **Bluetooth Speaker** User's Manual



Thank you for purchasing the speaker. You can use it with Pads, Phones, Pods and many types of Smart phone to stream music, and enjoy hands-free calling. In order to get the best user trial when using the device, please read this manual first before using.

#### What's in your box:

- 1\* Waterproof IPX7 speaker
- 1\* USB to Type-C charging port 50cm
- 1\* User manual

Please read the safety advice carefully and keep it for future reference.

## Safety Instruction

- 1. This logo means that no naked flames, such as a candle can be placed on or near the device
- 2. The electrical and electronic equipment are part of a separate collection Do not throw electrical or electronic equipment away with unsorted municipal waste, but ensure that it is collected separately. Collection systems and locations (sorting centres, rubbish dumps) are provided for your by local councils and retailers. By entrusting your end-of-life product to the proper recycling process, you can helping to protect the environment and your health.
- 3.Use this device in temperate climates only.
- 4. This device may be used by children aged 8 years or older any by those with reduced physical, sensory or mental abilities, or those lacking experience or knowledge, provided they are correctly supervised, or if the instructions related to the use of the device have been adequately given and if the risks involved have been understood. Children must not play with this device. Children should not clean or maintain the device without supervision.
- 5. The electrical socket must remain easily accessible if it serves as the means of
- 6. Always unplug the device before cleaning it.

7.Clean the device with a soft dry cloth only. Never use solvents. 8. Attention should be drawn to the environmental aspects of battery disposal.

9. The battery (batteries or battery pack) shall not be exposed to

Red LED solid = charging excessive heat such as sunshine . fire or the like. 10.Use the apparatus in moderate climate only.

#### Features

- IPX7 Waterproof Bluetooth Speaker
- Clear sound music with colorful light show
- Delicate fabric appearance
- Ultra portable design
- Great for parties, indoor and outdoor
- Hands-free function
- 1\*5W output
- Type-C charging port

# Charging your Speaker

- 1. Connect one end of the included TYPE-C Charging Cable to the Charging Port on your speaker. Then plug the other end of the USB Charging Cable into a suitable USB port on your computer, notebook or power bank to recharge your speaker's internal rechargeable battery.
- 2. When charging, a red LED light will illuminate to indicate that the unit is charging. The red light will turn off when your unit is fully charged(under both turn-on/off speaker status)

#### LED indicator status

When charging your speaker

 
Red LED light off = charging completed

When pairing your speaker to a Bluetooth audio source Rapid blinking blue LED: Bluetooth not connected (Ready to pair) Solid Blue LED: Bluetooth connected

# Specification:

Bluetooth Version	V5.0
Maximum Output	5W
Built-in Power	Li-ion 1200mAh
SNR	>80dB
Wireless Working Frequency	2.402-2.480GHz
Wireless Transmission Distance	up to 10M
Charging Time	about 2.5-3 hours
Playback Time	up to 10 hours
Charging	DC 5 V ,600mA
Size	(L)75*(W)82*(H)89mm

## Product Diagram



- 1. Power on /off /Play / Pause Button' (1) To power on your speaker, press and hold the '@', then the blue LED will flash quickly. To power off your speaker. Press and hold the '@' . When music is playing, press the Button' @'to play or pause a track.
- 2.Next song / Vol + Button' (10) ': Press to increase the volume. Press and hold to the next music.
- 3.Previous song / Vol Button' (10) ': Press to lower the volume. Press and hold to the last music.
- 4. Type-C charging port: Use the attached Type-C to USB charging cable to charging your speaker.

#### Bluetooth mode

The speaker will automatically enter the Bluetooth pairing mode after power on. Open the device to search for the Bluetooth name TY-WSP56 and click Connect. After pairing is successful, the LED indicator will always be on blue. Briefly press the Button ' +" at the same time to disconnect the Bluetooth.

## Light effect (6 modes)

#### TWS Mode

After power on, briefly press ' @ ' of any speaker, the Bluetooth indicator flashes quickly and enters the TWS mode. After two speakers are connected, the blue indicator of the main speaker flashes slowly, and the Bluetooth indicator of slave speaker remains blue. After the mobile phone is connected, the Bluetooth indicator remains blue on both speakers. At the same time, briefly press Button ' \( \dagger^{\circ} \) ' \( \dots \) ' to disconnect the TWS connection.

# Hands-free Function

When phone or other smartphone is connected to your speaker, follow the steps below to take calls hands-free

- 1.Press Button' @ ' to pick up the call
- 2.Press and hold 1.5 seconds Button' (1) 'to reject the call

# Reconnect and Sleeping Mode

After the unit has paired and connected, it will reconnect automatically when the unit is powered on and device in range Note: Bluetooth time out: 20 minutes

# FCC Requirement

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

