



**FCC ID:2AS7V-IAEBTG421B**

**1: Power on/off .**

1. Open the charging case and take out earphones, automatically turn on;  
Place earphones into charging case and close the case, automatically turn off.
2. Long press 3 seconds to turn on  
Long press 5 seconds to turn off.

**2: Play/Pause music.**

When listening to music. Quick double tap the left/right earphones to play or pause the music.

**3:Previous /Next Song**

When listening to music.

Quick tap left earphones 3 times to previous song.

Quick tap right earphones 3 times to next song.

**4: Volume -/+**

Tap left earphones once to decrease the volume.

Tap right earphones once to increase the volume.

**5: Answer/Hang up**

When there is an incoming call.

Tap left or right earphones once to answer the call.

Tap left or right earphones again to end the call.

**5: Reject**

When there is an incoming call.

Long press left or right earphones for 2 seconds to reject the call.

**6:Voice assistant**

Press right earphones 2 seconds to activate voice assistant.

**7:Gaming mode(50-60ms)**

Press left earphones 2 seconds to enter **game mode**.

Continue press left earphones 2 seconds to enter **music mode**.

**1: Power on/off .**

3. Open the charging case and take out earphones, automatically turn on;  
Place earphones into charging case and close the case, automatically turn off.
4. Long press 3 seconds to turn on  
Long press 5 seconds to turn off.

## **2: Play/Pause music.**

When listening to music. Quick double tap the left/right earphones to play or pause the music.

## **3: Previous /Next Song**

When listening to music.

Quick tap left earphones 3 times to previous song.

Quick tap right earphones 3 times to next song.

## **4: Volume +/-**

Tap left earphones once to decrease the volume.

Tap right earphones once to increase the volume.

## **5: Answer/Hang up**

When there is an incoming call.

Tap left or right earphones once to answer the call.

Tap left or right earphones again to end the call.

## **5: Reject**

When there is an incoming call.

Long press left or right earphones for 2 seconds to reject the call.

## **6: Voice assistant**

Press right earphones 2 seconds to activate voice assistant.

## **7: Gaming mode(50-60ms)**

Press left earphones 2 seconds to enter **game mode**.

Continue press left earphones 2 seconds to enter **music mode**.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the device and receiver.
- Connect the device into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment