-140 mm

# FSC® Bamboo 5000mAh Dual Port Power Bank with Wireless Charger Instruction Manual EPB-FS23

## READ ALL INSTRUCTIONS CAREFULLY BEFORE USE AND KEEP THIS MANUAL.

# In the Box


9

- EPB-FS23 FSC® Bamboo 5000mAh Dual Port Power Bank with Wireless Charger (x1)
- Charging Cable (x1)
- Instruction Manual (x1)

## Safety Precautions

- . This product is NOT a toy, keep away from children and pets.
- . Only use the device according to the instructions in this manual. Never use the device for anything other than its intended purpose.
- . Do not open this device or attempt to repair the unit yourself if it is not working properly. Doing so risks fire, shock or injury.
- . When not in use, the device should be stored in a dry, cool location, away from sources of water or heat.
- . Do not expose device or charging cable to extreme temperatures (heat or cold), open flames, humid or wet conditions.
- Do not submerge in water. Do not use in a location where the device or charging cable could fall into liquid.
- . Unplug the charging cable when not in use. Do not pull the charging cable to disconnect, or use the cable as a handle.
- Do not use if device or charging cable is damaged. If device or charging cable is damaged, it MUST be serviced or replaced by the manufacturer or its service agent before using again.
- . Do not over charge battery.
- This device contains a built-in battery and should not be disposed of with regular household waste. Please consult the local authorities on the correct way to dispose of this device.
- · Attachments on the back of your device can impede effectiveness of the wireless charger, and lead to overheating. Remove attachments from your device before charging on this wireless charger.

## Product

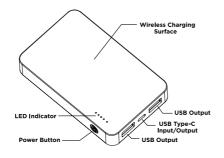

# Instructions

Charge the power bank fully before using for the first time.

# Charging the Power Bank

- Plug the small connector of the included charging cable into the USB Type-C port on the power bank.
- Plug the other end of the cable into a USB power source, such as the USB port on a computer or into a certified USB adapter (not included), and plug into a wall socket
- The LED indicator will flash **BLUE** while power bank is in charging and stay. solid when the power bank is fully charged.

# Charging Electronic Devices with the Power Bank

- Using the cable of the device you wish to charge, connect the charging cable to your device with the appropriate connector.
- . Connect the other end of the cable to the USB Type-C port or USB port of the power bank.
- The power bank will begin to charge automatically.
- The LED indicator will illuminate when charging.
- . Remove the cable from your mobile device when it is fully charged.

## Using Wireless Chargingk

- . Press the Power button once. The LED indicator will glow GREEN to indicate the wireless charging is in standby mode.
- · Place a wireless charging enabled mobile device on the wireless charging surface, the mobile device will begin to charge automatically. The LED indicator will glow RED to indicate that your device is charging properly.
- If your device does not begin to charge, try repositioning your device on the wireless charging surface. You may need to remove the case of your device to charge properly.
- · Remove your device from the wireless charging surface when it is fully charged.

• If the first LED indicator is flashing RED when the wireless charger is in use, the either device is NOT wireless charging enabled, or there is an object device and between the charging pad interfering with the charging process.

# Note on Safety Features:

The wireless charging will automatically power OFF when the wireless charging surface is overheated or when a metal object, such as a coin, is placed on the wireless charging surface. The first LED indicator will flash to warn of automatic shutoff

#### **Tech Specifications**

- · Battery Capacity: 5000mAh/3.7V/18.5Wh
- USB Type-C Input: DC 5V/2A
- USB Type-C Output: DC 5V/2A
- USB Output: DC 5V/2A Total (Max.)
- · Wireless Charging Output: 5W
- Working Temperature: 32°F ~ 122°F (0°C ~ 50°C)

# **FCC Information**

This device complies with Part 15 of the FCC Rules.

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the equipment.

### FCC Warning Statement

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: - Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

正面

反面



MIX Paper from responsible sources FSC® C109137

-28.33 mm



6.22 mn