



B200VL



User Guide



Contents

| | |
|--------------------------------------|----|
| Safety information | 2 |
| Getting to know your phone | 4 |
| Setting up your phone | 7 |
| Phone | 11 |
| Contacts | 12 |
| Messages | 13 |
| Email | 14 |
| Camera | 15 |
| Gallery | 16 |
| Music | 17 |
| Calendar | 18 |
| Clock | 19 |
| Browser | 20 |
| Tools | 21 |
| Connectivity | 24 |
| Settings | 26 |
| Troubleshooting | 34 |
| Regulatory Information | 38 |

Safety information

Please carefully read the items bellow:

Use Safely

Do not use the phone in situations where it might cause danger.

Transportation Safety

Please observe all transportation laws and regulations.

Please drive with both hands on the wheel.

DO NOT TEXT AND DRIVE

Hospitals

Please follow limitations.

Please turn off your mobile phone when near medical instruments.

Airports

Remember to follow all airport and flight safety regulations.

Please do not use your phone during flight.

Toxic Chemicals

Do not use your mobile phone around fuels or chemicals.

Hazard

Do not use in hazardous areas where explosions may occur.

Accessories and Batteries

Use only Blu authorized batteries and accessories.

Backup

Remember to keep a written record of all important information.

Water

Your phone is not waterproof. Keep it away from water and liquids.

SOS Emergency Calls

Make sure your mobile phone is switched on and in a service area. In home screen, tap the phone key and dial 911 and send.

Getting to know your phone



 
| | |
|------------------------|---|
| OK key | <ul style="list-style-type: none"> • Press to confirm an option. • Press to access the App Menu from the Home screen. |
| Navigation Ring | <p>From the Home screen, use the Navigation Ring to perform shortcut functions.</p> <ul style="list-style-type: none"> • Press Up to access the Browser. • Press Down to access the Recent Apps. • Press Left to access the Clock. • Press Right to access the Calculator. |
| Messages key | <ul style="list-style-type: none"> • Press to access the Messages. |
| Back/Clear key | <ul style="list-style-type: none"> • Press to return to the previous screen, close a dialog box, or exit a menu. • Press to delete characters when in Edit mode. |
| Call/Answer key | <ul style="list-style-type: none"> • Press to dial or answer an incoming call. • Press to enter the Call Log from the Home screen. |
| End/Power key | <ul style="list-style-type: none"> • Press to end a call or return to the Home screen. • Press and hold to power on/off. |

| | |
|------------------------------|---|
| Camera key | <ul style="list-style-type: none"> • Press to access the Camera app. • Press to capture a photo or shoot video in the Camera app. • Press and hold along with the Volume Down key to capture a screenshot. |
| Volume Up/Down key | <ul style="list-style-type: none"> • Press to adjust the earpiece or headset volume during a call. • Press to adjust the media volume while listening to music or watching/streaming a video. • Press to adjust the ringtone volume from the Home screen. • Press to mute the ringtone of an incoming call. |
| Left/Right Select key | <ul style="list-style-type: none"> • Press the Left Select key from the Home screen to access the Notifications panel. • Press the Right Select key from the Home screen to access the Contacts app. • Press either key from within an app to access various functions and options. |


Setting up your phone

Inserting the Nano SIM card and microSD card

1. Remove the back cover via the notch at the bottom left corner.
2. Insert a fingernail into the small slot and pull up to remove the battery.

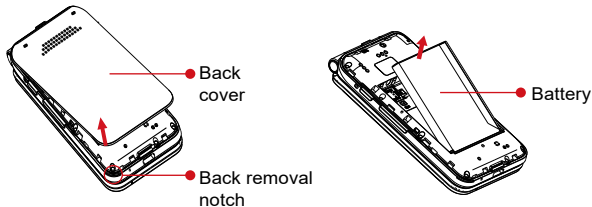

 3. To insert a Nano SIM or microSD card, push the Nano SIM or microSD card into the corresponding card slot with the gold-connectors facing down.

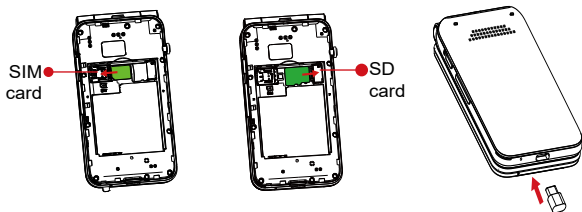

Warning: Please keep the SIM card out of the reach of children. The SIM card and its contact are easily damaged due to scratching or bending. Please use caution when carrying, installing, or taking out the SIM card.

Charge the battery

1. Insert the Type-C USB cable into the phone's charging port.
2. Connect the other end to the power adapter.
3. Connect the power adapter to an electrical outlet to fully charge your phone.


Power On and Off

Press and hold the **End/Power** key until the phone powers on. To turn your phone off, press and hold the **End/Power** key, then select **Power Off**.

Home screen




Quick settings and Notification panel

 
To access the quick settings and notifications, press the **Left Select**  key from the Home screen.

- Select a setting to enable or disable it.
- Select a notification to view details and perform further operations.

Navigation Ring shortcut functions





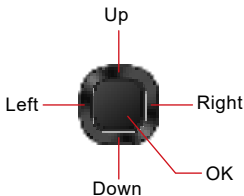



From the Home screen, use the **Navigation Ring**  to perform shortcut functions.

- Press **Left** to access the **Clock**.
- Press **Right** to access the **Calculator**.
- Press **Up** to access the **Browser**.
- Press **Down** to access the **Recent Apps**.



Phone







Make a call

 
1. From the Home screen, dial the number on the keypad and press the **Call/Answer**  key to place the call.
2. If you make a mistake, press the **Back/Clear**  key to delete the incorrect digits.
3. You can also press the **Call/Answer**  key to access your call log. Use the **Navigation Ring**  to select the desired number. Press the **OK**  key to place the call.
4. During the call, you may press the **Left Select**  key to mute or press the **OK**  key to enable the speaker.
5. To end the call, press the **End/Power**  key.



Contacts





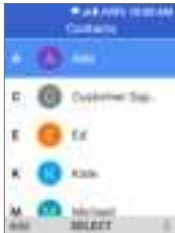

Add a contact

1. From the Home screen, press the **OK**  key to access the App Menu and select **Contacts** .
2. Press the **Left Select**  key to add a new contact.
3. Use the **Navigation Ring**  to select information fields and enter the contact information. When done, press the **Right Select**  key to save your contact.
4. To edit a contact, select the contact you would like to edit from the Contacts screen.
5. Press the **Right Select**  key to access options and select **Edit** and make the desired changes.



Messages










Send a text or multimedia message

 
1. From the Home screen, press the **OK**  key to access the App Menu and select **Messages** .
2. To create a new message, press the **Left Select**  key.
3. Enter the phone number of the recipient in the **To** bar or select from the saved Contacts. When done, press the **Left Select**  key to confirm.
4. Compose your message.
5. Press the **Right Select**  key and select **Add attachment** to attach photos or videos, contact information, or sound recording.
6. Press the **Left Select**  key to send.



Email





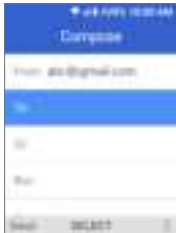

Create and send a email message

1. From the Home screen, press the **OK**  key to access the App Menu and use the **Navigation Ring**  to select **Email** .
2. Follow the required steps for setup your email.
3. From the Email screen, press the **Left Select**  key to compose a new email.
4. Use the **Navigation Ring**  to scroll down to enter the recipient's address, Subject, and message.
5. To attach a file to the email, press the **Right Select**  key and select **Choose attachment**. Use the **Navigation Ring**  to select the file you would like to attach and press the **OK**  key to confirm.
6. Press the **Left Select**  key to send.





Camera

Take a photo

1. Press the **Camera** key on the right side of the phone, or press the **OK**  key from the Home screen to access the App Menu and use the **Navigation Ring**  to select **Camera** .
2. Use the **Navigation Ring**  to scroll up or down to zoom in or out.
3. Press the **OK**  key to take a picture. After taking the picture, press the **Left Select**  key to preview.







Record a video

1. From the Camera screen, use the **Navigation Ring**  to scroll right to select the **Video mode**.
2. Press the **OK**  key to start and stop recording video.


Gallery

You can view photos and watch videos that you've taken, downloaded, or copied onto your storage card or phone memory.

Edit photos


1. From the Home screen, press the **OK**  key to access the App Menu and select **Gallery** .
2. Press the **OK**  key to view the selected picture.
3. Press the **Right Select**  key to access the options menus and select **Edit** to edit the photo.

Share pictures and videos




1. From the Gallery screen, select a photo or video, press the **Right Select**  key to access the options menus and select **Share** to send the photo or video.

 


Music

Use the **Music**  app to play music files stored on your phone. Music files can be downloaded from your computer to your phone using a USB cable.

Listening to a song

1. From the Home screen, press the **OK**  key to access the App Menu and select **Music** .
2. Select the artist, album, or song you wish to hear.
3. Press the **OK**  key to play the selected song.

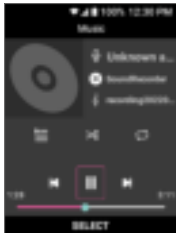





| | | | |
|---|--------------|---|---------------|
|  | Playlists |  | Previous song |
|  | Shuffer mode |  | Play/pause |
|  | Repeat mode |  | Next song |

Calendar

Use the Calendar to create and manage events, meetings, and appointments.

Add an event





1. From the Home screen, press the **OK**  key to access the App Menu and select **Calendar**  .
2. Press the **Left Select**  key to add a new event.
3. Fill in the event information, such as event name, location, start and end dates, and more.
4. When finished, press the **Right Select**  key to save.



Clock






The Clock app allows you to set alarms, view different world times, use a stopwatch, set a timer, and use your phone as a desk clock.

Set the date and time manually

1. From the Home screen, press the **OK**  key to access the App Menu and select **Clock** .
2. Press the **Right Select**  key to select **Settings**.
3. Use the **Navigation Ring**  to select **Change date & time**.
4. Select **Use network-provided time > Off**.
5. Select **Set date** and **Set time** to set them manually.











Create a new alarm

1. From the Alarm screen, use the **Navigation Ring**  to select the **Alarm** .
2. Press the **Left Select**  key to add a new alarm.
3. Use the **Navigation Ring**  to set the alarm time and press the **OK**  key to confirm.



Browser

Use the **Browser** app to navigate the web.

1. From the Home screen, press the **OK**  key to access App Menu and select **Browser** .
2. From the Browser screen, press the **Left Select**  key to search.
3. Enter the web address and press the **OK**  key.


4. Use the **Navigation Ring**  to move the cursor  on the screen and press the **OK**  key to click.
5. Press the **Right Select**  key to access the useful options.

Tools

To access the Tools folder, press the **OK**  key from the Home screen and select **Tools**  from the App Menu.






File Manager

Manage your files with the **File Manager** app.

1. From the Tools screen, select **File Manager** .
2. You can manage your files from the Internal memory or the SD Card.








Sound recorder

Use the Sound Recorder app to record audio.

1. From the Tools screen, select **Sound recorder**  .
2. Press the **OK**  key to begin recording. Press the **OK**  key again to pause the recording.
3. When finished, press the **Right Select**  key to save.
4. From the Sound Recorder screen, press the **Right Select**  key to view the audio list.
5. You can play, delete, rename or share audios.









Calculator

Solve many mathematical problems with the **Calculator** app.








1. From the Tools screen, select **Calculator** .
2. Enter numbers using the keypad. Press the  key to add a decimal. Press the  key to add or remove negative values.
3. Press the **Right Select**  key to delete the current entry, or press the **Left Select**  key to clear all.
4. Use the **Navigation Ring**  to select the mathematical operation to be performed (add, subtract, multiply, or divide).
5. Press the **OK**  key to solve the equation.

Connectivity

Connect your Bluetooth device



1. From the Home screen, press the **OK**  key to access the App Menu and use the **Navigation Ring**  to select **Settings** .
2. Use the **Navigation Ring**  to select **Connected devices > Bluetooth**.
3. Press the **OK**  key to turn on Bluetooth.
4. Use the **Navigation Ring**  to select **Pair new device**.
5. Use the **Navigation Ring**  to select your desired Bluetooth device to pair and press the **OK**  key to connect. If asked, confirm the PIN to complete pairing.
6. Once your device is paired, it will show up in the Previously Connected Devices list in the Bluetooth menu.

Connect to Wi-Fi network

1. From the Home screen, press the **OK**  key to access the App Menu and select **Settings** .
2. Use the **Navigation Ring**  to select **Network & internet > Wi-Fi**.
3. Press the **OK**  key to turn on Wi-Fi.
4. Use the **Navigation Ring**  to select your desired Wi-Fi.
5. Enter your password if necessary, use the **Navigation Ring**  to select the **Connect** button.
6. Your phone will be connected to the Wi-Fi network. You will see  in the status bar.

You can access Quick Settings panel to enable or disable Bluetooth and Wi-Fi quickly and easily.

Settings

From the Home screen, press the **OK**  key to access the App Menu and select **Settings** .

Network & Internet

Manage network and connectivity settings.

From the Settings screen, select **Network & internet**.

- **Wi-Fi:** enable/disable Wi-Fi, add Wi-Fi network, view saved networks.
- **Mobile network:** enable/disable mobile data, adjust data roaming settings, view mobile data usage, set data limit and warning mode, etc.
- **Airplane mode:** enable/disable Airplane mode.
- **Private DNS:** select your desired Private DNS mode.
- **Wireless Emergency Alerts:** enable/disable alerts, adjust alert preferences.

Connected devices

Manage settings for connected devices.

From the Settings screen, tap **Connected devices > Connection preferences**.

- **Bluetooth:** pair Bluetooth devices to launch wirelessly hear calls, connect speakers, transfer data, and more.
- **USB:** connect your phone with a computer using a USB cable to transfer data or charge your phone.

Apps & notifications

From the Settings screen, tap **Apps & notifications**.

- **Apps notices:** Enable or disable notifications for each app.
- **Background app refresh:** Select the network to refresh background apps. You can select **Off** to turn off background refresh.
- **Notifications on lock screen:** Enable or disable showing notifications on the lock screen.

Battery

Monitor your phone's battery usage.

From the Settings screen, tap **Battery**.

- **Battery Saver:** enable/disable Battery Saver, set a schedule for turning on the Battery Saver.
- **Battery percentage:** show battery percentage in the Status bar.

Sound

Control your phone's ringtones, alerts, notifications, etc.

From the Settings screen, tap **Sound**.

- **Media/Call/Notification/Ring/Alarm volume:** drag the slides to adjust the media, call, notification, ring, and alarm volumes.
- **Vibrate for calls:** select to enable or disable vibration for calls.
- **Phone ringtone:** select a ringtone for incoming phone calls.
- **Default notification sound:** Select the default notification sound.
- **Default alarm sound:** Select the default alarm sound.

- **Dial pad tones:** enable/disable dial pad tones.

Display

Set screen brightness, wallpaper, screen timeout, etc.


From the Settings screen, tap **Display**.

- **Brightness level:** drag the slide to adjust the screen brightness level.
- **Wallpaper:** set the wallpaper for your phone.
- **Shortcut:** View and customize the **Navigation Ring** (Up, Down, Right, Left, Center) shortcut functions. Down and Center keys are not customizable.
- **Main screen sleep:** Set the amount of time before the main screen goes to sleep.
- **Secondary screen sleep:** Set the amount of time before the secondary screen goes to sleep.

Storage

Manage internal storage on your phone and provides menu choices for an optional SD card.

From the Settings screen, tap **Storage**.

- **Internal shared storage:** view storage amount used by each app, delete backed up files by tapping **MANAGE STORAGE**.
- **SD card:** view files stored on your SD card. Select  at the right side of the SD card to eject the SD card to allow for safe removal.

Accessibility

Accessibility services are special features to make the device easier to use for those with certain physical disabilities.

From the Settings screen, select **Accessibility**.

- **Invert colors:** Enable or disable color inversion. This may affect performance.

- **Large text:** Drag the slider to make the text on screen smaller or larger.
- **Readout:** Enable or disable Readout function. The Readout function reads the labels of interface elements and provides a sound response, so that you can use your device without looking at the screen.
- **Text-to-speech output:** Adjust Text-to-speech settings, such as preferred engine, language, and more.
- **Keypad vibration:** Enable or disable vibration when pressing on keypad.
- **Captions:** Enable or disable captions. You can also set caption display language, text size, and caption style
- **Mono audio:** Enable or disable combining channels when playing audio.
- **Volume balance:** Drag the slider left or right to adjust the volume balance from the speaker.

- **HAC:** Hearing Aid Compatibility (HAC) can be used by people with hearing or speech impairments.
- **RTT:** Real-Time Text can be used by people with hearing or speech impairments to communicate via text while on a voice call. You can set RTT visibility to be Visible during calls or Always visible.

Security & location

Secure your device, protect your data, and keep your privacy.

From the Settings screen, select **Security & location**.

- **Screen lock:** Set a password as the screen unlock method.
- **Location:** Enable or disable location services, view a list of apps that have recently requested your location.

System

Manage detailed settings for your phone, including language and input settings, battery and storage, date and time, etc.

From the Settings screen, tap **System**.

- **Languages & input:** Set the language for the phone's menus and view input methods.
- **Date & time:** enable or disable network-provided time, automatic time zone, 24-hour format, etc.
- **Reset options:** Completely erase all data from your phone's internal storage and reset the device to factory settings. Follow the screen steps to finish the reset.
- **About phone:** Access important phone information.
- **Software Update:** Check for new software updates for your device and Install the latest software updates on your phone to keep it running smoothly.

Troubleshooting

Below is a list of common problems that may occur when using your mobile phone. Try these easy troubleshooting steps to resolve any type of issues you may encounter.

The phone does not power on

- Press and hold the power key until the startup sequence appears on the display.
- Check the battery level and ensure there is sufficient charge.

The phone does not respond after several minutes

- Remove and insert the battery – If the phone has an internal battery, please press and hold the power button.

The phone powers off by itself

- Check if the screen lock of the phone is enabled.
- Check if the phone needs to be charged.

The battery will not charge

- Check if the battery is already fully charged.
- Make sure that the battery is inserted correctly.
- Ensure that the battery being used is a BLU approved battery.
- Double check if the charger connector is properly connected to the phone.

Note: Connect charger only after the battery has been inserted.

The standby time is too short

- Please keep in mind that standby time relates directly to phone usage (Internet, Text, Voice Calls, etc.).
- Batteries typically have to be replaced after a year of use.

The phone cannot connect to the network (Voice or Data)

- Verify if you have active service with your service provider.
- Contact your local network service provider and verify if you are within its network coverage area.

The phone displays a SIM Error

- Make sure the SIM is properly inserted and in its intended slot.
- Make sure that the SIM card is not damaged or scratched.

The PIN code was entered incorrectly three times

- The SIM card will lock, and you will need to enter the PUK code (PIN Unlock Code). Please contact your local service provider to obtain the PUK.

I cannot make calls

- Make sure that the number you dialed is correct and the dial key has been pressed.
- Use the full national area code when dialing out of your area or when abroad, use country-specific international access codes.

I cannot receive calls

- Make sure that your phone is connected to a network.

The caller ID does not display on incoming calls

- Contact your local network service provider and verify you have the caller ID feature enabled on your account or verify if the caller may have blocked his number from appearing.

The caller cannot leave a voicemail message

- Contact your local network service provider and verify if the voicemail service is active on your account or check if the network is busy.

The phone does not connect to the internet

- Ensure with your service provider that your account has the appropriate internet/data plan enabled.
- Ensure internet APN settings are configured (Carrier dependent).

Text Messages cannot be Sent / Received

- Ensure text messaging is enabled with your service provider.
- Ensure APN settings are configured (Carrier dependent).

Regulatory Information

FCC regulations

This mobile phone complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This mobile phone has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

RF Exposure Information (SAR)

This mobile phone meets the government's requirements for exposure to radio waves.

This phone is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. *Tests for SAR are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands.

Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

The highest SAR value for the model phone as reported to the FCC when tested for use at the ear is 0.85 W/kg and when worn on the body, as described in this user guide, is 1.34 W/kg (Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements.).

While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of www.fcc.gov/oet/ea/fccid after searching on FCC ID: YHLBLUB200VL.

For body worn operation, this phone has been tested and meets the FCC RF exposure guidelines for use with an accessory that contains no metal and the positions the handset with a minimum of 1.5 cm from the body.

Use of other accessories may not ensure compliance with FCC RF exposure guidelines. If you do not use a body-worn accessory and are not holding the phone at the ear, position the handset a minimum of 1.5 cm from your body when the phone is switched on.

Safety precautions for power supply unit

Use the correct external power source

A product should be operated only from the type of power source indicated on the electrical ratings label. If you are not sure of the type of power source required, consult your authorized service provider or local power company. For a product that operates from battery power or other sources, refer to the operating instructions that are included with the product.

This product should be operated only with the following designated power supply unit(s).

Travel charger: Input: 100-240V, 50/60Hz, 0.35A. Output: 5V, 1.2A.

Handle battery packs carefully

This product contains a Lithium-ion battery. There is a risk of fire and burns if the battery pack is handled improperly. Do not attempt to open or service the battery pack. Do not disassemble, crush, puncture, short circuit the external contacts or circuits, dispose of in fire or water, or expose a battery pack to temperatures higher than 140°F (60°C). The operating temperature for the phone is 14°F (-10°C) to 113°F (45°C).

Warning: Danger of explosion if battery is incorrectly replaced.

To reduce risk of fire or burns, do not disassemble, crush, puncture, short circuit the external contacts, expose to temperature above 113°F (45°C), or dispose of in fire or water. The battery must be disposed of in accordance with locally applicable environmental regulations or guides supplied with your product.

Take extra precautions

- Do not disassemble or open crush, bend or deform, puncture or shred.
- Do not short circuit a battery or allow metallic conductive objects to contact battery terminals.
- Only use the USB cable provided with the phone or that bear the USB-IF logo or have completed the USB-IF compliance program.
- Do not modify or remanufacture, attempt to insert foreign objects into the battery, immerse or expose to water or other liquids, expose to fire, explosion, or other hazards.
- Device usage by children should be supervised.
- Only use the battery with a charging system that has been qualified with the system per CTIA Certification Requirement for Battery System Compliance to IEEE1725. Use of an unqualified battery or charger may present a risk of fire, explosion, leakage, or other hazards.

- Avoid dropping the phone. If the phone is dropped, especially on a hard surface, and the user suspects damage, take it to a service center for inspection.
- Improper battery use may result in a fire, explosion, or other hazards.
- If the battery leaks:
 - Do not allow the leaking fluid to come in contact with skin or clothing. If already in contact, flush the affected area immediately with clean water and seek medical advice.
 - Do not allow the leaking fluid to come in contact with eyes. If already in contact, DO NOT rub; rinse with clean water immediately and seek medical advice.
 - Take extra precautions to keep a leaking battery away from fire as there is a danger of ignition or explosion.

Hearing Aid Compatibility (HAC) for Wireless Telecommunication Devices

This phone has a HAC rating of M4/T4.

What is hearing aid compatibility?

The Federal Communications Commission has implemented rules and a rating system designed to enable people who wear hearing aids to more effectively use these wireless telecommunications devices. The standard for compatibility of digital wireless phones with hearing aids is set forth in American National Standard Institute (ANSI) standard C63.19.

There are two sets of ANSI standards with ratings from one to four (four being the best rating): an “M” rating for reduced interference making it easier to hear conversations on the phone when using the hearing aid microphone, and a “T” rating that enables the phone to be used with hearing aids operating in the telecoil mode thus reducing unwanted background noise.

How will I know which wireless phones are hearing aid compatible?

The Hearing Aid Compatibility rating is displayed on the wireless phone box. A phone is considered Hearing Aid Compatible for acoustic coupling (microphone mode) if it has an “M3” or “M4” rating. A digital wireless phone is considered Hearing Aid Compatible for inductive coupling (telecoil mode) if it has a “T3” or “T4” rating.

The information provided in this user manual is subject to change without notice and BLU Products reserves the right to modify the manual at any given time. BLU Products has made every effort to ensure that this user manual is accurate and disclaims responsibility and liability for any inaccuracies or omissions. BLU Products makes no commitment to keep current the user manuals, however, does reserve the right to make improvements to the user manual at any given time without notice.