



## SBT598 CQL1670-C Bluetooth Speaker with Wireless Charging Instruction Manual (Read before proceeding)

### Power:

- Please charge your Bluetooth speaker fully before its first use.  
To charge the battery:
- Using a Micro USB Charging Cable (included), insert the USB power cable into the micro USB port located at the back of the speaker. Connect the other end of the USB cord into a powered USB source such as a computer, laptop or USB AC adapter.
- When your Bluetooth speaker is charging, the red indicator lights at the back of the unit turns solid red. Once your Bluetooth speaker is fully charged, this red light will turn off.

### Playing Music via Bluetooth

- Turn your Bluetooth speaker on by sliding the power switch located **at the back** of the speaker to **middle or "ON" position**. The Bluetooth indicator light starts flashing blue quickly.
- Make sure the Bluetooth function on your device is turned on.
- Search the speaker named, "SBT598".
- Once you have selected the speaker, your device will pair without a password. (If your device prompts for a password, enter the password "0000".)
- Once your speaker is paired, the blue indicator light will begin to flash slowly.
- Start playing music on your device. Make sure that you keep your device within a 33 feet range of your Bluetooth speaker.
- Adjust the volume of your device to a comfortable level.
- Turn off the unit when not in use.

Note: The Bluetooth indicator light in the back will turn off automatically if the Bluetooth is not paired to device for 5 MINS. To use the Bluetooth function again, please turn Off and On the switch again.

### Wireless Charging Function:

#### Connect the unit with a 5V 2A adaptor and USB cable.

Put your phone on the wireless charging pad on the top of speaker. Your phone will show the charging icon if it is charged successfully.

### Caution:

- This is not a toy. Please keep away from children.
- Please keep away from water / heat.
- Low power may cause poor connection even no working of Bluetooth.
- Do not overcharge the battery.
- Battery pack shall not be exposed to excessive heat such as sunshine, fire or the like.

**FCC Statement:**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.