
Tronsmart

T7 Lite Portable Outdoor Speaker

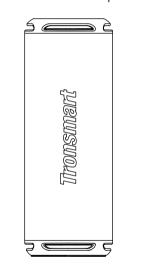

USER MANUAL


Thank you for purchasing the Tronsmart T7 Lite Portable Outdoor Speaker, Please read the user manual before use and keep it handy for future reference. If you have any additional questions or comments. please contact us by email at: support@tronsmart.com

Package Contents

- 1 x T7 Lite Portable Outdoor Speaker
- 1 x Type-C Charging Cable 1 x Warranty Card
- 1 x User Manua
- 1 x SoundPulse® Card 1 x Lanyard

Button Configuration

- 1) Power On/Power Off/Charging Indicator
- ② Bluetooth
- ③ Volume +/Next Track 4 Play/Pause
- (5) Volume -/Previous Track @ SoundPulse EO Button
- 7 TF Card Slot
- ® Type-C Charging Port

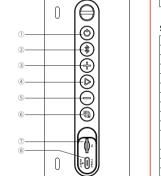

Press for 2s to turn on Press for 2s to turn off Press once to switch lighting modes Double Press to turn off lighting effect Press once to disconnect from device Press for 3s to enter stereo pairing mode Press once to exit stereo pairing mode Press for 8s to reset Press once to turn up volume Press for 2s to skip to next track Press once to play/pause music Press once to answer/end a call Press for 2s to reject a call Double Press to activate voice assistant Press once to turn down volume Press for 2s to skip to previous track Press to enter/exit SoundPulse EO mode Press once to switch playing modes between Bluetooth & TF Card

Specifications

peemeations	
Model	T7 Lite
Bluetooth Version	5.3
Bluetooth Profile	A2DP/AVRCP/HFP/HSP
Audio Codec	SBC
B l uetooth Range	Up to 15m/49ft (open area)
IP Rating	IPX7
Output Power	24W
Input Power	5V/2A, via Type-C port
Frequency Range	60Hz – 20kHz
Battery	3.7V/4000mAh
Playtime(Varied by Volume	LED Off: Up to 24 Hours(On a 50% Volum
Level & Audio Content)	LEB On. Op to 24 Hours(On a 30 % Volum
Charging Time	4 Hours
Frequency Band	2402-2480MHz
Maximum Transmit Power	4dBm

How to Use 1. Turn On/Off



n	White Indicator On
ff	White Indicator Off

2. Bluetooth Connection

Search & click 'Tronsmart T7 Lite' to connect.



Pairing	Bluetooth Indicator Flashes
Connected	Bluetooth Indicator on

 
3. Disconnect from Bluetooth

Quickly connect to another device, you could press the 'Bluetooth' button once to disconnect from Bluetooth.




4. Enter/Exit Stereo Pairing Mode

Connect 2 Tronsmart T7 Lite speakers to enjoy powerful stereo sound. 1) Turn on both speakers. Please make sure either speaker has entered pairing mode.



 2) Press the 'Bluetooth' Button for 3s of either speaker(Host Speaker) to enter stereo pairing mode, the Bluetooth indicator of the host speaker flashes quickly while the vice one stays on (Press once to exit)



nost speaker	Bluetooth Indicator hasnes quickly	١ ١	_
Vice Speaker	Bluetooth Indicator on		Cł
			Cl

3) If paired successfully, the power indicator of host speaker will stay on while vice one will off.

Host Speaker	Power Indicator on	
Vice Speaker	Power Indicator off	

4) Search & dick 'Tronsmart T7 Lite' to connect.




Speaker	Power Indicator stays white
peaker	Power Indicator off

5. TF/Micro SD Card Slot Mode

The speaker will play the music from your TF/Micro SD card when plugging the card into the slot.

 6. Indicators



Charging Indicator Flashes red	Battery Low
Charging Indicator Stays Red	Charging
Charging Indicator Off	Fu ll y-charged

Press 'Bluetooth' button for 8s.



8. Auto Power Off

The speaker will power off automatically after 30 minutes if it does not pair with any device through Bluetooth. When in low battery, the speaker will power off automatically as well.

9. Dual Audio Modes

1) Search & click 'Tronsmart T7 Lite' to connect with device A.

- 2) Disconnect 'Tronsmart T7 Lite' from the device A(Note that do not clear the pairing record on the device).
- 3) Tronsmart T7 Lite will re-enter pairing mode.
- 4) Search & click 'Tronsmart T7 Lite' to connect with the device B. 5) Click 'Tronsmart T7 Lite' on device A to connect.



Tronsmart App

Download 'Tronsmart App' via Google Play or App Store.





How to Connect Tronsmart App?

- 1. Turn on Bluetooth setting on your device, search & click 'Tronsmart T7 2. Open 'Tronsmart' App & allow to access Bluetooth on your device.
- 3. Slide to find out 'T7 Lite', click to connect.
- 4. If connected successfully, you could customize Equalizers, lights, etc.

Care & Maintenance

Do not use any form of detergents or cleaning material to clean the product as any type of chemical may make this device unusable. Do not disassemble this product. It contains no user serviceable parts. Do not drop or jump on it and treat it with care for the best performance. Keep the product in a dry location. Dust, dirt & moisture from humidity can accumulate on the body of the product if kept at an unfriendly place. Do not dispose this product in fire or batteries may explode or leak.

Warranty Information

Your 'Tronsmart T7 Lite Portable Outdoor Speaker', is warranted to the original owner for 12 months from the date of purchase against defects in material and workmanship under normal use and service. Tronsmart is not responsible for the accidental use of this product and its liability will not exceed the purchase price of the product. If you have any problems while using the product, please do not hesitate to contact our customer support team at support@tronsmart.com.

FCC Warning Statement Changes or modifications not expressly approved by the party responsible

for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

frequency energy and, if not installed and used in accordance with the

instructions, may cause harmful interference to radio communications.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement.

Tronsmart

SHENZHEN GEEKBUY E-COMMERCE CO., LTD.

Warehouse 101H, No. 49 Wuhe Avenue, Wuhe Community, Bantian Street, Longgang District, Shenzhen, China Email: support@tronsmart.com 800-270-1082 (USA & Canada) +86-755-23603740 (Global)









