# The Documentation List for Deer Scale(DDS-330) FCC test

1.	客户服务甲请表2 pages
2.	Product specification4 pages
3.	Schematic diagram2 pages
4.	Deer scale weight feature block1 page
5.	Deer scale receiver feature block1 page
6.	Definition of pulses1 page
~	MSI letter head1 page




Page 1 of 4

## CONFIDENTIAL

## JingLiang Electronics (ShenZhen) Co., Ltd.

Product Specification for Electronic Scale Model Name: DDS-330 Deer scale (Kg/Lb)

Documents No.: 637

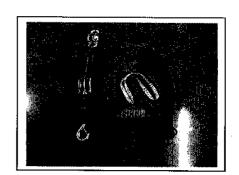

**DOCUMENT No.: 637** 

**REVISION: 1** 

EFFECTIVE DATE: Nov.15.2004 REVISION DATE: April 25, 2005

Product Description: DDS-330 Deer Scale (Kg/Lb)

Prepared By: Michael Ma	Checked By:	Approved By:

Rev.	ECN#	Description	Ву	Date	
				<u>.</u> .	
L					

DISTRIBUTION:ENGG(C), RDL, RDL/QA



Page 2 of 4

### CONFIDENTIAL

## JingLiang Electronics (ShenZhen) Co. ,Ltd.

Product Specification for Electronic Scale

Model Name: DDS-330 Deer scale (Kg/Lb)

Documents No.: 637

#### 1.0 UNIT DESCRIPTION

#### 1.1 General Description:

This is an electronic scale specially designed for weighing deer, with remote LCD digital readout.

1.2 Operating Conditions:

#### Conduct all measurements with charged battery.

1.3.1 Temperature operating range:  $25^{\circ}C \pm 14^{\circ}C$ 

1.3.2 Humidity operating range: 20% to 95%

1.3.3 Storage temperature: -10°C +60°C

#### 1.3 Net Weight:

scale unit: 1.2Kg

display unit: 0.163 kg.

Individual pulley: 0.347 kg

· Cinch gambrel: 0.195 kg

#### 1.4 Size:

• scale unit: 241 mm x 82 mm x 50mm

display unit: 137.6 mm x 69 mm x 26.5 mm

• individual pulley: 130 mm x 47 mm x 40 mm

gambrel: 1.6 inch, cinch: 2.1 inch

black rope: 31.5 inch

#### 1.5 Features:

#### **Technical Parameters:**

Capacity: 0 to 150Kg / 0 to 330Lb

Operation Range: 5 to 150Kg / 10 to 330Lb

• Resolution:

Weight: 0.1Kg / 0.2Lb

Accuracy:

Weight: ±(1% + 0.1kg / 0.2lb)

• Display: 1.26"digit LCD display

• Sensitivity/Memory: ± 1 Lb /0.5Kg

· Repeatability:

Weight: ±0.3Kg / ± 0.6Lb on two successive readings.

· Power requirement:

3pcs AAA replaceable batteries for base scale.
3pcs AAA replaceable batteries for remote unit.

· Battery life:

Base: 5 minutes per day for one year.

Remote: 5 minutes per day for 1.5 years.

· Low Battery Warning:

Base: "L" shows at 3.5 Volts or below.

Remote: "Lo" shows at 3.5 Volts or below.

ESD: contact discharge at ±4Kv and air discharge at ±8Kv.

RESTRICTED CONFIDENTIAL DOCUMENT, THIS DRAWING, PRODUCT SPECIFICATION, AND ALL INFORMATION SHOWN HEREIN ARE THE EXCLUSIVE PROPERTY OF JINGLIANG ELECTRONICS PRODUCTS AND ARE SUBMITTED ONLY ON A CONFIDENTIAL BASIS. THE RECIPIENT AGREES NOT TO REPRODUCE THE DRAWING, TO RETURN UPON REQUEST, AND THAT NO DISCLOSURE OF THE DRAWING, PRODUCT SPECIFICATION, OR THE INFORMATION SHOWN HEREIN WILL BE MADE TO A THIRD PARTY WITHOUT THE PRIOR WRITTEN CONSENT OF JINGLIANG ELECTRONICS PRODUCTS



Page 3 of 4

CONFIDENTIAL

JingLiang Electronics (ShenZhen) Co., Ltd.

Product Specification for Electronic Scale Model Name: DDS-330 Deer scale (Kg/Lb)

Documents No.: 637

#### **Related Functions:**

· Automatic Zero Tare: Y

• Auto Shut Off: N

· Convertible Control: Y

• Weighing mechanism: AL beam

• Overload Indication: Err

#### 2 Cosmetic Requirements:

Part Name	Material	Color	Texture	Remark
Base top cover	ABS	black	TBD	
Base bottom cover	ABS	black	TBD	
Base battery door	ABS	black	TBD	
Remote top cover	ABS	black	TBD	
Remote bottom cover	ABS	black	TBD	
Remote battery door	ABS	black	TBD	-
Lens	PMMA	Clear	TBD	
LCD		1.26" black digit, white background		

#### 3. Scale Performance:

Deer scale has 2 separate units, the scale unit and the display unit. Before use, the scale unit must be installed properly.

Keys on Transmitter/Scale Unit: slide switch for on/off, reset button Keys on Receiver/Display Unit: Kg/Lb/Code switch, Lock/Unlock key, on/off/tare key

The maximum distance between the scale unit and the display unit is 20 meters in an open area. Obstacles such as walls and buildings etc. will minimize the transmission and receiving distance.

## Code Recognition (code recognition is done in factory, you need to do this only when you have a mismatched set)

- With batteries installed in the display unit and scale unit, set slide switch at "code" position, press on/off/tare button.
- "CODE" starts flashing. Press reset button in the scale unit. 2 units start to communicate.



"CODE" becomes stable and then "End" shows to indicate code has successfully recognized.



 Both units will turn off once the code recognition is completed. Repeat from the beginning of code recognition has failed

RESTRICTED CONFIDENTIAL DOCUMENT, THIS DRAWING, PRODUCT SPECIFICATION, AND ALL INFORMATION SHOWN HEREIN ARE THE EXCLUSIVE PROPERTY OF JINGLIANG ELECTRONICS PRODUCTS AND ARE SUBMITTED ONLY ON A CONFIDENTIAL BASIS. THE RECIPIENT AGREES NOT TO REPRODUCE THE DRAWING, TO RETURN UPON REQUEST, AND THAT NO DISCLOSURE OF THE DRAWING, PRODUCT SPECIFICATION, OR THE INFORMATION SHOWN HEREIN WILL BE MADE TO A THIRD PARTY WITHOUT THE PRIOR WRITTEN CONSENT OF JINGLIANG ELECTRONICS PRODUCTS

MSI Sensors (ASIA) Ltd.



Page 4 of 4

## CONFIDENTIAL

## JingLiang Electronics (ShenZhen) Co., Ltd.

Product Specification for Electronic Scale

Model Name: DDS-330 Deer scale (Kg/Lb)

Documents No.: 637

#### Weighing Operation

- · Choose kg or lb by the setting slide switch in display unit.
- Press ON/OFF/TARE to turn on the display unit and set the slide switch at ON position to turn on the scale unit.
- LED in scale unit light turns on. The display unit starts to receive signals from the scale unit and "888.8" blinks until signals are received..





Wait until "00.0" shows on the display, then hang the deer on the scale hook



OR



 Display receives the weight and displays it on the screen. Reading will be updated if the weight has been changed.



ΛÞ



Press LOCK to lock the weight if there is no change of weight or



OR



Press ON/OFF/TARE to tare or remove the weight and weigh another load when "00.0" appears.



OR



- To conduct another weighing operation after the weight is locked, simply press LOCK again to unlock and start to weigh.
- To shut down both units, press ON/OFF/TARE and hold it for about 3 seconds and set the slide switch in scale unit at OFF position.

Note: "Err" will show if scale is overloaded, scale resumes to work normal once the load is reduced to operation range.



NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV
INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS
EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY
TO OPERATE THE EQUIPMENT