



**Notice:**

Please read user manual carefully and keep it for your records.

**Package Includes:**

- 1 - Wireless speaker
- 1 - Type-C USB charge cable
- 1 - User manual

**Safety Instructions:**

- Never disassemble the Bluetooth Speaker in an attempt to make any repairs as this could result in electrical shock, burns or product failure;
- Use extra caution in high temperatures;
- DO not use product in a hospital or on an airplane;
- Do not expose the device to direct sunlight, heat or flame;
- Product is not covered under warranty when it has completely or partially rusted;
- Damage, shock, and/or injury can occur if these warnings are not heeded;
- Device may become warm while charging;
- Make sure you always turn the product off and the power outlet off completely before unplugging the product;

- Make sure the product has plenty of ventilation;
- Do not press the buttons too hard as it could damage the product;
- Only use dry cloth to keep product clean from dust;
- Do not use chemicals on this product;
- Never try to repair this product yourself, take it to a certified technician. Trying to remove panels or repairing the unit yourself could lead to electric shock. When the unit is not in use, make sure it is correctly turned off and stored in a cool dry place;
- Do not insert foreign objects into the product;
- Avoid dropping the product, as harsh impacts could damage the product.

**Charging:**

- Connect the small end of the Type-C USB charging cable (included) to the Type-C USB port located on the back of the speaker. Connect the larger end of the cable to your computer's USB port or an AC adaptor (not included);
- The LED indicator will turn red while charging.


**Pairing:**

1. Place speaker within 30 feet of the Bluetooth enabled device.
2. Press the **ON/OFF** button.

3. On your Bluetooth enabled smartphone, tablet or media player, navigate to the Bluetooth setting menu, turn on the Bluetooth feature, and search for new devices;

4. Search for **"BY-BS-167"** on the pairing device. Type Password "0000" or "1234" if requested;

5. Tap this model to select it and successfully pair it with the speaker. The blue LED will flash slowly when the pairing is successful. You are now paired, connected and ready to play music.

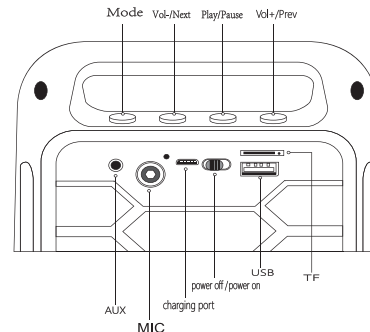

**TWS function:**

When 2 KaraokeGlow speakers are powered on, and the blue lights are flashing, double click "play/pause" button on either of 2 speakers until you hear a prompt "ding", and the blue lights stop flashing - the 2 speakers are connected to each other.

**Light flashing mode:**

Long press "Mode" button for 3-4 seconds

**SPECIFICATIONS:**

- With FM, Bluetooth®, AUX, USB/TF card, TWS function
- Input: 5V
- Battery Capacity: 1200 mAh
- Sound output: 5W
- Charge time: up to 3 hours
- Play time: up to 3 hours
- Operating range: 33 feet (10m)
- Battery: 3.7V Built-in Li-ion
- Frequency Response: 100Hz-20KHz
- Compatible with most Bluetooth® enabled tablets and smartphones

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**FCC Radiation Exposure Statement:**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the equipment.

Bytech NY INC. warrants this product to be free from defects in materials and workmanship to the original purchaser for a period of 12 months from the original purchase date. Bytech's responsibility with regard to this limited warranty shall be limited solely to repair or replacement as its option, of any product which fails during normal consumer use. This warranty does not extend to damage or failure which results from misuse, neglect, accident, alteration, abuse, improper installation or maintenance. At any time during the 12 month period following the purchase, the product fails due to defects in material or workmanship, return the defective product (with freight prepaid) with proof of purchase. Please include \$5.00 for return shipping and handling.

WWW.BYTECHINTL.COM

Bytech NY Inc.  
2585 West 13 street  
Brooklyn NY 11223  
(718) 449-3700

©2021 BYTECH NY INC.

\*All trademarks and copyrights are the property of the respective com