

SCOSCHE®

NRF

WIRELESS RF REMOTE KIT FOR iPod NANO

Congratulations on your choice of a SCOSCHE wireless RF iPod Nano remote control home kit! This system provides you with maximum control of your iPod Nano in or out of your car or home from over 150 feet away.

PARTS LIST

- 7 Button RF Remote
- RF Receiver (Designed for iPod Nano)
- Universal 3.5MM Headphone to RCA Audio Cable

RF RECEIVER SETUP

iPod® RF Receiver Set-up: (FIG. 1)

Open the cover of the Nano receiver and slide the Nano into the bottom dock connector. (See Fig. 1) A self diagnostic will automatically be run and your wireless remote will be ready for operation within 30 seconds. Plug in the Male end of the 3.5mm-to-RCA cable for vehicle use, or your personal Ear Buds for portable use. (See Fig. 1)

Advanced Low Power Mode:

Your Scosche iPod RF receiver uses an advanced power down mode which minimizes current draw on your iPod battery if you are not connected to a constant power source. After 20 minutes of sensing no music playing or no remote commands, the unit will go into an advanced battery save mode. The receiver will automatically repower itself when it detects music playing, (If there was none before) or it sees a remote button being pressed for more than 0.6 seconds.

Slim RF Remote:

Your Scosche slim NRF Kit has a built-in holder for the slim RF remote control on the back of the case. Simply unsnap the remote control from the holder and replace for storage as needed. (See Fig. 2)

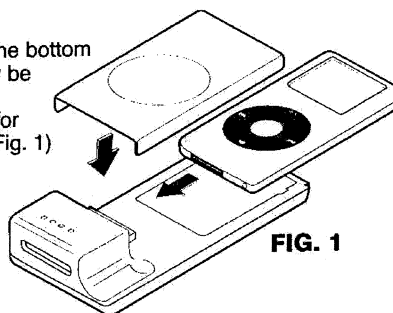


FIG. 1

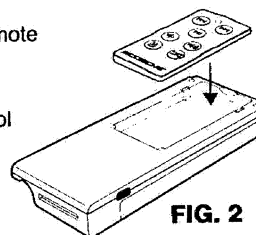


FIG. 2

7 BUTTON RF REMOTE CONTROL

Track Back:


Press and release this button to move track BACKWARDS. Press and HOLD this button to rewind through the track.

Volume Down:

Press and HOLD this reduce the volume.

Play List Song Select:

First press the play list button, then within 5 seconds press either Track Forward or the Track Back button to select a song from your play list.

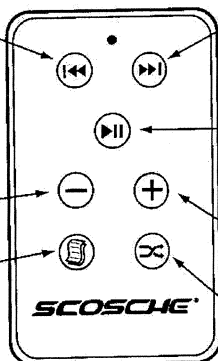

Track Forward:

Press and release this button to move track FORWARD. Press and HOLD this button to forward through the track.

Pause/Play/Sleep:

Press and release to toggle between Pause and Play. Press and HOLD for 2 full seconds to put the iPod into sleep mode. If you press and hold this button for longer than 1 second but less than 2 seconds the receiver will ignore your request.

Volume Up:

Press and HOLD this button to increase the volume.

Shuffle Play:

Press this button to randomly play the songs on your iPod.

iPod is a registered trademark of Apple Computer, Inc. All rights reserved.

This device complies with FCC Rules Part 15. Operation is subject to the following two conditions: 1) This device may not cause interference, and (2) this device must accept any interference that may be received, including interference that may cause undesired operation. The manufacturer is not responsible for any radio or TV interference caused by unauthorized modification to this equipment. Such modification could void the user's authority to operate the equipment.

If you have any further questions, call our toll free technical help line at: **1-800-621-3695x3**

© 2006 SCOSCHE INDUSTRIES, INC.

SI (300NRF 01/06)