


Pantone Black C

Cut Line

wireless charging pad front back charge stand

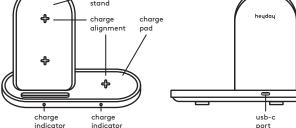

quick tips

5.8 in

- Alignment matters centering the device on the plus icons on the charging surface ensures the fastest and most efficient charge
- Thick phone cases as well as some materials can interfere with the ability to charge • This is a high speed wireless charger, make the most of the charger by using the USB-C cable and power delivery wall plug that were packaged with it; using a different power source may charge your device at a slower speed

included

- Wireless charger
- USB-C to USB-C charging cable
- Power delivery wall plug

indicators

- Both charging indicators have the following light functions:
- Solid Red Charging your device
- Solid White Fully charged
- * Flashing Red Foreign object detection, pieces of metal or other materials may cause overheating and damage your charger, phone, or earbud case; remove them immediately

charaina

- Place the charger on a sturdy flat surface
- Plug the wall plug into an outlet and the USB-C cable into the wall plug and charger • If you need to use a different power source make sure it is a USB power supply of
- DC 9V 3A minimum warning: please use UL compliant power supply
- Place your QI-enabled device onto the wireless charger and align the device with the center of the charging surface or the device will not charge
- Remove credit cards or any card with a magnetic strip to prevent damage
- to the cards before charging
- The charging stand allows for wireless charging up to 15W, use this area for items that can draw more than 5W
- Remove the phone from the charging stand before changing the orientation of the phone • Charge time will vary by device



4 in

safety

- Remove credit cards and other cards with magnetic strips to prevent damage to the cards
- Keep the charger away from heat and direct sunlight
- Do not modify or repair this device
- Do not use in high temperatures or extreme weather
- Do not use chemical detergents to clean your device, use a soft dry cloth
- Immediately unplug it from its power source if it gets wet
- heyday
- FCC ID: 2A023-QIC344 Model: QIC344 Input: 9V = 3A, 12V = 2.5A charging stand ouput: 15W Max output (wireless pad): 5W Max Made in Vietnam
- now in version This device compared in the Art 15 of the FCC rules. Operation is subject to the following two conditions: If this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.
- Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- NOTE: This equipment has been tested and found to comply with the limits for a Class B diaital device, pursuant to Part 15 of the FCC Note: This sequences in a dear takes and hence so the privation multiply with the multiply dearby and the sequences in a residential interface of the second second
- However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Revinet or relocate the receiving antenna.
 Increase the separation between the equipment and receiver.
 Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
 Consult the dealer or an experienced radio/TV technician for help.
- This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter
- Target Corp. Mpls. MN, 55403 Phone: 612-304-6073

front