

CAUTION- ELECTRIC TOY

Not recommended for children under 6 years of age. As with all electric products, precautions should be observed during handling and use to prevent electric shock. Input: 120VAC, 60HZ 5.5W Only. Output: 12VDC, 0.2A

ATTENTION PARENTS:
IT IS RECOMMENDED THAT THIS TOY AND ALL ACCESSORIES BE PERIODICALLY EXAMINED FOR POTENTIAL HAZARDS AND THAT ANY POTENTIALLY HAZARDOUS PARTS BE REPAIRED OR REPLACED.



Item #95683/96043

Fast Lane is a mark of Geoffrey, Inc.
©1999 Geoffrey, Inc.
Distributed by Toys"R"Us
Wayne, NJ 07470
Made in China
O.I. NO. 2740

www.toysrus.com

OPERATING INSTRUCTIONS:


BATTERY PACK CARE / CAUTIONS:

1. If battery pack and/or connectors are wet, thoroughly dry before charging.
2. Unplug the battery pack if it is not going to be used for several days.
3. Do not charge battery pack that is hot, wet or shows signs of leakage or corrosion.
4. Do not expose to fire, as explosion may result.
5. Do not disassemble the battery pack.

BATTERY INSTALLATION:

THE RECHARGEABLE NI-CD BATTERY PACK IS NOT CHARGED. PLEASE CHARGE IT FOR 4 HOURS PRIOR TO USE.

1. Plug the wall pack battery charger into wall outlet.
2. Connect the battery pack and charger cables by snapping together the jack and the socket tightly. (See Diagram 1)
3. After charging for 4 hours, the battery pack will be warm. This condition is normal for fully charged batteries. If the speed of the car slows down suddenly, it is time to recharge.
4. To disconnect cables, press down on the clip and pull apart. (See Diagram 1)
5. After use, the battery pack will be hot! Wait at least 20 minutes until it cools before recharging.
6. Recharging a warm or hot battery pack will greatly shorten battery life.

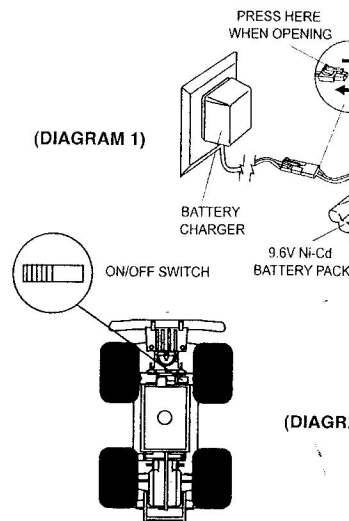


VEHICLE:


- A. Make sure the ON/OFF switch is in "OFF" position. (See Diagram 2)
- B. Turn the lid stopper in a clockwise direction to open battery lid. (See Diagram 3)
- C. Lift the battery lid to open and place the battery pack inside properly. (See Diagram 4)
- D. Plug the jack of the battery pack into the socket of the battery compartment. (See Diagram 3)
- E. Push the battery lid to close.

TRANSMITTER:

- A. Slide open the battery cover at the back of transmitter and place a 9V battery inside following the engraved (+) and (-) signs. (See Diagram 4)
- B. Replace the battery cover.

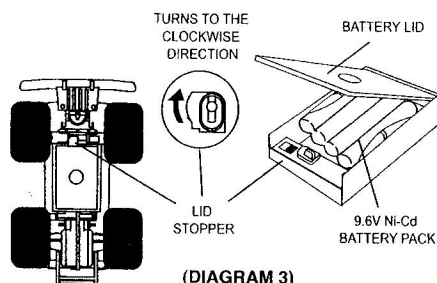


(DIAGRAM 3)

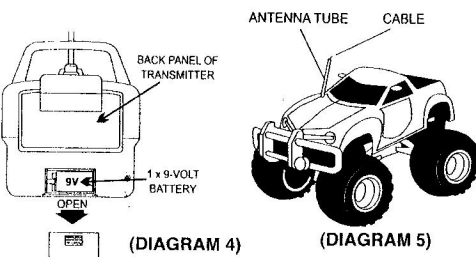

(DIAGRAM 4)

(DIAGRAM 5)

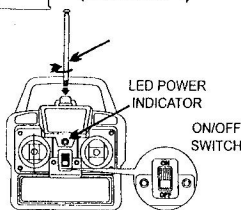

(DIAGRAM 6)

VEHICLE OPERATION:


- A. Pass the cable through the antenna tube provided and plug into the vehicle tightly. (See Diagram 5)
- B. Screw the antenna onto the top of the transmitter and extend to full length. (See Diagram 6)
- C. Push the ON/OFF switch to the "ON" position. (See Diagram 2)

DRIVING FORWARD:


- D. Push the Driving Control Stick forward (away from you). (See Diagram 7)

DRIVING IN REVERSE:


- E. Pull the Driving Control Stick back (towards you). (See Diagram 8)

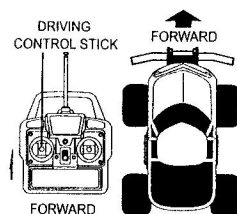


(DIAGRAM 7)

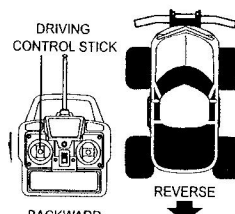


(DIAGRAM 8)

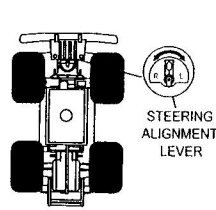


(DIAGRAM 9)

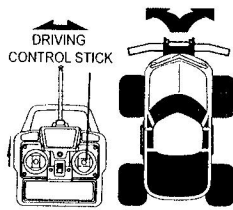

(DIAGRAM 10)

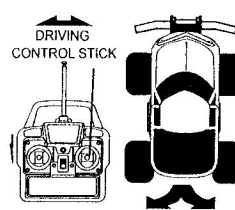

(DIAGRAM 11)

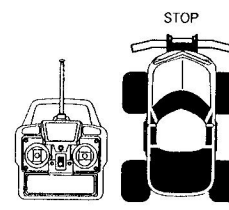

(DIAGRAM 12)

FRONT WHEELS STEERING ADJUSTMENT:

- F. If the vehicle does not run straight forward, adjust the lever for satisfactory alignment on the underside of the vehicle. (See Diagram 9)
- G. If the vehicle runs toward left, turn "Steering Alignment Lever" towards "R."
- H. If the vehicle runs toward right, turn "Steering Alignment Lever" towards "L."

STEERING OPERATION:

- I. To make left or right-hand turns while driving forward, turn the Steering Control Stick to left or right while pushing the Driving Stick forward at the same time. (See Diagram 10)
- J. To turn left or right while driving reverse, turn the Steering Control Stick to left or right while pulling the Driving Stick backward at the same time. (See Diagram 11)

STOP OPERATION:

- K. To stop, release both Control Sticks. (See Diagram 12.)

PERFORMANCE TIPS

- Do not drive car on grass, sand or c.
- Do not drive car through water.
- Be sure to rest your vehicle for at least 30 minutes after every 15 minutes of operation.
- Make sure ON/OFF switch on your vehicle is in the "OFF" position when it is not in use.
- Do not bend the antenna.
- Electrical, CB interference, mobile phone, air conditioning, elevators and steel structures in buildings will affect the operation of your vehicle.
- Do not leave the vehicle or transmitter in sources of heat or in direct sunlight for long periods of time.
- Remove the batteries from the vehicle and transmitter when they are not in use.



CHEVROLET, SSR, EMBLEMS AND VEHICLE BODY DESIGNS ARE GENERAL MOTOR TRADEMARKS USED UNDER LICENSE TO SCIENTIFIC TOYS, LTD.

FCC NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

CAUTION: ELECTRIC TOY

Not recommended for children under 6 years of age. As with all electric products, precautions should be observed during handling and use to prevent electric shock.

INPUT: 120VAC-60Hz-5.5W ONLY
OUTPUT: 12VDC-0.2A

www.loysrus.com