

| | | | | |
|--|--|--|---|--|
| <div><div>US UK</div><div>Dear user</div><div>Thank you for choosing REDRAGON product. To protect your rights and for better customer service, please read the following warranty rules carefully.</div><div>1. Within 18 months of purchase date, repair is guaranteed for failure due to electrical circuit problems. Other damages, such as disassembly, hard impacts, submersion into water, plugging into improper current or voltage, and damage caused by natural disasters such as fire, flood, or earthquake are not included.</div><div>2. Consumable parts (such as foot pads) and spare parts replacement are not included in our warranty.</div></div> <div>1</div> | <div><div>Product installation and functions</div><div>I. Scheme of the product: Bluetooth+2.4G+wired</div><div>II. OS supported: Win/Mac</div><div>III. Wired/2.4G/Bluetooth switching:</div><div>Switch through the left switch on the keyboard. OFF is wired mode (battery indicator light: green), BT is Bluetooth mode (M indicator light: blue/cyan/pink), 2.4G is wireless mode (M indicator light: yellow).</div><div>IV. Bluetooth/2.4G pairing mode.</div><div>1. Bluetooth: Hold FN+[1]/[2 @]/[3 #] for 3 seconds to enter the corresponding channel pairing mode of Bluetooth. The corresponding blue/cyan/pink colors of the M indicator light will flash, promoting to enter the pairing status. After the pairing is successful, the indicator light will be normally on.</div><div>2. 2.4G: Hold FN+[4 \$] for 3 seconds to enter 2.4G pairing mode. The M indicator light will flash yellow. Then connect the receiver to the computer. After the pairing is successful, the M indicator light will be normally on in yellow.</div><div>V. Selection of BT/2.4G mode status:</div><div>Press FN+[1]/[2 @]/[3 #]/[4 \$] to switch between BT1/BT2/BT3/2.4G status of the keyboard.</div><div>VI. Locking of WIN key</div><div>Hold FN+WIN key to lock the WIN key function and repeat to unlock it.</div><div>VII. Backlight adjustment</div><div>FN+INS: Switch backlight patterns</div><div>FN+ENTER: Switch the backlight colors</div></div> <div>2</div> | <div><div>VIII. Adjusting of backlight brightness</div><div>Hold FN + directional keys "↑" and "↓" to adjust the backlight brightness. When adjusting to the limit, indicator light A will flash 3 times and 5 levels can be adjusted.</div><div>IX. Backlight flowing speed adjustment</div><div>Hold FN + directional keys "←" and "→" to adjust the backlight flowing speed. When adjusting to the limit, indicator light A will flash three times and 5 levels can be adjusted.</div><div>X. Light recording</div><div>Hold FN + Backspace key to enter the light customization mode. The default values are ESC, A, S, D, W, and the ↑, ↓, ←, and → keys light up. Hold the FN + Backspace key again to enter the recording mode. Indicator light A continues to flash (recording ends and goes off). Press the same key continuously until the specified color is reached, and then continue to set other keys and form the desired backlight pattern. After completing the setting, hold FN + Backspace key to save it. When playing a light macro, hold FN + Backspace key, and the defined key light will be normally on for indication (the FN key cannot customize the light).</div><div>XI. Backlight on/off</div><div>FN+SPACE: Turn on/off keyboard backlight.</div><div>XII. MAC/WIN functional key switching:</div><div>It is WIN system by default. Hold the FN+A key once to switch to MAC system. The red light below this key will flash 3 times, and hold FN+W to switch to WIN, and the red light below this key will flash 3 times.</div><div>Multimedia functions in Windows system are as follows:</div><div>FN+F1: Decrease screen brightness(WIN8 or above)</div><div>FN+F2: Increase screen brightness(WIN8 or above)</div></div> <div>3</div> | <div><div>FN+F3: Display multi-task window(ALT+tab)</div><div>FN+F4: Voice(Win + h) (supported by win10 or above)</div><div>FN+F5: Display desktop(Win + D)</div><div>FN+F6: Search</div><div>FN+F7: Previous title</div><div>FN+F8: Play/pause</div><div>FN+F9: Next title</div><div>FN+F10: Mute</div><div>FN+F11: Decrease volume</div><div>FN+F12: Increase volume</div><div>Multimedia functions in MAC system are as follows:</div><div>F1: Decrease screen brightness/FN+F1=F1</div><div>F2: Increase screen brightness/FN+F2=F2</div><div>F3: Display multi-task window(Ctrl+ Direction key upward)/FN+F3=F3</div><div>F4: Siri/FN+F4=F4</div><div>F5: Display desktop (F11)/FN+F5=F5</div><div>F6: Search (Command + Space)/FN+F6=F6</div><div>F7: Previous title/FN+F7=F7</div><div>F8: Play/pause/FN+F8=F8</div><div>F9: Next title/FN+F9=F9</div><div>F10: Mute/FN+F10=F10</div><div>F11: Decrease volume/FN+F11=F11</div><div>F12: Increase volume/FN+F12=F12</div><div>XIII. Functions of FN combination key</div><div>FN+<[>=Home</div><div>FN+<[>=End</div><div>FN+<[>=ScrLK</div></div> <div>4</div> | <div><div>FN+<' ">=PrtSC</div><div>FN+</ ?>=Pause</div><div>XIV. Knob function</div><div>Its function is to adjust volume by default. Volume is increased by turning the knob clockwise and decreased counterclockwise. Press the knob is to mute, and press again to restore the original volume. Hold the knob for 3 seconds, the keyboard light will flash twice, and the knob function will switch to adjust keyboard backlight brightness. Backlight brightness will be increased by adjusting clockwise and increased counterclockwise. When adjusted to the limit, indicator light A will flash 3 times. Press the knob to cycle through the light effects: going with the tide, following as the shadow, sine light wave, spinning the windmill, colorful waterfall, blooming flowers and wealth, normal lighting mode, breathing mode, dreamy rainbow, ready to start at a touch, strolling in the rain, button ripple, dotted stars, snow treading without trace, and the endless flowing river. Hold the knob again for 2 seconds, the keyboard light will flash twice, and the knob function will return to volume adjustment.</div><div>XV. Low battery indication</div><div>1. When the battery voltage is lower than 3.3V, the light effect will be disabled, and when there are key actions, the battery indicator will flash slowly in red;</div><div>2. When the battery voltage is equal to or lower than 3.0V, the keyboard function will be disabled.</div><div>XVI. Automatic power saving</div><div>When the keyboard is not operated for 3 minutes, the backlight will be off and it will enter a standby state, and it will enter a hibernation state after it is not operated 30 minutes later.</div></div> <div>5</div> |
|--|--|--|---|--|

| | | | | |
|---|---|--|---|---|
| <div><div>XVII. Charging indication</div><div>If the keyboard is connected to the computer or a charging adapter with a TYPE-C USB cable, it will be in the charging state, and the battery indicator will be normally on in red during charging and in green after the charging is completed.</div><div>XVIII. Battery level indication</div><div>Battery level is indicated with RGB (it flickers in red when the battery level is lower than 20%, flickers in blue when the battery level is lower than 60%, flickers in cyan when the battery level is lower than 80%, and displays in green when battery is full. During charging, the indicator light is normally on in red, and will be in green after the charging is completed).</div><div>XIX. Battery level display function</div><div>Hold FN+ALT key, the entire backlight will be turned off, and 【1!】 - 【0!】 in letter area display battery level. When battery level is low, 【1!】 - 【3#】 keys display red. For battery level of 【3#】 key or above, 【1!】 - 【0!】 keys display green, and release to restore default light effect.</div><div>XX. Device name</div><div>Wired: Gaming Keyboard Bluetooth:BT3.O Keyboard, BT5.O Keyboard</div><div>XXI. Resetting</div><div>Hold FN+ESC 3 seconds to restore to factory setting and clear all the macro settings.</div></div> <div>6</div> | <div><div>FAQ</div><div>1. If the keyboard doesn't respond, please check if the keyboards USB cable is correctly inserted into the corresponding USB port on the computer, or try another USB port on the computer.</div><div>2. If you spill liquid on the keyboard, please unplug the keyboards USB cable from the computer immediately. Wipe off excess liquid and put the keyboard in a dry and ventilated place. Make sure the keyboard is dried naturally before the next use.</div></div> <div>7</div> | <div><div>BATTERY SAFETY GUIDELINES</div><div>DO NOT replace the battery with a different model.</div><div>DO NOT use this product if the battery shows signs of damage including, but not limited to tearing, deformation, leakage, or the smell of electrolytic material.</div><div>DO NOT touch the battery if material is leaking and seek immediate medical attention if any material comes into contact with your skin or eyes.</div><div>DO NOT expose the battery to liquid, heat sources, electricity (outside of the product itself), or other non-standard operating condition.</div><div>DO NOT remove the battery except for proper disposal and recycling as required by local laws and regulations.</div><div>DO NOT impact, bend, alter, dissemble, or otherwise damage the battery as the contents are volatile, hazardous, and can be harmful.</div><div><div><div></div><div>CAUTION:</div></div><div>Failing to follow all safety guidelines may result product damage, explosion, fire, and/or electric shock.</div></div><div><div><div>This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: (1) This device may not cause interference. (2) This device must accept any interference, including interference that may cause undesired operation of the device.</div><div>Cet appareil contient des émetteurs / récepteurs exemptés de licence conformes aux RSS (RSS) d'Innovation, Sciences et Développement économique Canada. Le fonctionnement est soumis aux deux conditions suivantes : (1) Cet appareil ne doit pas causer d'interférences. (2) Cet appareil doit accepter toutes les interférences, y compris celles susceptibles de provoquer un fonctionnement indésirable de l'appareil.</div></div><div>8</div></div></div> | <div><div>FCC Statement</div><div>Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.</div><div>This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:</div><div>-- Reorient or relocate the receiving antenna.</div><div>-- Increase the separation between the equipment and receiver.</div><div>-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.</div><div>-- Consult the dealer or an experienced radio/TV technician for help</div><div>This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</div></div> <div>9</div> | <div><div><div></div><div>REDRAGON</div><div>CYRUS PRO</div><div>REDRAGON WIRELESS 75%</div><div>GASKET MECHANICAL KEYBOARD</div></div><div>Mechanical Gaming Keyboard Operating Instructions</div></div> <div>封面</div> |
|---|---|--|---|---|

| | | | | | | | | |
|----|---------------------|----|---|----|--|----|-----|---|
| 型号 | K681MG-RGB-PRO/7267 | | 备注：尺寸：100x100mm (折页) 材质：80g书写纸 印刷：单黑色双面印刷 | | | | | <div>Eastentimes Tech</div>  |
| 名称 | 说明书 | | | | | | | |
| 日期 | 2024-5-6 | | | | | | | |
| 页码 | 1 OF 1 | | 文件编号 | | | | | |
| 绘图 | 雷国建 | 审核 | 香敏琪 | 核准 | | 版本 | A.1 | |

